

ASSEMBLY INSTRUCTIONS

WOOD-PENDANT

R30254727

Parts Included

 
Mounting Bracket




Mounting Screw



Wire Connector




Outlet Box screw

 

CSA / UL SAFETY REQUIREMENTS

CSA/UL requires that these IMPORTANT SAFETY INSTRUCTION be listed:

 
- ☐ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
- ☐ Consult a qualified electrician if you have any electrical questions or need to replace the driver.



Care Instructions

Arnsberg suggest using only micro fiber cleaning cloth to clean this fixture. If required, a slightly damp cleaning cloth may be used to spot clean. Do not use common household cleaners on this fixture, as the final finish may be damaged as a result. Enjoy your new Arnsberg fixture.

 Mounting Instructions

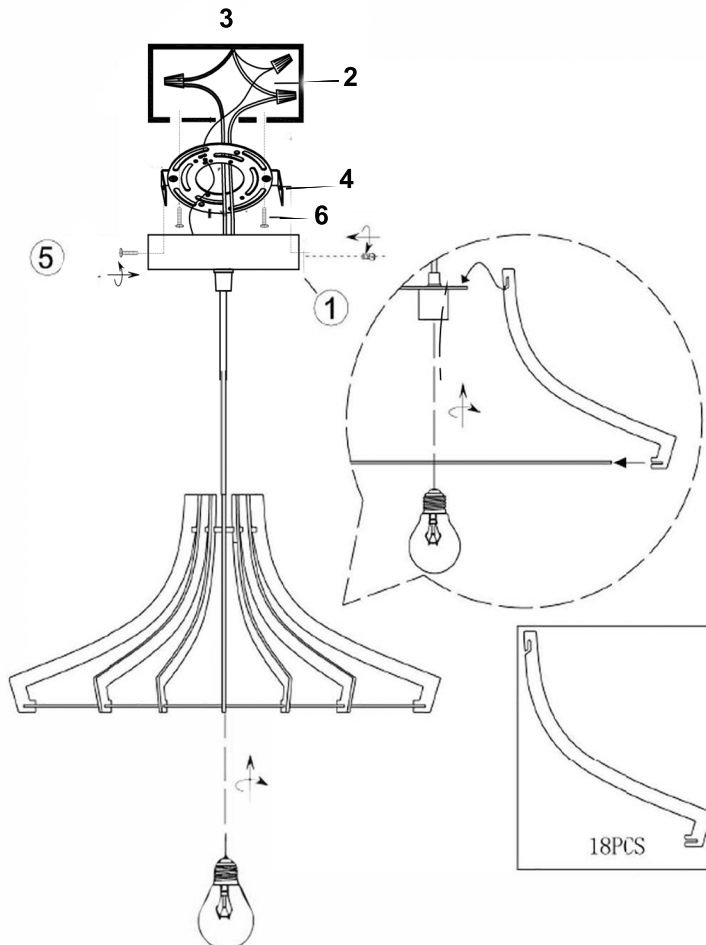

ASSEMBLY INSTRUCTIONS

WOOD

R30254727

Assembly Instructions

1. Turn off the circuit breaker in the electrical panel.
2. Screw the two Outlet Box Screws (#5) into the Mounting Strap (#4). Mount the Mounting Strap (#4) to the Outlet Box (#3).
3. Connect the ground wire from the fixture to the ground wire from the Outlet Box (#3). Connect the white wire from the fixture to the white wire (neutral wire) from the Outlet Box (#3). Connect the black wire from the fixture to the black wire (live wire) from the Outlet Box (#3). Cover the connections using the Wire Connectors (#2). Wrap the wire connections with electrical tape for a more secure connection. Position the wires back inside the Outlet Box (#3). Note: If you have electrical questions, consult your local licensed electrician.
4. Place the Canopy (#1) over the Outlet Box (#3). Screw the Mounting Screws (#6) to secure the Canopy (#1) to the Mounting Strap (#4).
5. To complete the installation, insert each arm into the top portion of the frame ring, then attach the lower portion of the arm to the frame.
6. Installation is complete. Turn on the power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.