

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Thread rod (D) into top threaded opening of part (E).
- 2. Remove finial (A) from rod (B), place lamp shade (not included) over top threaded section of rod (B), and secure with finial (A).
- 3. Insert light bulbs into lamp holders.
- 4. Plug lamp into electrical outlet.
- 5. ADJUSTMENT INSTRUCTIONS:
 - 1. Loosen adjustment key (C) found on lamp stem.
 - 2. Adjust height by pulling or pushing rod (B) up or down to desired height.
 - 3. Tighten adjustment key (C).
- 6. CAUTION:

If the external cable is damaged, it must be replaced by the manufacturer or its service agent or similar qualified person in order to avoid a hazard.

7. DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

RALPH LAUREN