

ASSEMBLY INSTRUCTION

ITEM NO: TDL212134DS

1) Add SHADE (4) to the neck (3).


2) Add finial (5) to shade (4).

*Please note that the switch is on the lamp head and the zipper switch.

CAUTION – Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

WARNING – Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

IMPORTANT SAFETY INSTRUCTIONS This portable lamp has a polarized plug(one blade is wider than the other)as a safety feature to reduce the risk of electric shock.This plug will fit in a polarized outlet only one way.if the plug does not fit fully in the outlet,reverse the plug.If it still does not fit,contact a qualified electrician.Never use with an extensioncord unless plug can be fully inserted.Do not alter the plug.

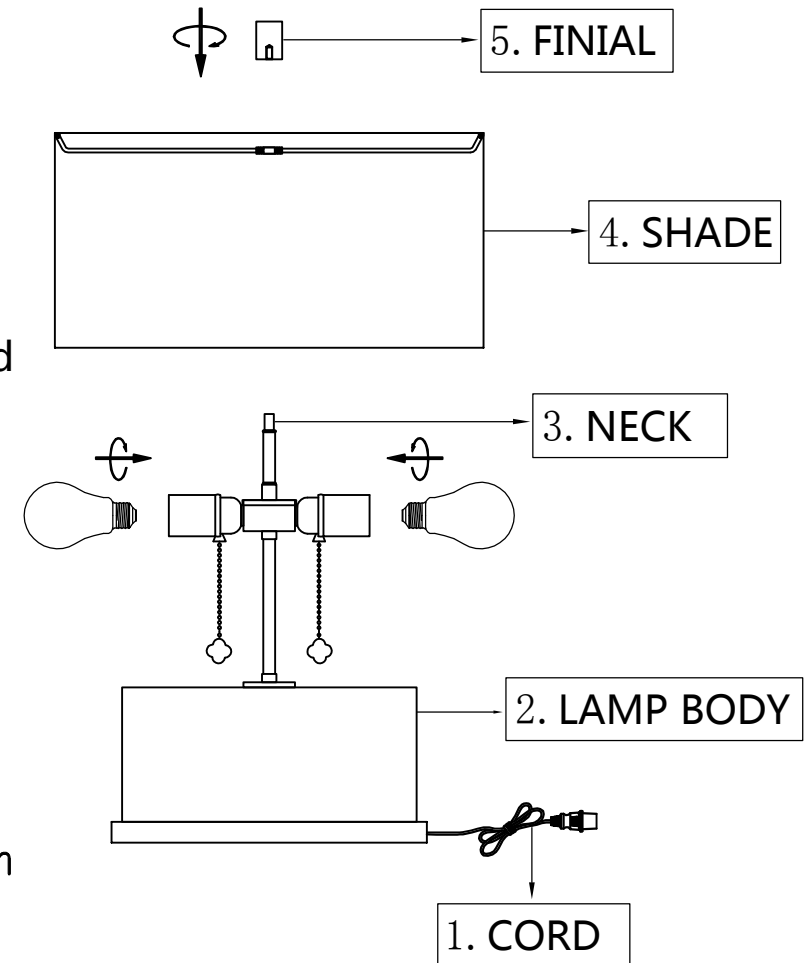

E26, Type A, 60W (NOT INCLUDED)