ASSEMBLY INSTRUCTION

ITEM NO: TDL212138DS


1) Fix the shade (3) knob onto the lamp holder of lamp body (2).

*Please note that there is a knob dimmer switch on the plug wire that can adjust the brightness of the light bulb.

CAUTION – Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

WARNING — Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

IMPORTANT SAFETY INSTRUCTIONS This portable lamp has a polarized plug(one blade is wider than the other)as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. if the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

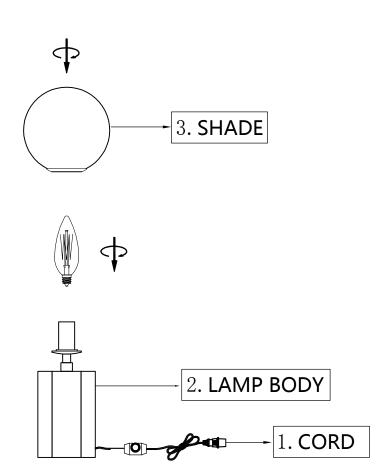

E12, Type B, 15W(NOT INCLUDED)