

# ASSEMBLY INSTRUCTION

ITEM NO: TDL334396DS


- 1) Add the Harp(3) onto the saddle located on the Neck(2).
- 2) Add the Shade(4) onto the Harp(3).
- 3) Add the Finial(5) onto the Harp(3).

\*Please note that the screw, that attaches the Finial(5) to the Harp(3), is movable. If the shade appears to be askew, check this screw and adjust it if needed so it points straight up.

**CAUTION** – Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

**WARNING** – Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

**IMPORTANT SAFETY INSTRUCTIONS** This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

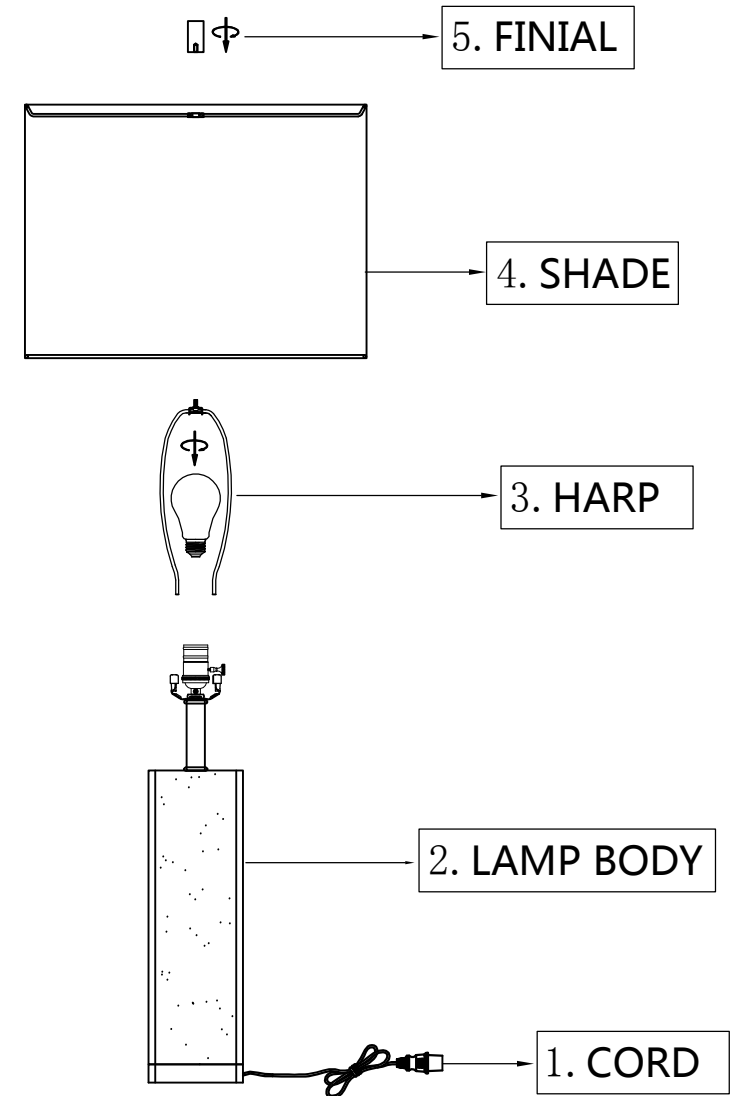

E26, Type A, 150W (NOT INCLUDED)