

# ASSEMBLY INSTRUCTION

ITEM NO:TDL334402DS


- 1) Add the Harp(3) onto the saddle located on the Neck(2).
- 2) Add the Shade(4) onto the Harp(3).
- 3) Add the Finial(5) onto the Harp(3).

\*Please note that the screw,that attaches the Finial(5)to the Harp(3),is movable.if the shade appears to be askew,check this screw and adjust it-if needed-so it points straight up.

**CAUTION** – Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

**WARNING** – Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

**IMPORTANT SAFETY INSTRUCTIONS** This portable lamp has a polarized plug(one blade is wider than the other)as a safety feature to reduce the risk of electric shock.This plug will fit in a polarized outlet only one way.if the plug does not fit fully in the outlet,reverse the plug.If it still does not fit,contact a qualified electrician.Never use with an extensioncord unless plug can be fully inserted.Do not alter the plug.

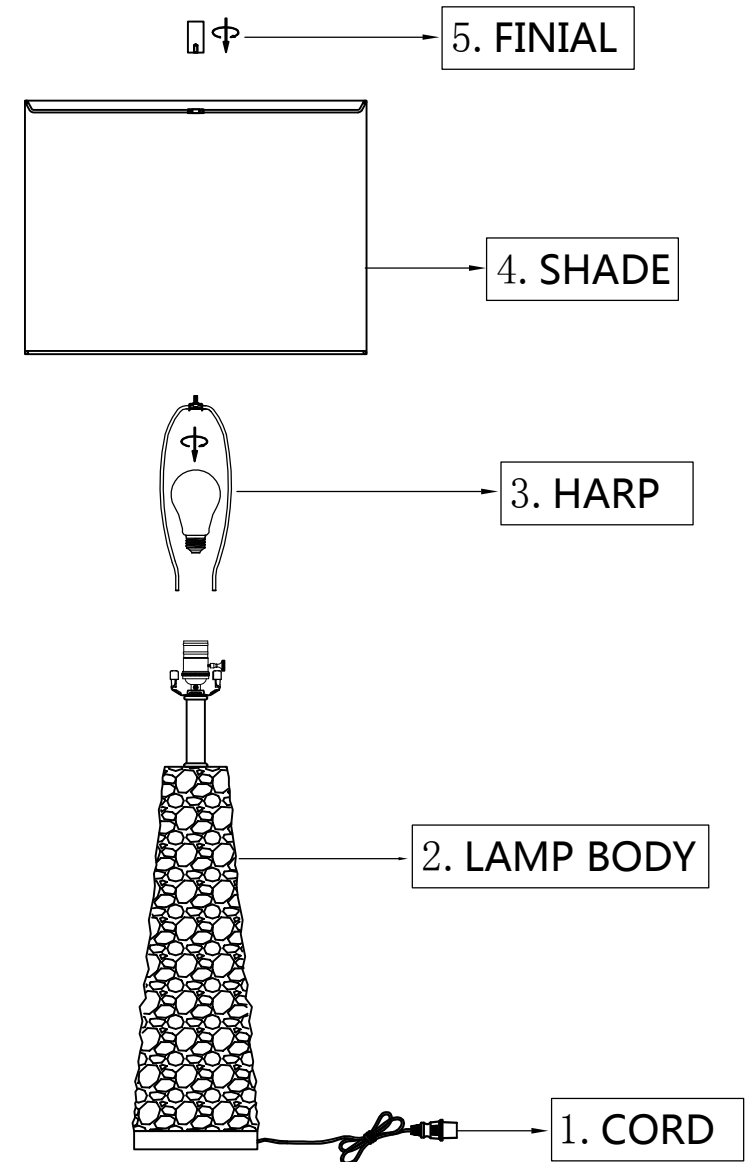

E26, Type A, 150W (NOT INCLUDED)