

Overview.

The Polaris HUD will project the vehicle speed onto the windscreen which avoids the need for the driver to take their eyes off the road to check the speedometer. It also has 2 over speed alerts that can be set to the drivers preferred speed limit.


Product Info:

- Speed data via GPS satellites
- Powered by cigarette lighter Adaptor (12v - 24v input)
- Easy Installation
- Touch Pad Menu and Settings
- Adjustable Brightness, Volume and Speed Alerts

HUD Installation

- When unit is powered on, place the HUD on the dash and move it around to determine the best visible position for the driver. Clean dash with the alcohol wipe and remove the red cover sheet from the stick pad and mount the HUD unit. Adjust the angle of the bracket to suit the windscreen.

HUD Screen Guide

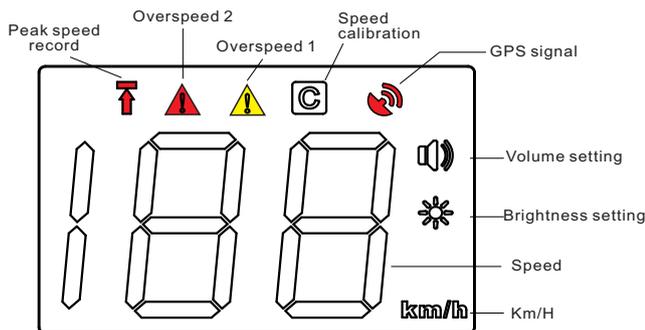

Applying Tint

- Remove protective layer from tint
- Spray windscreen and back of tint with weak soapy water
- Apply to windscreen and find best position for the HUD reflection
- Squeeze all excess water out with a flat surface
ie. use a Credit card or small ruler to remove all bubbles.

Settings / Calibration

Note: All adjustments must be done within 5 seconds of last key press or the settings mode will be cancelled.

Brightness: To set brightness of the display press "Menu" until  is showing.... then press "Set" and the value will start flashing. Adjust the value using   between 0-7 to set brightness. Press "Set" again to save.

Volume: To set the HUD volume press "Menu" until the  is showing....press "Set" and the value will start flashing. Adjust value using   between 0-3 to set the volume. Press "Set" to save.

Speed Calibration: This may be necessary to match the HUD speed to the vehicle speedometer or GPS. To calibrate speed, press "Menu" until  is showing. Press "Set" and the value will start flashing. Adjust value using   to match your speedometer. Press "Set" to save. (note: the HUD speed calibration must be done when the vehicle is stationary). Adjust 1 increment at a time and then road test for accuracy.

GPS Signal: When GPS signal is low, the  icon will show and the screen will display " _ _ " and flash. When the signal is good the screen displays vehicle speed in green or white.

Over Speed Alert:

To set Over Speed Alert 1 press "Menu" until  is showing.... Press "Set" and the value will start flashing. Adjust the value using the   to set the desired speed. Press "Set" to save. When you have reached your pre determined speed the alert icon  will show and the HUD will "beep" once. To set Over Speed Alert 2 press "Menu" until  is showing. Repeat the same procedure as Over Speed Alert 1. When you have reached your pre determined speed the alert icon  will show and the HUD will "beep" twice.

Peak Speed

Press and hold the  and the  icon will show. The fastest speed (Peak) that has been reached will show on the HUD display.