


Tow Secure

Installation instructions

Once fully installed, refer to Operating Instructions for testing and how to operate.

Installation Of Breakaway switch.

Mount the Breakaway switch on the A Frame of the trailer as close to the front of the trailer as possible.

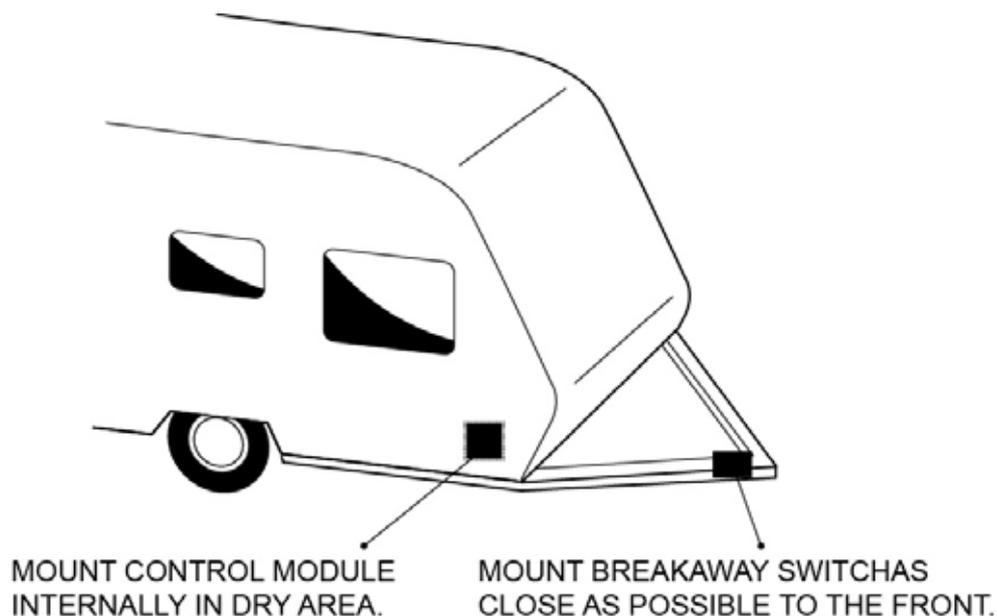

Installation of Tow Secure control module

The Tow secure control module should be mounted in a dry location, if the unit can only be mounted externally in a wet location; the module needs to be protected with a rain cover.

Please note that the control module is not waterproof, water damage is not covered by warranty.

Wiring Schematic.

Black- + 12 Volt from Tow Vehicle Ignition line

White- Ground

Red- +ve 12 volt output to Stop lights

Blue- +ve 12 Volt output to trailer brakes.

Orange- to breakaway switch

