


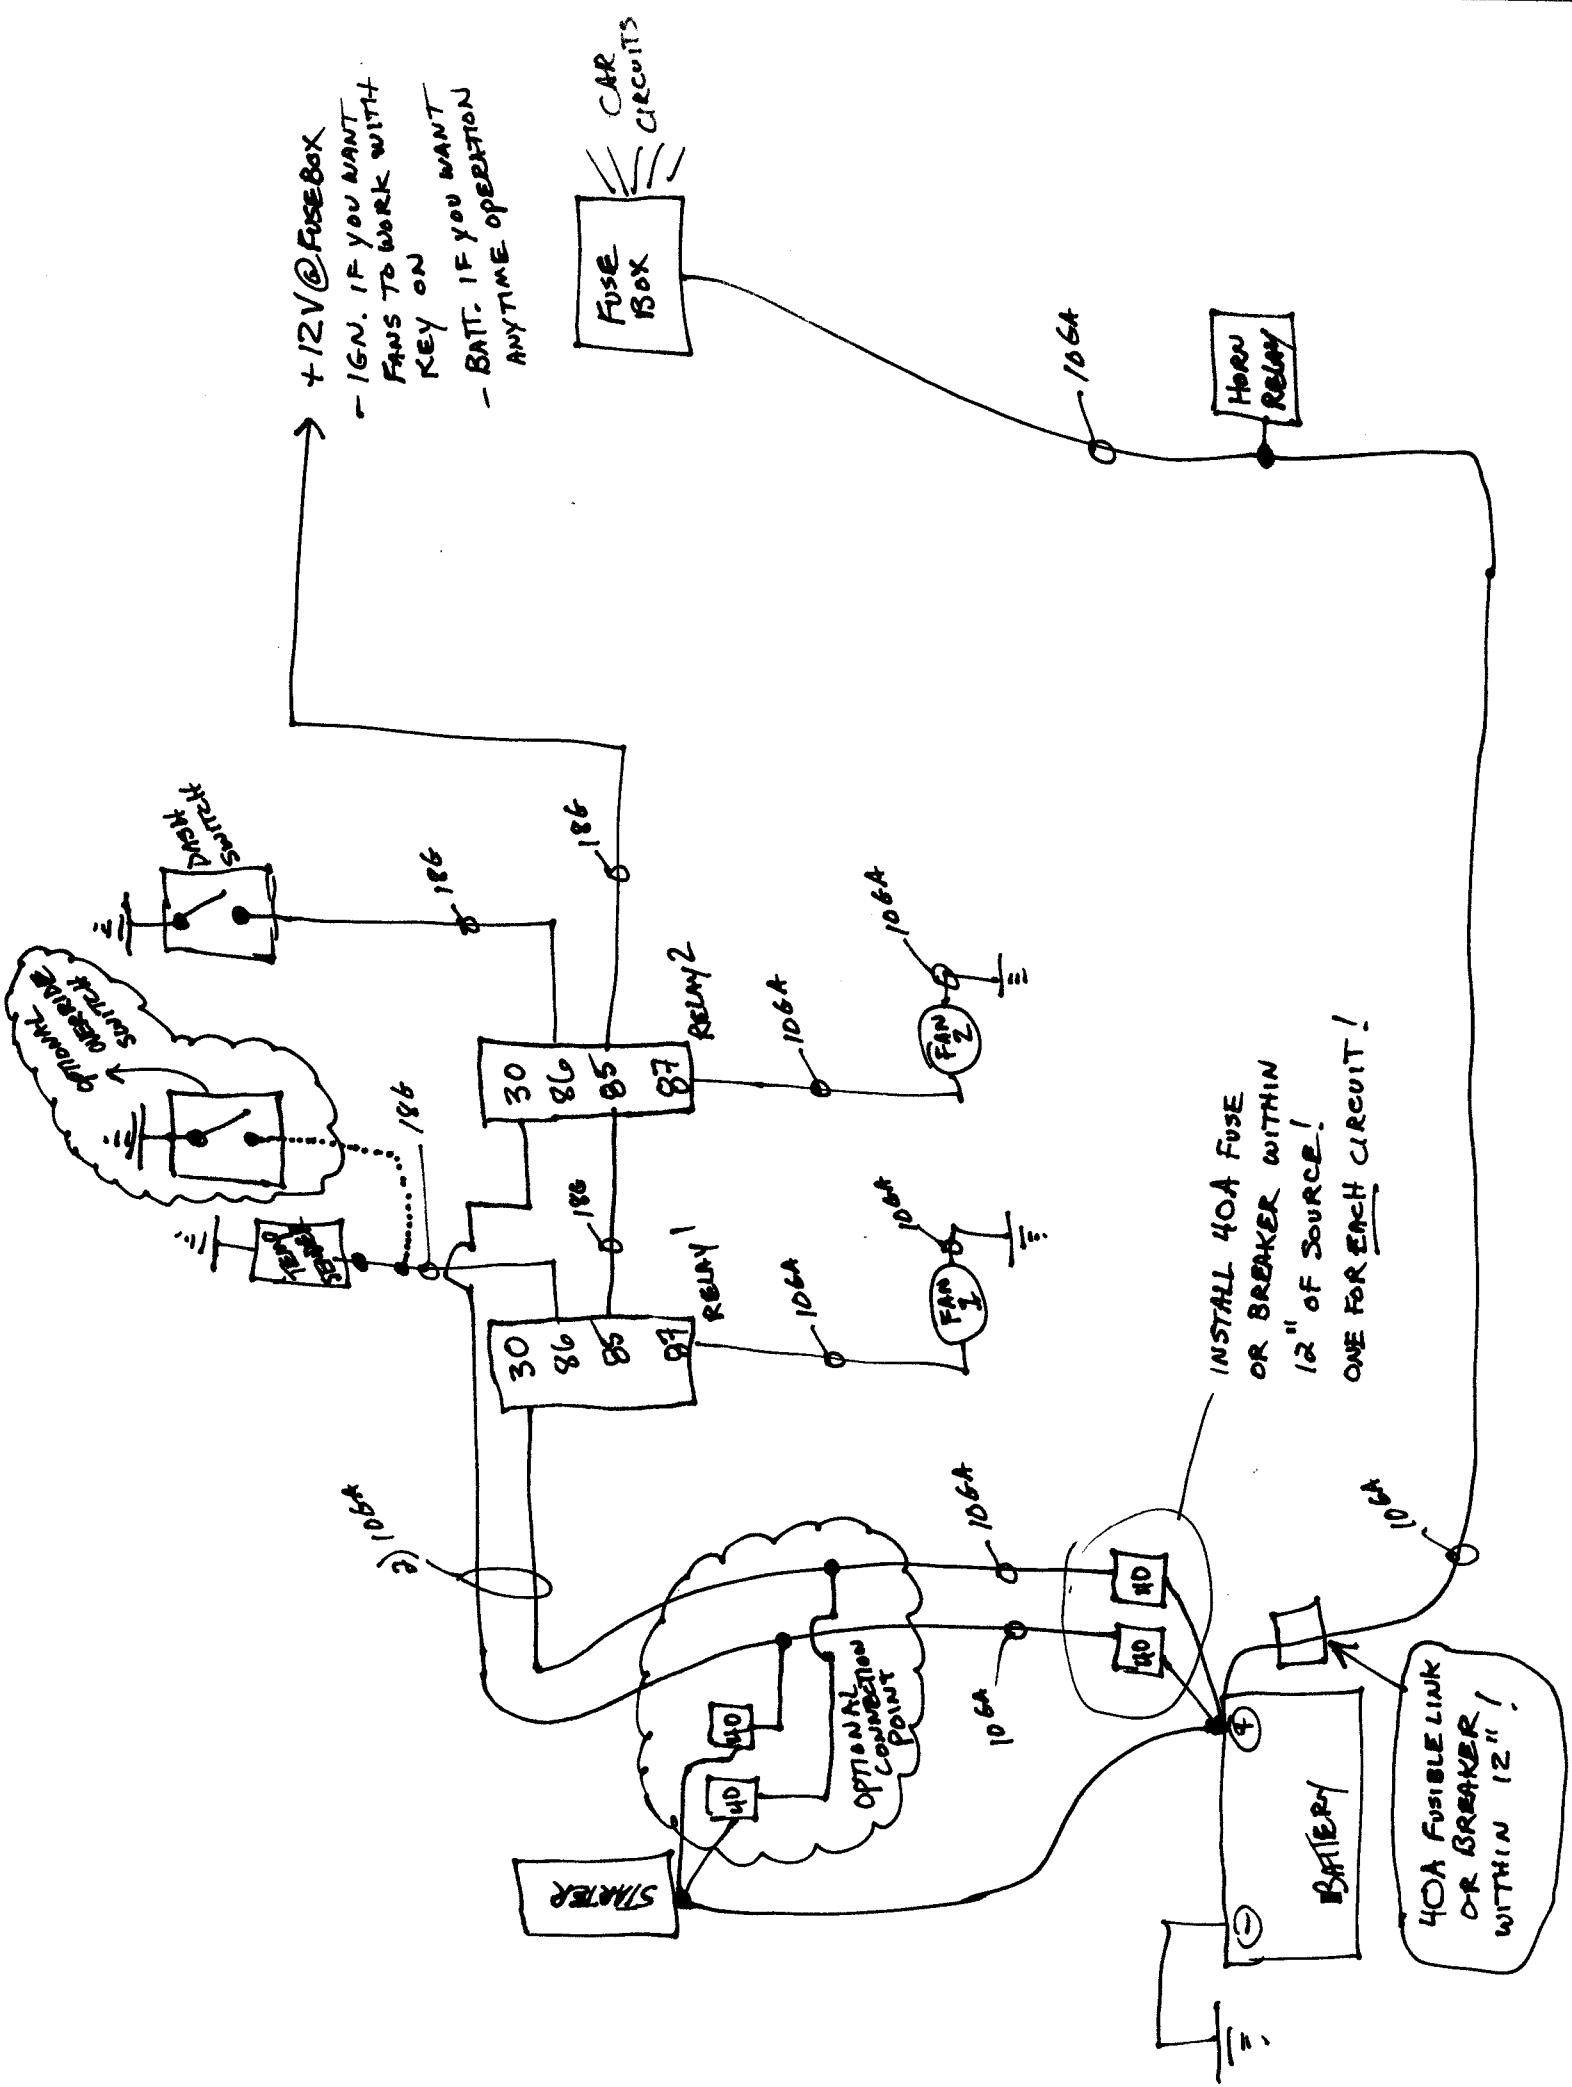

+12V @ FUSE BOX

- IGN. IF YOU WANT FANS TO WORK WITH KEY ON
- BATT. IF YOU WANT ANYTIME OPERATION

FUSE BOX

CAR CIRCUITS

INSTALL 40A FUSE OR BREAKER WITHIN 12" OF SOURCE! ONE FOR EACH CIRCUIT!

40A FUSIBLE LINK OR BREAKER WITHIN 12"!