# DAEWOO DP51C

Century International Arms, Inc.
5 Lemnah Drive.,
St. Albans, VT 05478
READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL
CAREFULLY BEFORE USING THIS FIREARM

THIS MANUAL SHOULD ALWAYS ACCOMPANY THIS FIREARM AND BE TRANSFERRED WITH IT UPON CHANGE OF OWNERSHIP OR WHEN THIS FIREARM IS LOANED OR PRESENTED TO ANOTHER PERSON.

# Table of Contents

|  | *************************************** |
|--|---|
| 1. Safety Rules                                  | 5                                       |
| 2. Introduction                                  | 6                                       |
| Safety Rules     Introduction     Description    |   |
| Description     Technical Features               | 0                                       |
| Technical Features     Handling The Pistol       | ·y                                      |
| A. Loading the Magazine                          |   |
| B. Loading the Pistol                            |   |
| C. Shooting the Pistol  6. Maintenance           |   |
| 6. Maintenance                                   |   |
| A Field Stripping and Reassembly                 |   |
| B. Cleaning 7. Trouble Shooting 8. Exploded View | 17                                      |
| 7. Trouble Shooting                              | 19                                      |
| 8 Exploded View                                  | 10                                      |
| 9. Parts List                                    | 19                                      |
|  |   |

# **Warranty Statement**

This firearm imported by Century is warranted against defects in materials and/or workmanship for one full year after date of original new gun retail purchase.

Unauthorized alterations or service not approved or performed by Century or an authorized representative of the manufacturer will render the Warranty null and void. The use of hundloaded, reloaded or other non-standard ammunition will also void all warranties.

Under no circumstances shall Century be liable for consequential or incidental damages or injury. Some states do not allow the exclusion of consequential or incidental damages so the above limitation may not apply to you

- 10. Never shoot at water or other flat hard surfaces. Bullets can ricochet.
- 11. Always wear ear and eye protector when shooting and require their use by anyone shooting with you.
- 12. Use only high quality ammunition of the proper caliber for the gun you are shooting
- 13. Never let dirt, snow or water get in the barrel of the gun. Any bore obstruction can cause damage to the firearm and could cause personal injury or death to the shooter or bystanders.
- 14. Stop shooting immediately if a shot sounds unusual or there is a difference in the recoil. Examine the gun for bore obstructions or other defects before resuming fire.
- 15. Never drink alcohol or use drugs or medication that could impair your judgement while shooting. This is as negligent as drunk driving!
- 16. The following types of ammuniton should not be used in this pistol, reloaded ammunition, and +P ammunition. Ammunition with (+P) on the case head stamp is loaded to higher pressure. Use only in firearms designed for this catridge and so recommended by the gun manufacturer.

Δ

### Introduction

The DAEWOO DP51C is a 9mm Parabellum semi-automatic pistol designed for law enforcement, defense, inilitary and recreational shooting. It is a light weight service pistol with several novel features. This firearm, and any firearm, is capable of causing serious bodily injury or death when handled improperly. Even though this pistol has been designed with safety in mind, no mechanical safety device can take the place of common sense and adherence to simple safety rules. Before attempting to load or fire the pistol, take the time to study this manual carefully.

### WARNING:

This pistol is sold with the understanding that the purchaser assumes all liability resulting from upsale handling or any action that constitutes a violation of any applicable taws or regulations. Century shall not be liable for personal injury or loss of property or life resulting from the use of this pistol under any circumstances including intentional, reckless, negligent or accidental discharge. Further, Century will not be liable for any alterations to the pistol or any parts thereof. If the pistol is in need of service or adjustment during the warranty period, is should be returned to Century. For all returns, a return authorization will be needed to be obtained from Century and you should call or write Century at the following: 1-561-998-1997 or 1161 Holland Drive. Boca 'Raton, FI 33487. Attn: Customer Service. Returns will not be accepted without an authorization number.

# DAEWOO DP51C Instruction Manual

Do not attempt to load or fire this or any other weapon until you are thoroughly familiar with the instructions and warnings contained in this manual.




Fig. 1

### **Technical Features**

The DAEWOO DP51C is a light weight, short recoil, locked breech, semi-automatic pistol chambered, for the 9mm Luger(Parabellum)(9×19) cartridge. It is suitable for use with any commercially loaded ammunition made to American or NATO specifications. The use of +P ammunition is not recommended.(Ammunition with (+P) on the case head stamp is loaded to higher pressure.) Reloaded ammunition should not be used.

The DP51C may be fired in any of three modes: single-action, double-action and "Fast-Action." See the instructions for an explanation of these terms.

It is equipped with an ambidextrous manual safety as well as a passive firing pin safety. The magazine eatch may be reversed for left-handed shooters.

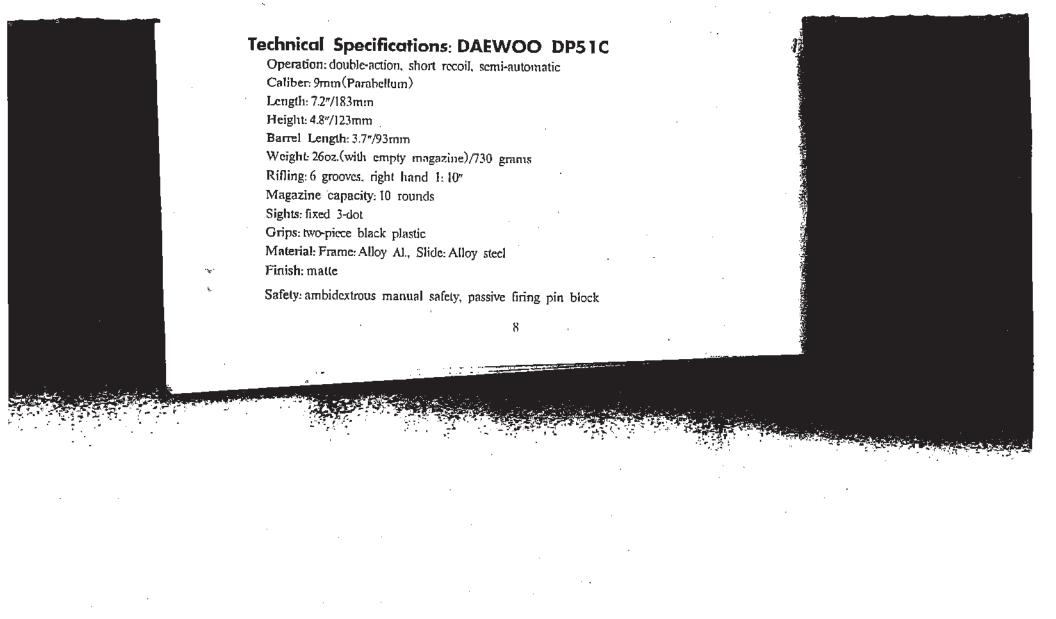

## Handling the Pistol

WARNING. Be sure to use only 9mm Luger(Parabellum) ammunition from a reliable source. The use of (TP) or handloaded ammunition can result in damage to the pistol and may void any warranty.

### A. Loading the Magazine:



Fig. 2

Remove the magazine from the pistol by depressing the magazine catch. Hold the magazine in your left hand and using the right hand, place a cartridge on the magazine follower. Press down and slide the cartridge all the way to the rear so that it is held under the magazine lips—Fig. 2. Repeat this operation until the desired number of rounds are loaded. Many shooters find it easier to use the thumb of the left hand to depress the round and slide it to the rear.

### B. Loading the Pistol



Fig. 3



\_

**WARNING**: Always keep the pistol pointed in a safe direction when loading.

Insert the loaded magazine into the magazine well of the pistol and insure that it is locked in place—Fig. 3. If the slide has been locked open, the pistol may be loaded by either depressing the slide stop or by simply pulling the slide slightly to the rear and releasing it. If the slide is in the closed position, pull the slide fully to the rear and release—Fig. 4.

WARNING: Keep your finger off the trigger during loading. When the slide is released, the pistol is ready to fire. Engage the manual safety if you do not intend to fire immediately.





Fig.5



Fig. 6

The DAEWOO DP51C pistol can be fired three ways:

- Double-action: The double-action mode is available only when the hammer has been manually lowered by pulling the trigger while holding the hammer. This procedure can result in discharge of the pistol if the hammer slips— Fig. 5.
- 2. Single-action: The single-action mode of firing is available when the pistol is first loaded and for every shot fired after the first one—Fig. 6.
- 3. "Fast-Action": The fast-action mode is unique to the DAE-WOO DP51C pistol and is made possible by a two-piece hammer design. When the pistol is cocked, the hammer may be manually pushed to the Lowered postion without touching the trigger. This may be done with the safety in either the "on" or "off" position. When the hammer is lowered in this manner, the trigger will return to the

foward position. When the safety is disengaged, the pistol may be fired by simply pulling the stripper. The "Leet Action" method of tripper operation allows the shorter to have a first-shot trigger similar to double action in length of pull but with the weight of pull that is much like the single-action pull.

WARRING: The user should be consequipled families with the operation of the trigger mechanism with the pudel independent before altempting to lead and the the pulse.

# Maintenance



Fig. 7




Fig. 8



Fig. 10



 Fig. 11

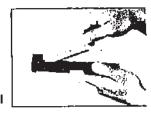

A. Field stripping and Reassembly

Remove the magazine and inspect the chamber to be sure the pistol is unloaded-Fig. 7. Holding the pistol in the right hand, retract the slide until the clearance cut in the slide is aligned with the top of the pin on the slide stop. (#34)-Fig. 8. The slide stop pin can then be pressed out with the forelinger of the left hand-Fig. 9. With the pin removed, the slide will slip forward and off the pistol. No tools or force are needed for this operation-Fig. 10.

The recoil spring and guide are held in place by a small notch in the bottom of the barrel. To remove the recoil spring and guide, carefully compress the spring slightly and lift up then release the tension-Fig. 11.

WARNING: The recoil spring is under considerable lension and personal injury or properly damage can occur if the spring slips. Always keep the spring pointed in a safe direction when removing

With the recoil spring removed, the barrel can be removed from the slide by lifting it up - Fig. 12. Note this completes the field stripping operation. No further disassembly is needed for normal cleaning and maintenance and detail stripping should only be done by trained gunsmiths.

WARNING: When reassembling the pistol, make sure that the firing pin safety lever( #21) does not extend above the surface of the frame. If it does, assembly cannot be accomplished and there is the risk of damage to the pistol.

Replace the barrel in the slide by inserting the muzzle end into the slide and then slipping it backwards until it falls into place. Insert the open end of the recoil spring into the recess in the slide and compress the spring and guide, until it can be caught in the recess on the barrel.

WARNING; there is considerable spring tension and care must be taken to maintain control of the spring. If it slips, personal injury or property damage can result.

Slip the slide onto the frame and align the clearance cut for the slide stop pin with the slide stop pin hole. Insert the slide stop pin and insure that it is firmly in place. Manually cycle the slide to be sure that it moves freely. This completes the reassembly process.

### B. Cleaning

WARNING: Prior to cleaning, remove magazine and assure the chamber is empty.

Normal cleaning can be accomplished with a bore brush, patches and a good cleaning solvent Excess oil and fouling can usually be wiped off with a rag although a toothbrush or similar tool may be helpful. If the pistol is extremely dirty, a solvent such as "Gun Scrubber may be needed. Dip the bore brush in solvent and pass it through the bore several times. Follow with clean dry patches. Wipe excess oil off the barrel, recoil spring, and recoil spring guide. Place a drop or two of a good lubricant such as "Break Free" on the recoil spring guide, the slide rails and the barrel locking lugs before reassembly. If it has been necessary to use a solvent to remove fouling from the frame this will remove all lubricant, and a few drops should be placed on the moving parts of the frame. Also place one drop on the muzzle of the barrel where it contacts the barrel bushing, and one drop on top of the barrel through the ejection port. Do not over-lubricate.

WARNING : Always check to be sure that no olganing patch or other obstruction remains in the bore or chamber after cleaning.


Trouble-shooting


Although the DAEWOO DP51C is an extremely reliable pistol, malfunctions sometimes occur. Very often these are caused by sources other than the pistol and sometimes the shooter himself is responsible. Generally speaking there are several different types of malfunctions identified as "failure to...feed, eject or fire." Each can be several possible causes:

- I. Failure to feed: The most common causes of feeding failures are either with the ammunition or the magazine. Old corroded ammunition can often produce malfunctions as can handloaded ammunition that does not accurately duplicate the dimensions of factory loaded ammunition. A damaged magazine is often responsible. If, for example, the lips of the magazine have been damaged, the timing cycle of the pistol can be disrupted and a round will not feed properly. Be careful with the magazine and avoid dropping it on concrete or other hard surfaces.
  - If the magazine becomes especially dirty, it can be disassembled and cleaned.
- 2 Failure to eject: This can also be caused by ammunition irregularities or handloaded ammunition that does not have adequate power to function the pistol properly. The shooter can also produce this malfunction by failing to hold the pistol firmly while shooting. This malfunction, known as "limp wristing", results when there is not enough resistance, provided by a firm shooting grip, to allow the pistol to recoil properly.



# Exploded View

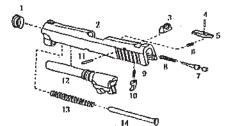

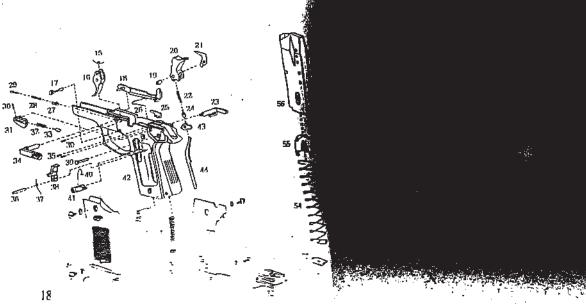

### **Parts List**

- 1. Bushing, Barrel
- 2 Slide
- 3. Sight, Rear
- 4. Pin, Extractor
- 5. Extractor
- 6. Spring, Extractor
- 7. Pin, Firing
- 8. Spring, Firing Pin
- 9. Spring Firing Pin Catch
- 10. Catch, Firing Pin
- 11. Pin, Lock
- 11. Fin, Lo
- 13. Spring, Recoil
- 14. Guide, Recoil Spring
- 15. Spring, Trigger
- Trigger

- 17. Pin, Trigger
- 18. Bar, Trigger
  - 19. Bushing, Hammer
  - 20. Hammer
  - 21. Lever, Firing Pin Safety
  - 22. Spring, Hammer Plunger
  - 23. Safety, Right
  - 24. Plunger, Hammer
  - 25. Ejector
  - 26. Spring, Trigger Bar
  - 27. Detent, Slide Stop
  - 28. Spring, Slide Stop 29. Plunger, Slide Stop
  - 30. Pin, Slide Stop Detent
  - 31. Safety, Left
  - 32. Spring, Safety

- 33. Plunger, Safety
- 34. Stop, Slide
- 35. Pin, Ejector
- 36. Pin, Sear
- 37. Spring, Sear
- 38. Sear
- 39. Pin, Hammer
- 40. Spring, Magazine Catch
- 41. Catch, Magazine
- 42. Frame
- 43. Insert, Hammer
- 44. Strut, Hammer
- 45. Pin, Hammer Spring Guide
- 46. Plate(L.H.), Grip
- 47. "O" Ring
- 48. Screw, Grip

# This Manual Was Provided To You By:



www.centuryarms.com