


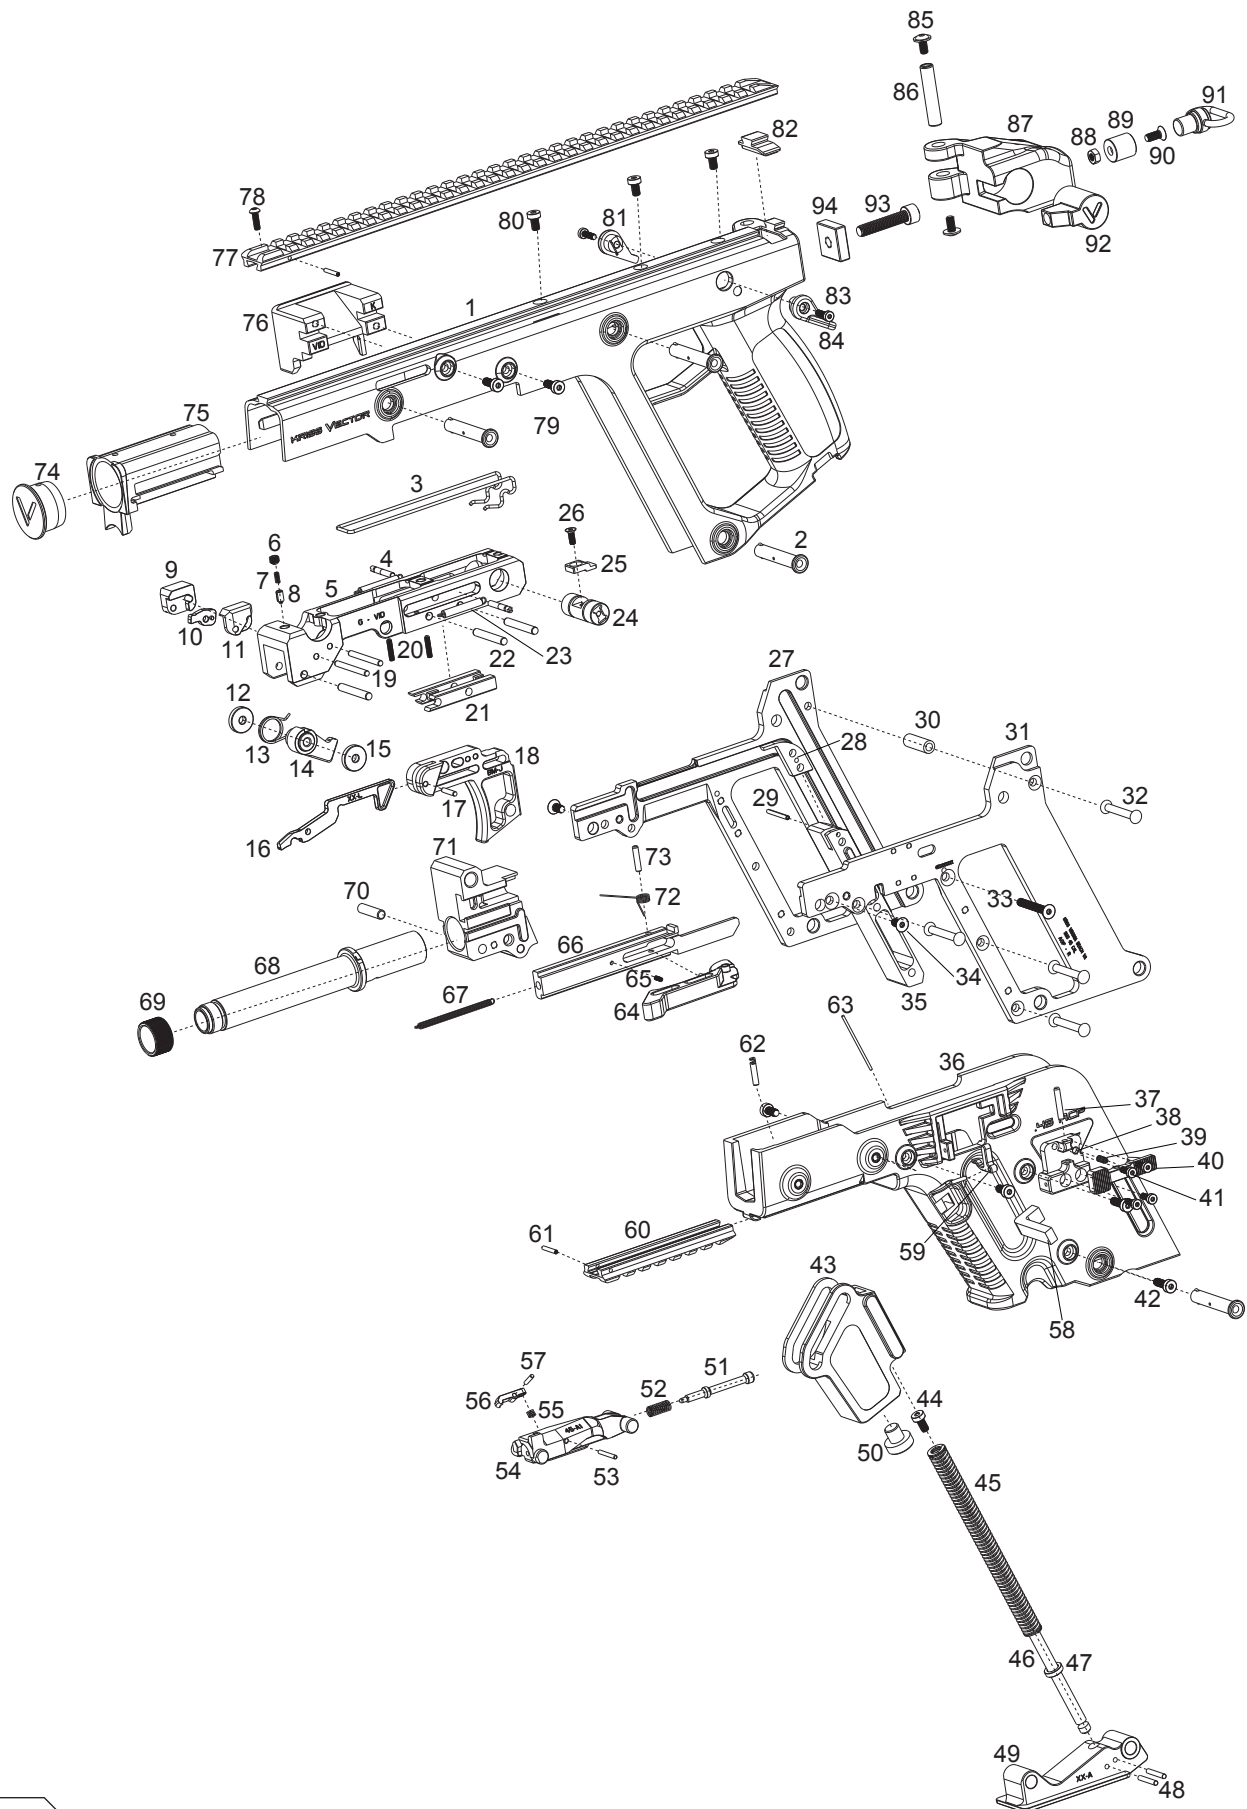

VECTOR SDP .45ACP COMPONENTS LIST

KRISS®

1	Upper housing CRB/SBR	33	Receiver plate screw	65	Ch spring retainer
2	Break down pin	34	Short receiver screw	66	Charging slider
3	Primary sear return spring	35	Ejector mount	67	Ch slider spring
4	Spring anchor	36	Lower housing .45ACP	68	.45ACP Barrel 5.5" Thrd
5	FCG frame CRB	37	Bolt lock pin	69	Barrel end cap
6	M5x4 flat pt set scr	38	Bolt catch block	70	M5x20 dowel pin
7	Compression spring	39	Bolt lock spring	71	Barrel Trunnion
8	Plunger	40	Bolt lock	72	Ch handle spring
9	FCG spacer Lh CRB	41	M3x8 LHCS	73	Charging handle pivot
10	Semi disconnect	42	Mounting screw	74	Flashlight plug
11	FCG spacer Rh CRB	43	Slider	75	Nose piece
12	FCG hammer spacer	44	Short mounting screw	76	Ejection port
13	Semi hammer spring	45	Main spring	77	Picatinny rail
14	Hammer CRB	46	Main guide shaft	78	M3x10 BHCS
15	FCG hammer spacer	47	Spring washer	79	Rail mounting screw
16	Primary sear	48	Rod retainer pin	80	FCG mounting screw
17	Trigger sear connector pin	49	Spring plate	81	S/F selector lever RH
18	Trigger	50	Main slide buffer	82	Locking key
19	Small pivot pin	51	Firing pin	83	Selector screw
20	Return spring anchor	52	Firing pin spring	84	S/F selector lever LH
21	Trigger spacer	53	M2x16 dowel pin	85	M4x8 BHFS flanged
22	Large pivot pin	54	.45Cal bolt	86	Fixed stock post
23	Trigger return spring	55	Extractor spring	87	Pistol butt end
24	Safety cam	56	Extractor	88	M4x0.7 jam nut
25	Safety stop bar	57	Extractor pin	89	Swivel base
26	M3x8 FHSSC	58	Magazine catch	90	M4x10 FHMS
27	Rh receiver plate semi	59	Bolt lock trigger	91	QD100 Swivel loop
28	Ejector	60	Picatinny rail short	92	Stock latch
29	Ejector pin	61	Rail retaining pin	93	M6x30 SHCS
30	Receiver plate spacer	62	Chg Hndl Spring Post	94	Square nut
31	Lh receiver plate semi	63	Magazine catch spring		
32	Receiver plate rivet	64	Charging handle		