


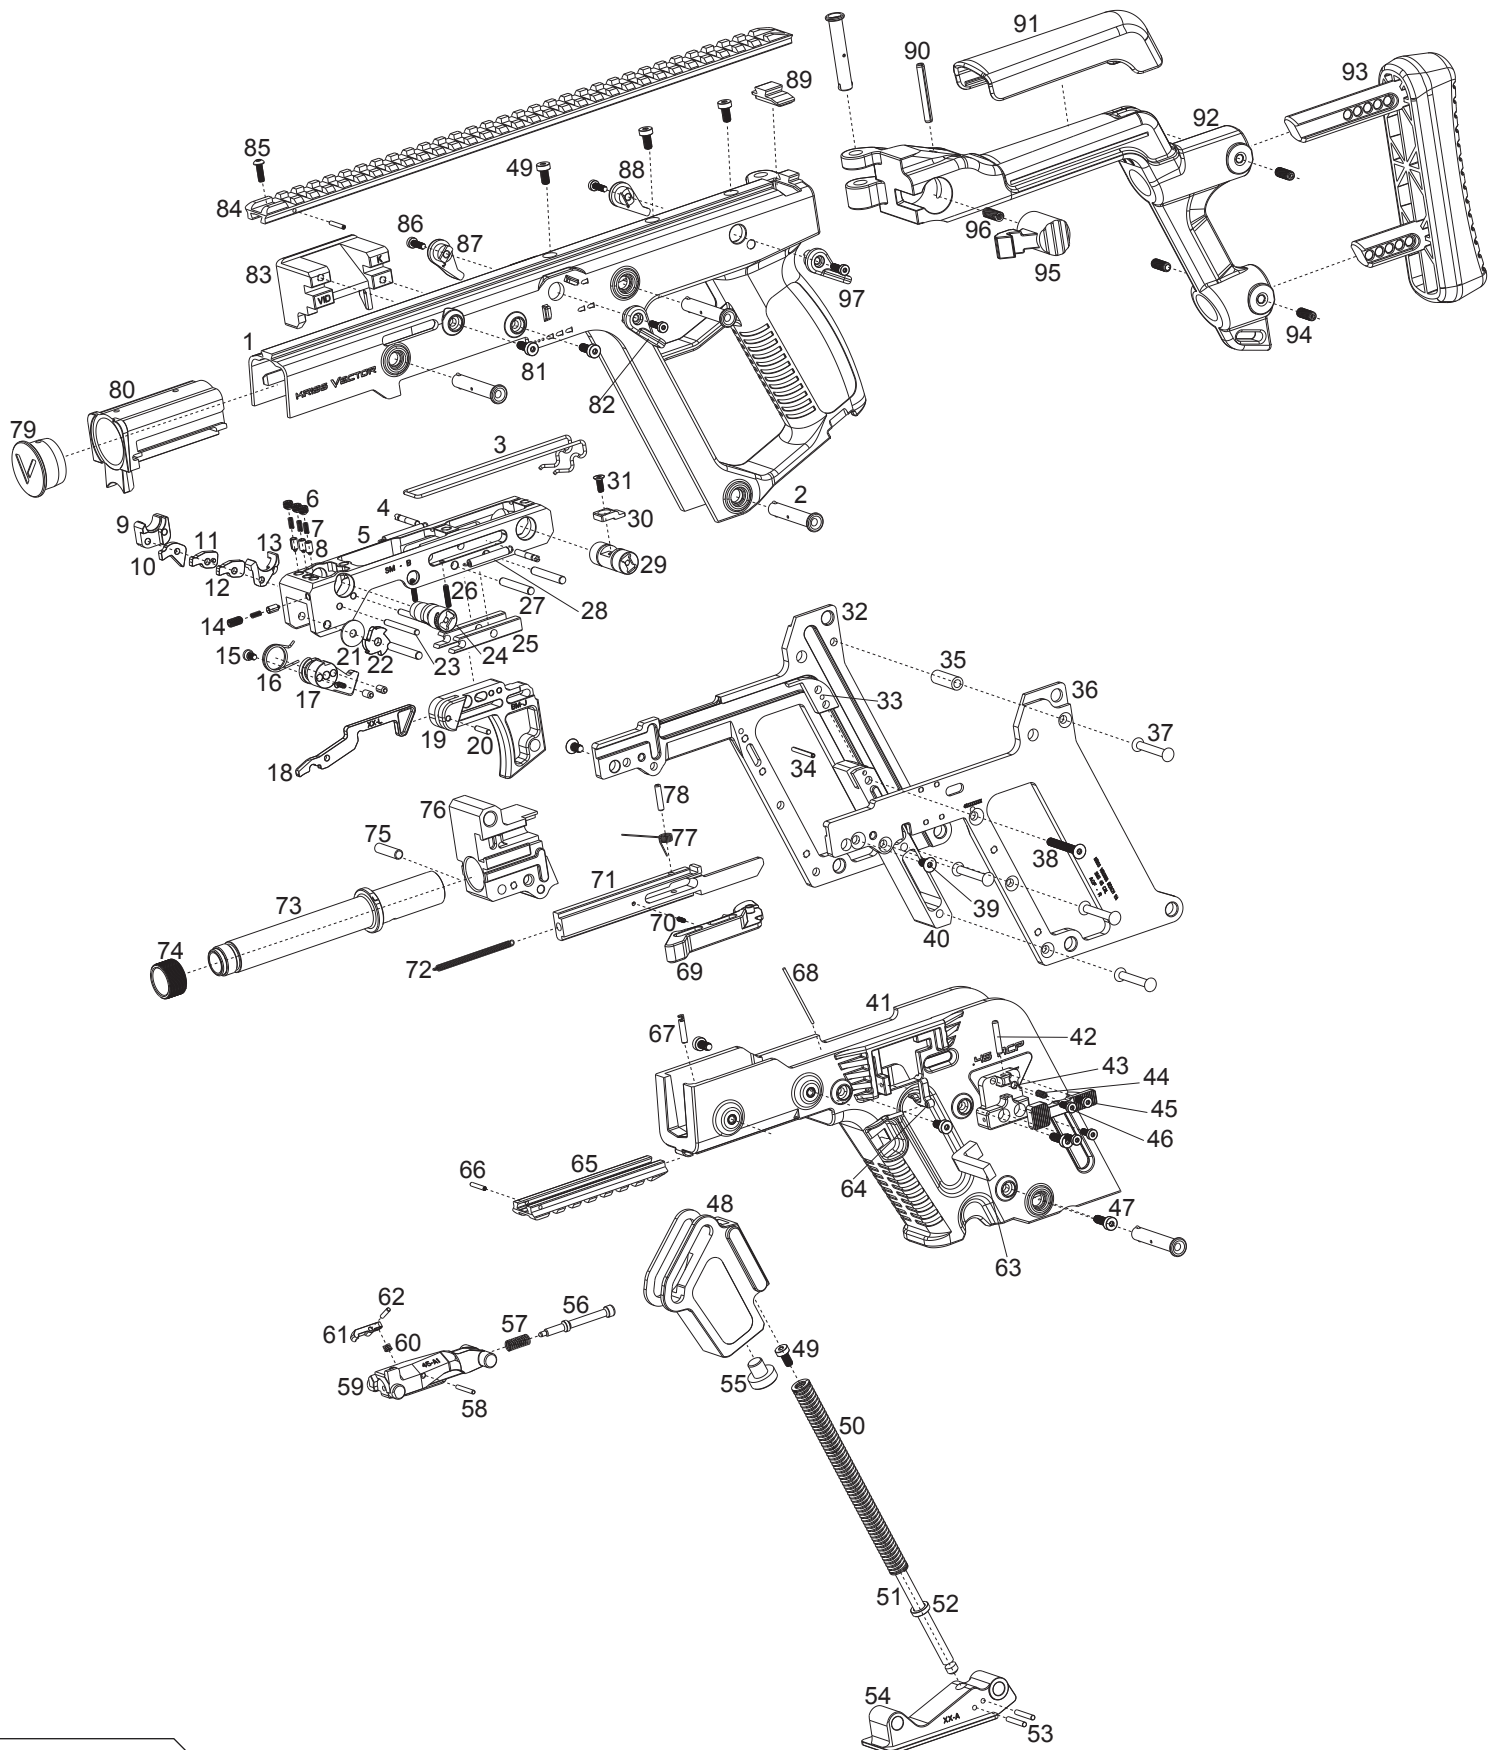

VECTOR SMG .45ACP COMPONENTS LIST

KRISS®

1	Upper housing SMG	34	Ejector pin	67	Chg Hndl Spring Post
2	Break down pin	35	Receiver plate spacer	68	Magazine catch spring
3	Primary sear return spring	36	Lh receiver plate SMG	69	Charging handle
4	Spring anchor	37	Receiver plate rivet	70	Ch spring retainer
5	FCG frame SMG	38	Receiver plate screw	71	Charging slider
6	M5x4 flat pt set scr	39	Short receiver screw	72	Ch slider spring
7	Compression spring	40	Ejector mount	73	.45ACP Barrel 5.5" Thrd
8	Plunger	41	Lower housing .45ACP	74	Barrel end cap
9	FCG spacer Lh SMG	42	Bolt lock pin	75	M5x20 dowel pin
10	Auto sear	43	Bolt catch block	76	Barrel Trunnion
11	Semi disconnect	44	Bolt lock spring	77	Ch handle spring
12	Burst disconnect	45	Bolt lock	78	Charging handle pivot
13	FCG spacer Rh SMG	46	M3x8 LHCS	79	Flashlight plug
14	M4x8 flat pt set scr	47	Mounting screw	80	Nose piece
15	Hammer spring stop	48	Slider	81	Rail mounting screw
16	Hammer spring	49	Short mounting screw	82	Mode selector lever LH
17	Hammer SMG	50	Main spring	83	Ejection port
18	Primary sear	51	Main guide shaft	84	Picatinny rail
19	Trigger	52	Spring washer	85	M3x10 BHCS
20	Trigger sear connector pin	53	Rod retainer pin	86	Selector screw
21	Washer	54	Spring plate	87	Mode selector lever RH
22	Burst cam	55	Main slide buffer	88	S/F selector lever RH
23	Small pivot pin	56	Firing pin	89	Locking key
24	Selector cam 3 pos	57	Firing pin spring	90	M4x32 spring pin
25	Trigger spacer	58	M2x16 dowel pin	91	Cheek weld
26	Return spring anchor	59	.45Cal bolt	92	Folding stock
27	Large pivot pin	60	Extractor spring	93	Butt stock
28	Trigger return spring	61	Extractor	94	M4x0.7 set screw
29	Safety cam	62	Extractor pin	95	Stock latch
30	Safety stop bar	63	Magazine catch	96	Stock lock spring
31	M3x8 FHSSC	64	Bolt lock trigger	97	S/F selector lever LH
32	Rh receiver plate SMG	65	Picatinny rail short		
33	Ejector	66	Rail retaining pin		