



Nevco MPC-4 Model 008-3261 (or other number) together with hockey overlay K2-28

Kitsilano and Sunset rinks

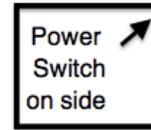

hand-controller will over-ride this switch, if present:

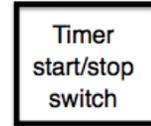

To	Tips	Do < display > [Keys to press] # = digits 0-9.
Start with the power "off".	Switch on the power. If no power, check the power cord. <i>NOTE: when the clock runs out and the auto-horn sounds, don't shut off the power. The horn will normally stop after a couple of seconds. Waiting will spare you the stress of redoing it all.</i>	Flip power switch, located along the upper right hand side of the control box. Model number (6 digits) is on set top. Answer scrolling text questions: <ul style="list-style-type: none"> ✓ If asks <Start where turned off?> press [NO] ✓ If asks <Use an auto start program> press [NO] ✓ <Hi I'm your Nevco MPC-4. I can operate over 500 Nevco Models ... Please enter your model code> example: [0] [0] [8] [3] [2] [6] [1] ✓ <Do you want to use shot clocks?> [NO] ✓ <Use penalty time outs?> press [NO]
Reset scoreboard to 0 : 0 and clear penalties if showing	This is faster than powering off	press [SET] [HOME SCORE] [0] press [SET] [GUEST SCORE] [0] press [HOME PNLTY] [PNLTY CLEAR] [YES] press [GUEST PNLTY] [PNLTY CLEAR] [YES]
Set time & period	Stop the clock (if it's running)! Don't forget to press the [:] After [YES], set period number:	press [SET] [TIME] [#] [#] [:] [#] [#] [YES] e.g. 12 minutes – press [1] [2] [:] [0] [0] [YES] press [#] <--- use 0 for pre-game warm-up
Start & stop clock	A hand control, if "running", may disable the set top Timer switch.	Use hand controller if available. If broken, unplug it so that the machine-top Timer start/stop switch will work.
Set exact scores	Works only up to a score of 9.	press [SET] [HOME SCORE] [#] <--- 0-9 only press [SET] [GUEST SCORE] [#] <--- 0-9 only
Increment scores	Ordinarily, you would add "1". No need to press [YES], but no harm done either... hear PEEP.	press [HOME SCORE] <+> [1] <--- ordinarily press [GUEST SCORE] <+> [1] <--- ordinarily Instead of pressing [YES], press [TIME] to toggle the display back to to the countdown clock.
Enter a penalty if you must adjust duration: [HOME / GUEST PNLTY] [PNLTY EDIT] [#] [#] [:] [#] [#] [YES]	Stop the clock if it's running. After pressing [YES], you still need to input a 2-digit player number. Just use [0] [0] for scoreboards that won't show it.	press [SET] [HOME PNLTY] [2] [:] [0] [0] [YES] press [SET] [GUEST PNLTY] [2] [:] [0] [0] [YES] press [0] [0] <--- enter *any* 2 digits e.g. 0 0 3rd penalties per side will display after the 1st elapses.
Clear a penalty	When the short-handed team has been scored against.	press [HOME PNLTY] [PNLTY CLEAR] [YES] press [GUEST PNLTY] [PNLTY CLEAR] [YES]