

LC/MTP LightStack Adapter Plate Instructions

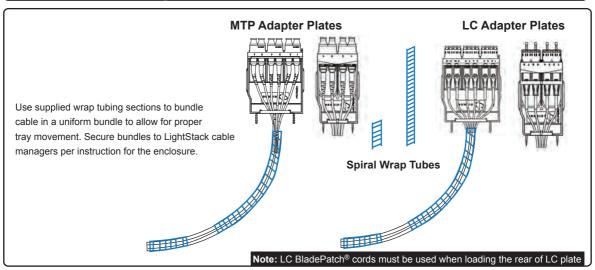

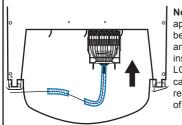

Note: LC and MTP apapter plates must be loaded with LC and MTP cables before insertion into the enclosure. LC and MTP adapter plates can only be inserted and removed from the back of the enclosure Cable exit can easily be opened to accept cable by depressing side opposite desired loading side.