
## **Industrial LC Outlet Instructions**



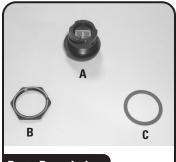

## **Parts Description**

Product includes:

## **QTY DESCRIPTION**


- A. 1 Outlet
  - 1 Panel nut
- C. 1 Panel gasket



Insert the LC connector into the back of the Industrial outlet.



Remove panel nut.

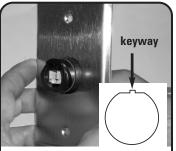


Push the outlet through the faceplate\* bulkhead hole. Be sure the faceplate keyway is properly aligned.

\*Contact Technical Support for demensional mounting information.




Place the panel nut over the flange and tighten to 1.69-2.26 N-m (15-20 in-lbs).

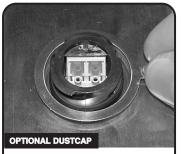

For fixed installation of optional dustcap (X-CAP) place securing ring over the outlet and flat against the faceplate.



Place the panel nut over the flange and tighten to 1.69-2.26N-m (15-20 in-lbs).

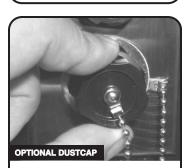

Secure the dust cap in position on the outlet and rotate 1/4 turn clockwise to lock in place.

## To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

IP66/IP67 rating can only be achieved when using an IP66/IP67 rated enclosure with a properly terminated Siemon Industrial Plug (XPLC2-MM) or Siemon Industrial Outlet cap (X-CAP).



Siemon — Asia Pacific Headquarters

Shanghai, China Tel: (86) 21 6390 6778

Siemon — CASA Headquarters Central & South America

Bogota, Columbia Tel: (011) 571 317 2121 Siemon — EMEA Headquarters

Chertsey Surrey, England Tel: (44) (0) 1932 571771

Siemon — Japan Headquarters

Tokyo, Japan Tel: (81) 3 5437 1580 Siemon — North America Headquarters

Watertown, Connecticut Tel: (1) 866-548-5814

