

INSTRUCTIONS: MODEL THE COLUMN SHOWN. USE THE HOLE TOOL FOR ALL HOLES. USE MMC FOR LIMIT OR DEVIATION SIZES. USE INTENDED SIZES FOR LOCATION LIMITS. CREATE A B-SIZE DRAWING WITH VIEWS AND DIMENSIONS SHOWN. USE iPROPERTIES TO INSERT YOUR NAME AND THE PART NAME AS THE TITLE IN THE TITLE BLOCK.

