

GV-EV48 Elevator IP Control Panel




Introduction

GV-EV48 is an elevator controller designed to control access of 1 elevator with a maximum of 48 floors. Up to 2 GeoVision readers can be connected to the GV-EV48 through RS-485 and/or network connections. GV-EV48 can recognize identification cards and grant access to the authorized floors regulated by GV-ASManager access control management system.

Key Features

- Grant access to specific elevator floors using access cards, card's PIN code or fingerprints
- GV-EV48 – 24 Floors: Built-in 24 relay outputs to support up to 24 elevator floors
- GV-EV48 – 48 Floors: Built-in 48 relay outputs to support up to 48 elevator floors
- Support up to 2 GV-Readers / GV-GF Fingerprint Readers through RS-485 and network connections
- Support up to 48 I/O ports of GV-I/O Boxes

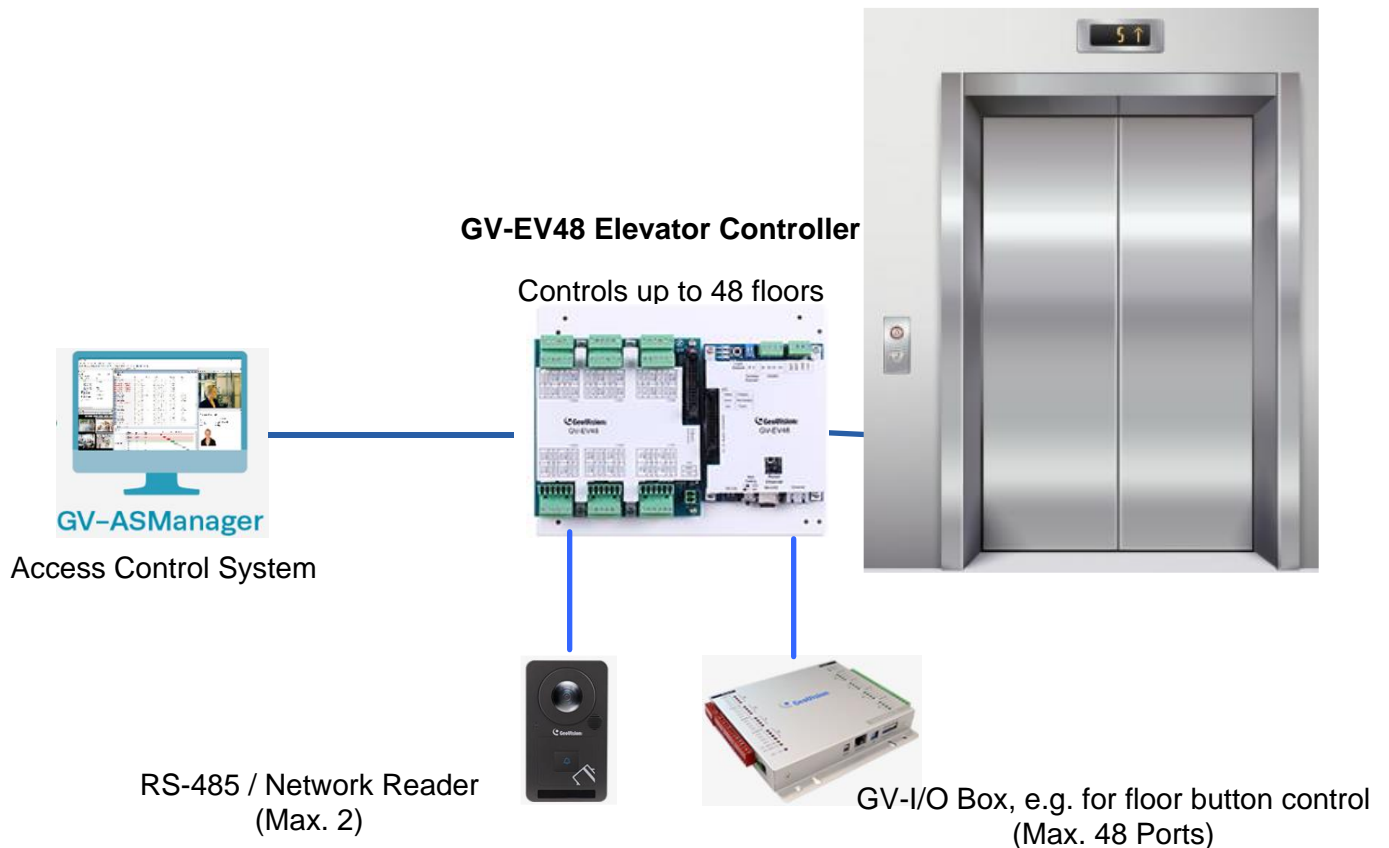

Specifications

System Requirements		
GV-ASManager Version	GV-ASManager V4.1 or later	
Hardware		
CPU	32-bit ARM7TDMI	
Number of User Cards	40,000 cards	
Event Buffer	1,000,000 events and log data	
Power	AC 100~250 V, 50~60Hz	
RS-485 Interface	1 RS-485 interface for GeoVision RS-485 readers (max. 2) and GV-IO Box 4/8/16 Ports (max. 48 I/O ports)	
TCP/IP Interface	1 TCP/IP interface for GeoVision network readers	
Communication	TCP/IP	
Battery	Built-in battery	
Output	GV-EV48-24 Floors	24 relay outputs (30VDC, 1A; 125V AC, 0.3A)
	GV-EV48-48 Floors	48 relay outputs (30VDC, 1A; 125V AC, 0.3A)
Operating Temperature	0~65°C / 32 ~ 149°F	
Operating Humidity	10% ~ 90% RH (non-condensing)	
Dimensions (W x H x D)	210 x 170 x 55 mm (8.27 x 6.69 x 2.17 in)	
Weight	610 g (1.34 lb)	
Certification	CE, FCC, RoHS	

Note:

1. The RS-485 interface supports 3rd-party Wiegand readers via GV-WTR Wiegand converters.
2. Specifications are subject to change without notice.

Options

Optional devices can expand the capabilities and versatilities of your GV-EV Controllers. Consult your sales representative for more information.

GV-AS ID Card & GV-AS ID Key Fob	GV-AS ID Cards and GV-AS ID Key Fobs are ideal for business and residential environment, where access control is important for security reasons. 125 kHz and 13.56 MHz cards and key fobs are available.
GV-CR420	GV-CR420 is a card reader with a built-in 4MP wide angle IP camera. The card reader recognizes identification cards and transmits live view through network connection.
GV-I/O Box	GV-IO Box provides 4, 8 or 16 inputs and relay outputs. It supports both DC and AC output voltages, and provides a USB port for PC connection.
GV-Reader 1251	GV-Reader 1251 is a card reader that uses a 125 kHz frequency. It has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.
GV-RK1352	GV-RK1352 is a card reader with keypad that uses a 13.56 MHz frequency. The reader has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.
GV-R1352	GV-R1352 is a card reader that uses a 13.56 MHz frequency. The reader has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.
GV-DFR1352	GV-DFR1352 is a card reader that uses a 13.56 MHz frequency. The reader has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.
GV-GF Fingerprint Reader	The reader supports three operation modes: Fingerprint Only, Fingerprint + Card and Card Only. In Fingerprint Only mode, the fingerprints are enrolled through GV-ASManager. In Fingerprint + Card mode, the fingerprint templates are stored on the user card. In Card Only mode, the users only need to swipe the card to be granted access. Readers with optical and capacitance sensors are available.
GV-WTR	GV-WTR is a converter designed to support Wiegand interface to RS-485 interface, thereby enabling 3rd party readers to be connected to RS-485 GV-Controllers. Through the GV-WTR, Wiegand-interface readers can be easily combined to access control systems for improved versatility.
Cabinet (GV-AS Iron Box)	With the cabinet (Dimension: 383.5 x 443.5 x 112.2 mm / 15.1 x 17.5 x 4.4 in), GV-AS Controllers can be mounted directly to a wall or recessed into the wall.

Packing List

- GV-EV48 – 24 Floors / 48 Floors
- Power Adaptor 12V DC / 3A
- Power Cord
- Battery Cable
- Screw x 8
- Hex Nut x 8
- Hex Pillar x 8
- Micro SD Card 2 GB
- Software CD
- Warranty Card