




GV-Welcome Mobile App.

Contents

Compatible Products	2
1. Specifications	2
2. Getting Started	3
2.1 Connecting to GV-AI FR / GV-AI Server.....	4



GV-Welcome

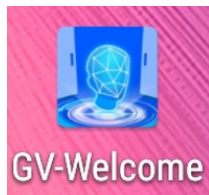

GV-Welcome mobile app is used for connecting to AI video analytics software GV-AI FR / GV-AI Server remotely to display a welcome screen on Android TV boxes / mobile devices.

When a person enters the premises, the corresponding face attribute results, along with a predefined image, can be displayed on the connected Welcome screen for greeting purposes.

Compatible Products

- [GV-AI FR](#): AI video analytics software specially for face recognition
- **GV-AI Server**: AI video analytics software for face recognition and smart retails

Note: When using GV-Welcome app, only one channel of GV-AI FR / GV-AI Server can be connected to a GV-Welcome at a time.

1. Specifications

Supported OS	Android 5.0 or later
Device Supported	Mobile phone, Tablet, TV box
Default Port	10000



2. Getting Started

Download **GV-Welcome** app from [GeoVision website](#), and install it onto an Android TV box / mobile device.

Tap the GV-Welcome icon in your app list. The main screen appears.







2.1 Connecting to GV-AI FR / GV-AI Server

Prior to using GV-Welcome app, make sure it is connected to the same LAN as the GV-AI FR / GV-AI Server.


1. Tap **Network Info** from the main screen of the GV-Welcome app. The IP address and authentication code are displayed.

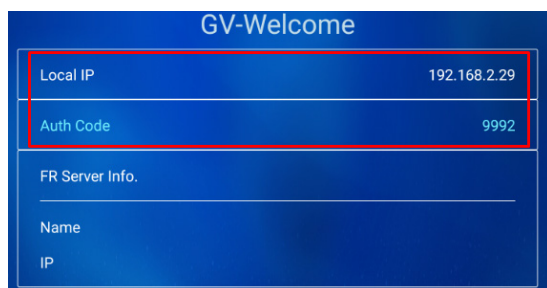

2. On the **Welcome Settings** page (**Dashboard > Notify Settings > Welcome**) of GV-AI FR / GV-AI Server, select the camera channel to be displayed by GV-Welcome from the **Camera** dropdown list and click **Welcome Box Settings**.

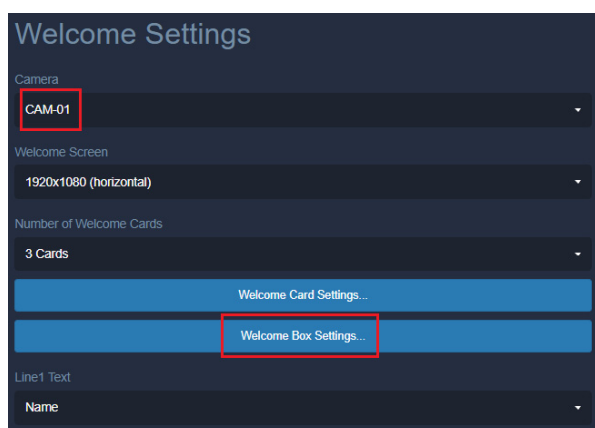

3. Select **Enable**, select a type of **Layout Style** and type the **IP Address** and **Authentication Code** of the GV-Welcome app, as displayed by Step 1.

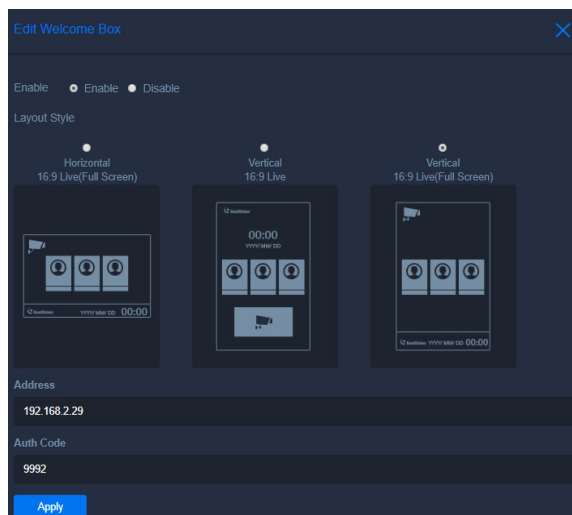



4. Click **Apply**.

Once successfully connected, the Name and IP address of the GV-AI FR / GV-AI Server are displayed.

The screenshot shows the 'GV-Welcome' interface with the following information:

Local IP	192.168.2.29
Auth Code	9992
FR Server Info.	
Name	FR Server-SK
IP	192.168.2.249

The 'FR Server Info.' section is highlighted with a red border in the original image.

To display the welcome screen, tap **Welcome Screen**

Additional Option

- **Reset Authentication** : Resets the authentication code of the GV-Welcome app. When reset, any connection previously established becomes invalid.

Note: For additional settings related to the welcome screen, see [4.4.1 Welcome Settings in *GV-AI FR User's Manual*](#) and [4.2.1 Welcome Settings in *GV-AI Server User's Manual*](#) respectively.



Scan the following QR codes for product warranty and technical support policy:



[Warranty]



[Technical Support Policy]