

Cordcutter TV Wi-Fi Setup

Connect Cordcutter TV to Wi-Fi

Use this procedure to connect Cordcutter TV to your home Wi-Fi router. This is done from your iPhone, iPad or Android device. *You need to download and install the Hauppauge myTV app from the Apple app store or Google Play before you start the Wi-Fi setup.*


 
 
Note: if you want to use a wired Ethernet connection to Cordcutter TV, simply plug in your Ethernet cable into the back of Cordcutter TV, and skip to Step 11.

Before you start:



- Make sure you have an iPhone, iPad or Android phone or tablet available (one of these devices is needed to setup Cordcutter TV with your Wi-Fi router)
- Download and install the **Hauppauge myTV app** from the Apple app store or Google Play store on your device
- Have your home Wi-Fi router password available. Cordcutter TV can use dual-band 802.11a / b / g / n Wi-Fi routers. **We recommend at least an 'n' or 'a/c' router for best WiFi performance.**

First time setup Cordcutter TV

1. **Push and hold the reset button on the back of Cordcutter TV while you plug in the power supply.** Keep the reset button depressed for ten seconds. This will cause Cordcutter TV to start the Wi-Fi configuration.
2. **Wait until the Green LED on the front of Cordcutter TV turns on.** This takes about 35 seconds after you release the reset button.
3. **Connect your Apple or Android device to Cordcutter TV by Wi-Fi**
On an Android device, iPhone or iPad, go to **Settings -> Wi-Fi** and under **Choose a network**, select **Cordcutter TV** with a number after the name (example: **CordcutterTV_6b76**).
You will now have your Apple or Android device connected directly to your Cordcutter TV over Wi-Fi.

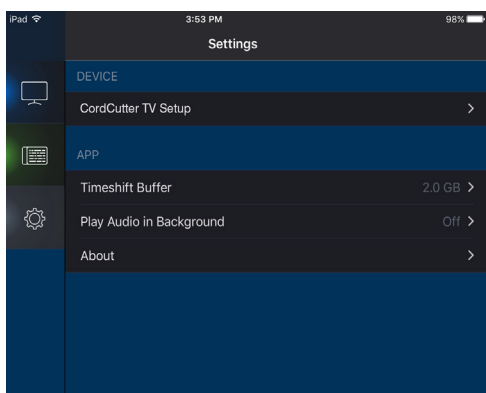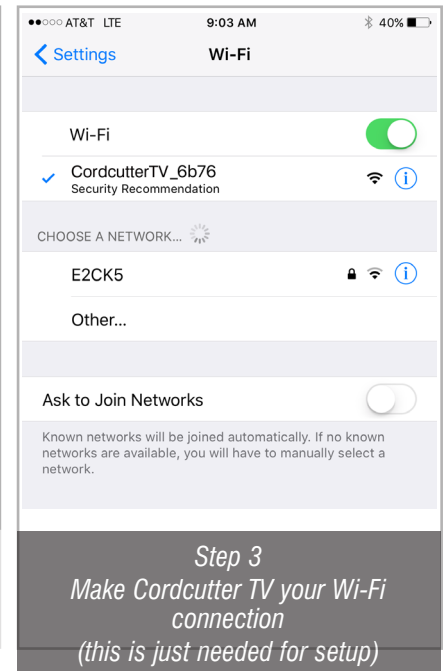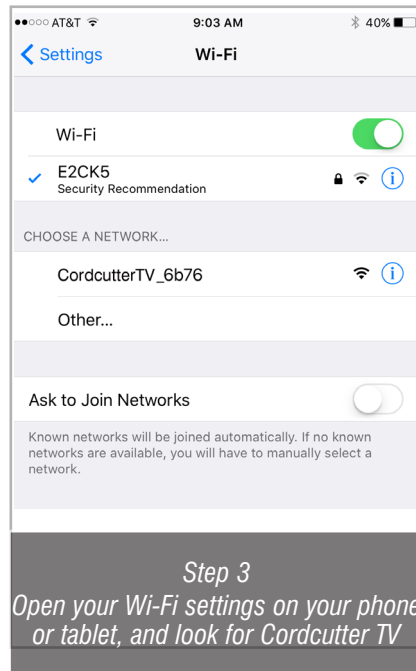


Steps 4 and 5
To start the setup, in Settings, select **Cordcutter TV Setup**

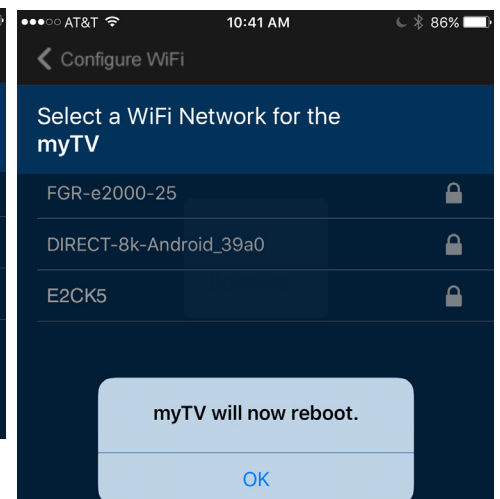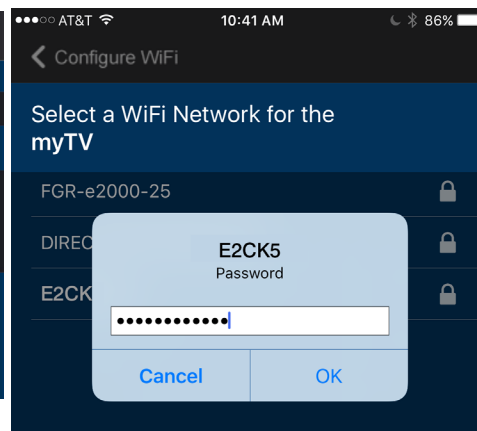

Step 10
You will see **myTV will now reboot.**
Select **OK.**

4. On your Apple or Android device, open **Hauppauge myTV app** and select the **Settings menu** (the gear button).
5. Under **DEVICE**, select **Cordcutter TV Setup**.
6. The myTV app will now scan your WiFi network for the Cordcutter TV from **Step 3**. Select **Setup WiFi**.
7. In the **Select a WiFi Network for the myTV**, select your home Wi-Fi network. If your WiFi network does not appear, tap Back and then **Setup WiFi** again.
8. **Enter your Wi-Fi password**. Select **OK**.
9. You will now see a message **Cordcutter TV will now reboot**. Click **OK**.
It takes about 45 seconds to reboot. Once rebooted, the light on the front of Cordcutter TV should be green.
10. **Connect your iPhone/iPad/Android device to your regular home router**.
On an iPhone or iPad, go to **Settings -> Wi-Fi** and under **Choose a network**, select your home Wi-Fi network.
11. Go back to the **myTV app** and under **Device**, you should now see **Hauppauge Cordcutter TV ATSC** listed.
12. In the **myTV app**, scan for channels (in the Settings menu). Scanning channels takes many minutes, and **your phone or tablet needs to be running the myTV app for the entire time of the scan**.

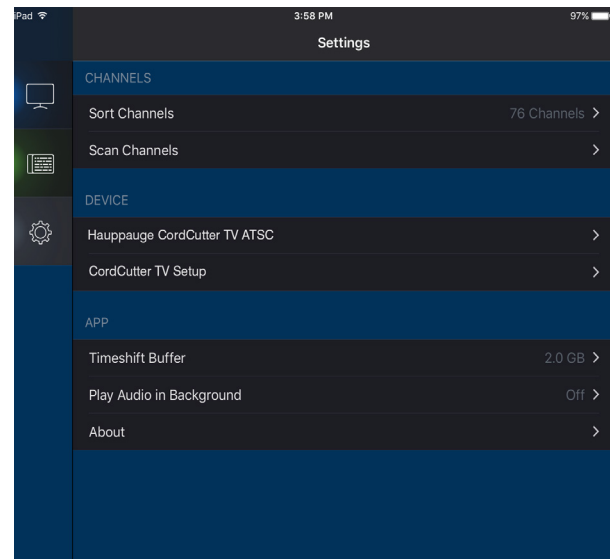

Step 12

*After Cordcutter TV reboots, you should see **Hauppauge Cordcutter TV** listed under **DEVICE**. Now you can **Scan Channels**.*

Setting up Cordcutter TV with a second (or more) devices

When setting up Cordcutter TV on a second or more devices, you can simply **install the myTV app on your device**, open the myTV app and within a minute or so you will see your **Cordcutter TV listed under Devices** (Step 11). **Please be patient!** This discovery takes a minute or so.

 
Once you see Hauppauge Cordcutter TV listed under Devices, you will need to scan for channels (Step 12).

To reset the Wi-Fi configuration

Push and hold the reset button on the back of Cordcutter TV while you plug in the power supply. Keep the reset button depressed for ten seconds. This will cause Cordcutter TV to wipe out its Wi-Fi configuration.

To connect Cordcutter TV via an Ethernet connection

Plug an Ethernet cable into the back of Cordcutter TV, and the other end into an Ethernet port on your router. Remove the power plug from Cordcutter TV, and the replace it. Then launch the myTV app on iOS or Android. Within a few seconds, your myTV app should find Cordcutter TV. If it does not, make sure your iOS or Android device is connected to the same router over Wi-Fi as the Cordcutter TV is connected via Ethernet.

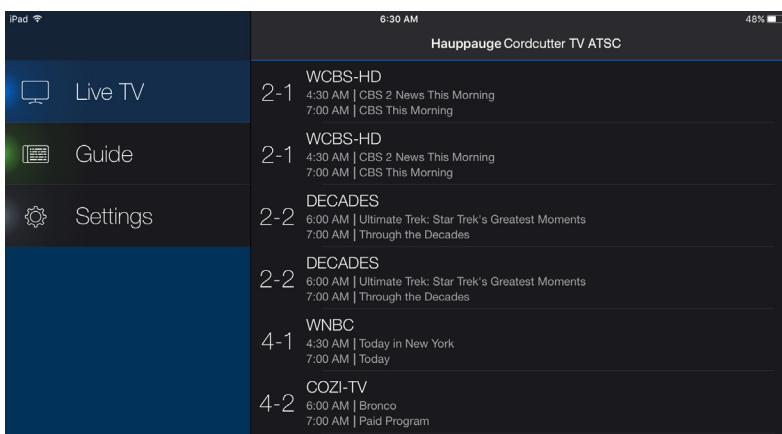

Watch live TV!

*After scanning for channels, you will see your channel list
After a few minutes, the guide data will start to appear, showing you what
is on your TV channels*