


## Replacement Parts / Repuestos

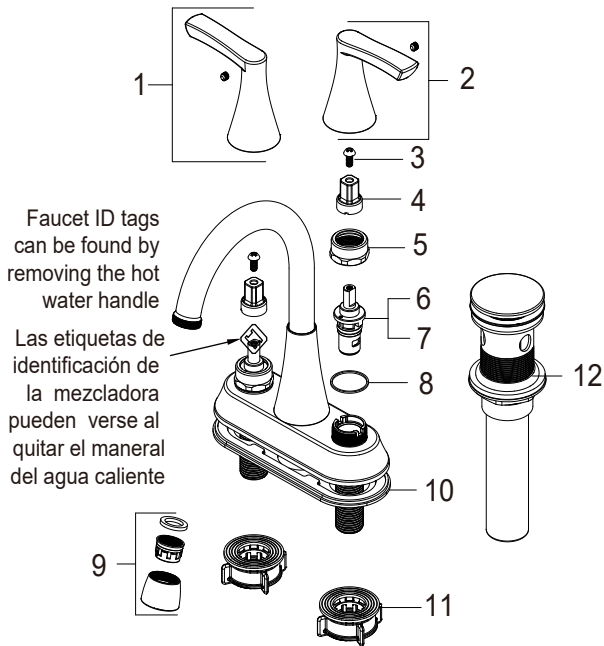

| Part<br>Pieza | Description<br>Descripción                               | Part #<br>Pieza # | USN #<br>USN # |
|---------------|----------------------------------------------------------|-------------------|----------------|
| 1             | Handle H / Llave H                                       | 186925            |                |
| 2             | Handle C / Llave C                                       | 186935            |                |
| 3             | Screw / Tornillo                                         | 186858            |                |
| 4             | Inverter / Inversor Bonnet                               | 186855            |                |
| 5             | Bonnet Nut / Tuerca del Bonete                           | 158765            |                |
| 6             | Cartridge H / Cartucho H                                 | 186936            | 322096815      |
| 7             | Cartridge C / Cartucho C                                 | 186926            | 322096440      |
| 8             | Washer / Arandela                                        | 186847            |                |
| 9             | Aerator / Aireador                                       | 186867            | 322096644      |
| 10            | Gasket / Junta                                           | 186860            |                |
| 11            | Quick Install Nut / Tuerca de Instalación Rápida         | 186846            | 322096434      |
| 12            | Press Pop-Up Assembly / Presiona el Ensamblaje Emergente | 183961            | 322097821      |

Part #: 158715  
USN #: 320280244