


Digital Calendar Day Clock

Congratulations you have the latest of today's clock technology. It offers the clearest "Easy to Read" display using the latest 8" LED screen
8 built-in languages - Can be used Self-Standing or Wall hanging.

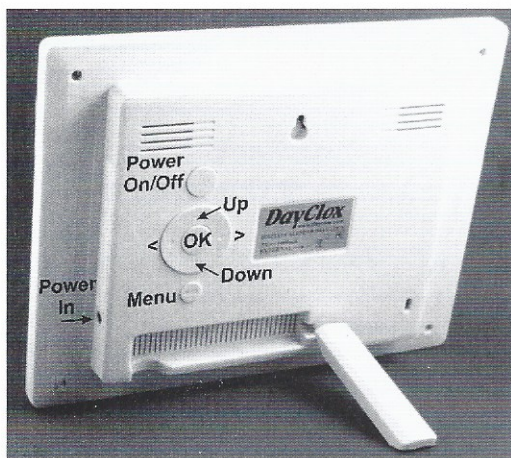

Back of the clock. Indicates On/Off - Control & Menu buttons.

Switching On:

The clock has an Auto Switch-ON facility when connected to the power supply. If required to **POWER On/Off** press and hold the button for a few seconds.

The Welcome screen clears after about 7 seconds and the calendar display Day, Time, Date, will appear. Remember the power supply must remain connected at all times. The screen may have an anti-scratch plastic protective cover, please peel off and remove it.

The clock requires to be connected to the power supply at all times, with the power adaptor supplied. The clock is not Radio Controlled. It does not change Daylight Saving time automatically. This will require changing manually [See **Set Time**].

DayClox equipment is guaranteed for a period of 12 months from the date of purchase. Statutory terms and conditions does not include accidental damage, misuse, or any form of tampering. Any damage to the hidden security seal will make a warranty null and void.

Care should be taken not to apply pressure to the LED Screen. In the event of product malfunction, contact your vendor for instructions.

Digital Calendar Day HDMI Clock

The setting and operation of the HDMI clock version is the same and differs only if or when connected to a TV or Monitor to provide a large display via the HDMI cable. Connection is automatic, requiring only the correct source to be selected on the receiving device.

(Please Note: The USB connection is not for consumer use, (it is for service upgrading only). Night dimmer facility is not transferred to the extended display).

IMPORTANT: Keep with clock for future reference. Instructions also available at www.dayclox.com

Making Changes to any of the settings follow these instructions:

Press the MENU button to activate the menu display, press the up or down button to navigate options and settings from the Top line:

A separator (Comma) is used for the day [28,] to assist with longer date format in different languages.



Line 1, Set Date: menu is highlighted in **Yellow** between the markers. Pressing buttons < or > (left or right) a Blue Box will highlight the section of the settings that can be changed < 14 - 02 - 2014 > Use the UP or DOWN buttons to adjust the day, then press buttons < or > to highlight the month < 14 - 02 - 2014 > then the year < 14 - 02 - 2014 >

(Note: only changes can be made to the highlighted Blue Box selected).

Line 2, Clock Mode: - Press the **OK** button to select **24hr** Mode:

Line 3, Set Time: Use the UP / DOWN button until the line changes to Yellow, then press the < or > to highlight the hours in a Blue Box < 11 : 00 > use the UP or DOWN buttons to adjust, then press < or > to adjust the minutes. < 11 : 17 > press the UP or DOWN buttons to adjust, Press OK or Menu button to complete the settings.

Line 4, Language: Press UP / DOWN button to highlight in **Yellow** and press the < or > buttons to forward to the language preferred then Menu button to exit.

Line 5, Calendar Mode: (Hidden below Language Choice) press the < or > to select the required Calendar Mode:

< British Mode > 28, September 2014 - or - < American Mode > September 28, 2014. then press Menu to exit.

Changing the display for - a.m. / p.m. Press Menu to **Clock Mode** and select **12 hr.** (It is important to select 24hr Mode before setting the time so the clock knows the difference between 3 a.m. and 3 p.m. - 3 p.m. = 15 hrs in the 24 hour mode.

Press **Menu** to complete or after 10 seconds the menu closes automatically.