



AirTrack Configuration Guide for CellarTracker

For your new AirTrack scanner to work with CellarTracker, you need to configure it to read Interleaved 2 of 5 barcodes. **Scan the following barcodes, in order, to configure your scanner.** Additionally, if you would like to disable the scanner from always being enabled while placed in the stand, scan configuration barcode #3. If you need further assistance connecting the scanner to your computer or configuring it, please contact AirTrack support at (888) 622-4982. Each purchase includes 30 days of free technical support.

1. Enter Scanner Configuration Mode



2. Enable Interleaved 2-of-5 (6-10 digits)



3. *OPTIONAL*: Disable Auto Recognition in Stand



4. Exit Scanner Configuration Mode



Bluetooth Configuration Notes (AirTrack S2-BT only)

To pair the scanner directly with your computer via Bluetooth, please follow the instructions in the [Quick Reference Guide](https://airtrack.com/wp-content/uploads/2017/03/AirTrack-S2-BT_qrg_eng.pdf) (https://airtrack.com/wp-content/uploads/2017/03/AirTrack-S2-BT_qrg_eng.pdf) starting on page 11. Choose the option to **Link to PC in HID** mode. The default PIN code, which you may need to enter on your computer, is **1234**.

Full Manual

The full user manual for the device is available to download at the following location:

<https://cdn.datalogic.com/Download?iddwnfile=16149>