

# LINK WIRELESS SENSORS TO THE AUTO DIALER

All the units included in this package have been factory linked to the auto dialer. You may link additional sensors, remote controls or sirens to your auto-dialer. In certain circumstances you may have to re-link existing parts.

Make sure to test the reception range of all sensors before permanently mounting them. The approximate range for sensors included with this kit is 60 meters (200'). Walls and other obstructions may interfere with reception.

You can link a total of 16 sensors and 8 remote controls to the auto-dialer .

The system has a total of 10 zones for wireless sensors and remote controls:

- Zone 1-8: link one wireless sensor per zone, they will trigger the auto-dialer in armed mode only.
- Zone 9: Learn up to 8 wireless sensors and they will trigger the auto-dialer in armed mode only.
- REMOTE Zone (LCD icon REMOTE) is the remote control zone, you can link up to 8 remote controls..

NOTE: If you wish to change the factory programmed zone location of the sensors they must be deleted from their current zone and re linked to a new zone (see instructions below)

## LINKING WIRELESS SENSORS OR REMOTE CONTROLS TO THE AUTO DIALER

- Enter your password and press the PROG button three (3) times.
- The "LEARN" icon will flash on the screen.
- Press ARM/DISARM to confirm, the system will go into learning ID code mode and zone 1 icon will flash.
- Press the \*/UP and #/DOWN buttons to select the zone you wish to learn your sensor to. When the screen flashes NO ID CODE, that means that zone is empty and you can link a sensor. If the screen flashes FULL then you already have a sensor linked to that zone. You can either choose another zone or press DEL./PAUSE to delete the sensor in that zone and link the new sensor. Remote controls must be linked to the REMOTE zone.
- Press ARM/DISARM to confirm that this is the zone you want the sensor to be linked with
- Trigger the sensor or remote control that you are trying to link as follows:
  - Wireless motion detector SK615, by moving hand in front of sensor to send signal (please see note below).
  - Wireless door/window sensor SK621 & SK625, opening and closing the magnetic switch will send signal.
  - Wireless water alarm sensor SK616, put sensor in water to trigger and send signal.
  - Wireless temperature sensor SK627, by pressing the test button.
  - Garage Alert SK623, opening the garage door will trigger and send signal.
  - Remote control SK629, pressing any key will trigger and send a signal.
- You will hear a long beep from the auto-dialer to confirm that linking was successful and the screen will display FULL for zones 1-8. Zone 9 will display the number of sensors in the zone up to a maximum of 8. The Remote zone will display the number of remote controls in the zone up to a maximum of 8.
- Press the PROG button seven (7) times to exit the setup mode.

NOTE: if you have linked a motion detector to your auto dialer, cover the lens of the motion sensor (place a towel over the sensor) before linking other items as the motion sensor will send a signal to auto- dialer every time you move.

# LINK THE AUTO DIALER TO THE INDOOR/ OUTDOOR SIREN

The Siren included in this package has been factory linked to the auto dialer.

Make sure to test the reception range of the siren before permanently mounting it. The approximate range for the indoor/outdoor siren included with this kit is 40 meters (130'). Walls and other obstructions may interfere with reception.

To re-link the auto-dialer to the siren:

- Remove the water resistant rubber cap on the bottom of the Siren, press and hold the LEARN button, release the button after hearing a single confirming "beep", the unit is now ready to link with the Auto Dialer
- On the auto dialer press the PANIC button.
- You will hear a long beep tone from the Siren to confirm linking was successful. If linking was unsuccessful you will hear four short beeps. Carefully repeat the steps.
- To unlink all auto Dialers, Sensors or Remote Controls from the Siren: press and hold LEARN button for 12 seconds, you will hear a long beep tone, all links will be deleted.