


# How to change key cylinder on model SK1215, BK1216, SKGLK, and HK01-I


**Step 1:** Insert a key from the front side. Skip the step if key is missing.



**Step 2:** Locate the brass color part in the back of key cylinder, insert a small flat head screw driver.

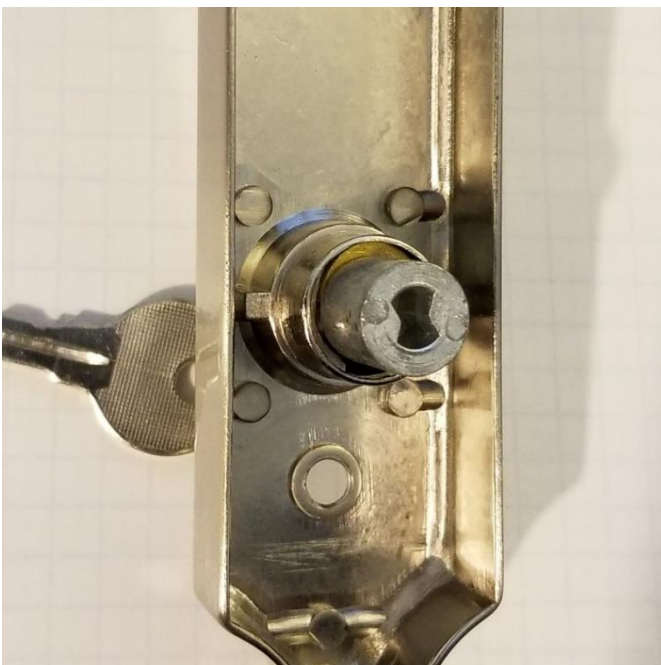

**Step 3:** Depress the brass color part, then push the key cylinder out.

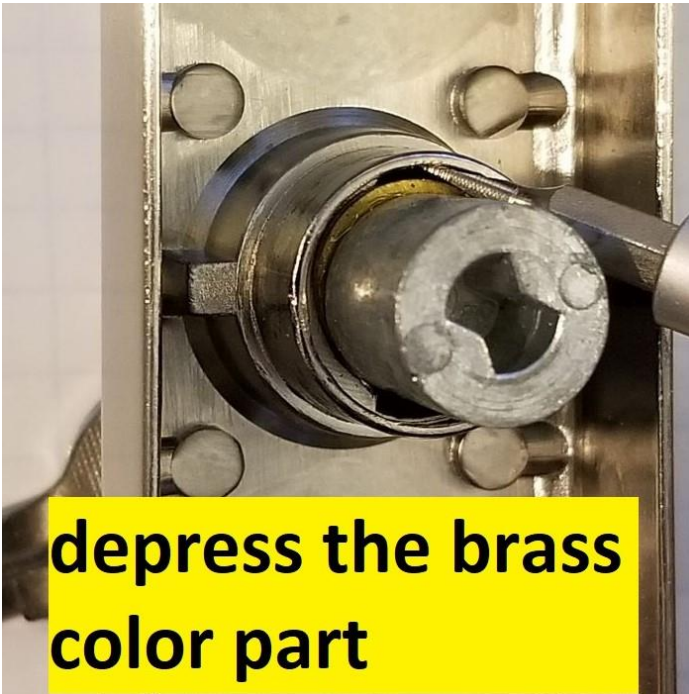

**Step 4:** Insert a new key cylinder from the front, depress the brass color part, then push the key cylinder in.

