



Bali Sliding Panels Measuring Instructions

Inside Mount

Inside mount blinds are installed inside the window casing or door, or wall to wall in a room. For inside mount recess requirements, see your designer or sales associate.

Measure the exact inside width of window casing from one inside edge to the other in three different places. Record the narrowest measurement.

Measure the exact height in three different places from top edge of opening to top of sill. Record the shortest measurement.

Measure the window diagonally in two places as shown. If the two diagonal dimensions are not equal, we recommend an outside mount application for optimal shade function and aesthetics.

Do not take deductions. Allowances are made at the factory to ensure a perfect fit.

Outside Mount

Outside mount blinds are installed outside the window casing, covering an area larger than the window itself.

Measure the exact width of window, including the frame if there is one. Add 3" for each side (6" total overlap) to ensure light control and privacy.

Measure the exact height of window from top edge of molding to bottom edge, or to top of sill if there is one. Add 3" to allow for adequate mounting area above the window.

If blind extends to the floor (i.e. to cover patio door) measure (as in step 2) and add 3" to height to allow for adequate mounting area above the window and deduct 1/2" for Roller, Solar and Roman materials for clearance so the panels do not touch the floor.

The factory makes NO allowances on outside mount.

NOTE: If you want the entire window uncovered when blinds are fully open, please see your designer or sales associate for "How to Measure for Uncovered Window".