


REMOTE KEY WITH PCC* – PERSONAL CAR COMMUNICATOR

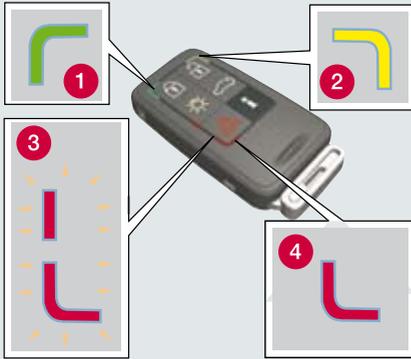

-  Locks the doors and trunk and arms the alarm.
-  Unlocks the doors and trunk, and disarms the alarm[^].
-  Trunk (press once to unlock, press twice to open trunk slightly).
-  Approach lighting illuminates lights in door mirrors, cabin, footwells, license plates. Turn signals and parking lights illuminate.
-  “Panic” alarm.
– Press and hold to sound the alarm. Turn off alarm with unlock button.

[^] Automatic relock occurs if no door/trunk is opened within 2 minutes after unlock.

PCC*

 Information about the car can be gathered within a range of 65 ft. (20 m).

– Press the button and wait for 7 seconds.

If the car is out of range when the button is pressed, the most recently stored status information will be shown.

- 1** Green light: Vehicle is locked.
- 2** Yellow light: Vehicle is unlocked.
- 3** Flashing red light: Someone may be in the vehicle.
- 4** Red light: Alarm has been triggered.

IGNITION MODES (MODES 0 AND I)



To access the following ignition modes: The brake pedal must **not** be depressed.



Mode Active functions

- Remote key inserted but not drawn into ignition slot – audio system and courtesy lighting.
- 0** Remote key drawn into ignition slot – audio system and courtesy lighting. Instrument/clock lighting, steering wheel lock/unlocked.
- I** Remote key drawn into ignition slot and **START** pressed briefly – power moonroof/windows, blower, ECC, wipers, 12-volt sockets in center console, Volvo Navigation System*.

To exit ignition modes **0/I** and turn off the vehicle’s electrical system: Press in the remote key. It will be partially ejected from the ignition slot.


STARTING THE ENGINE



– Insert the remote key as shown in the illustration, with the buttons upward and push lightly on it – the key will be drawn into the lock.



– Press the **START/STOP/ENGINE** button to start the engine

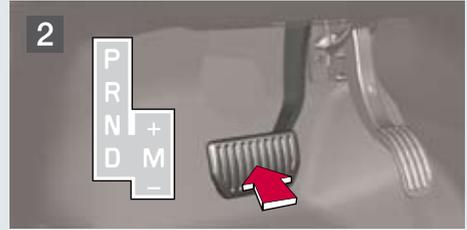

– Press the brake pedal.

COLDSTART

NOTE

After cold starts, your engine will idle at a higher speed for a short time.

SWITCHING OFF THE ENGINE AND REMOVING THE REMOTE KEY



1. Park the vehicle and press the **START/STOP/ENGINE** button to switch off the engine.

2. Press lightly on the remote key. It will be partially ejected from the ignition slot. The gear selector must be in the **P** position.

AUDIO SYSTEM



- 1 Press for on/off. Turn to adjust volume.
- 2 Select **AM**, **FM1**, **FM2**, **CD**, or **MODE**. Use **MODE** to activate Sirius satellite radio*, the accessory iPod interface or AUX for e.g.^A
- 3 Sound settings Press to select e.g., **BASS**, **TREBLE**, etc. – turn to adjust.

BLUETOOTH®

1. Make the cell phone searchable/visible.
2. Press the **PHONE** button on the audio system control panel briefly.
3. Select “Add phone” in the audio system display.
4. Select the cell phone to be connected.
5. Enter the numbers shown in the audio system display using the cell phone’s keypad.

^A **AUX** connector for e.g., mp3 player. Set mp3 player’s volume to medium for best sound quality.

RADIO

- 3 Turn to select a radio station.
- 4 Search for stations with the left/right arrows. Store up to 20 stations by holding in buttons **0–9** in **FM1** och **0–9** in **FM2**, until the stored station is confirmed in the display.
- 5 Autostore stations by pressing for 2 seconds. **AUTOSTORE** is displayed during the search. The 10 strongest stations are stored. Press **0–9** to select a station.

CD PLAYER


- 3 Turn to change tracks.
- 4 Change tracks with left/right arrows. Select **CD^B** with up/down arrows.
- 6 Press to eject current CD. Press and hold to eject all CDs^B
- 7 CD select^B. Press **1–6**.

^B Optional CD changer only.


HD RADIO

HD radio reception is subject to coverage limitations. See your Owner’s Manual for details.

FOLDING THE REAR SEAT BACKREST

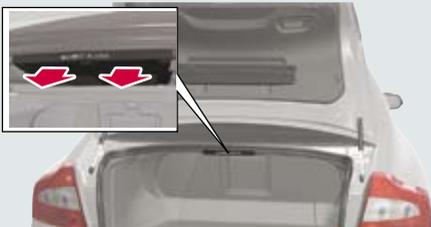

1. Pull the respective handles to fold down the left and/or right sections of the backrest.
2. The rear head restraints must be in the upright position.
3. Fold down the backrest.

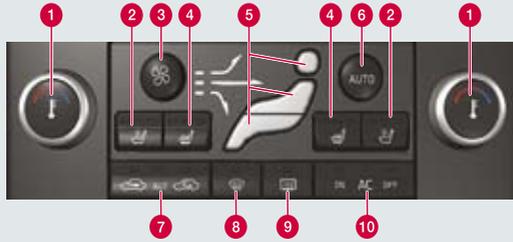

AUTOMATIC CONTROL

In **AUTO** mode, ECC controls all functions automatically and makes driving more pleasant with optimal air quality.

- 1 Turn the control to the desired temperature on the left/right sides of the cabin. The set temperature is shown in the display.
- 6 Press to automatically control the temperature and other functions.

MANUAL CONTROL

- 2 Driver/front passenger seat ventilation*.
- 3 Blower speed.
- 4 Heated driver/front passenger seat*.
- 5 Air distribution.
- 7 Recirculation
- 8 Defroster to quickly defog the windshield and side windows.
- 9 Heated rear window and door mirrors.
- 10 Air conditioning Off/On to cool the cabin and defog the windows.

STORAGE SPACES, 12-VOLT SOCKETS & AUX/USB* CONNECTOR




The 12-volt sockets in the cabin function in ignition positions **I** or **II**.
The 12-volt socket* in the trunk always functions.


AUX/USB* can be used to connect e.g., an mp3 player to the vehicle's audio system.

CAUTION

Using the optional 12-volt socket in the trunk with the engine switched off will drain the battery.

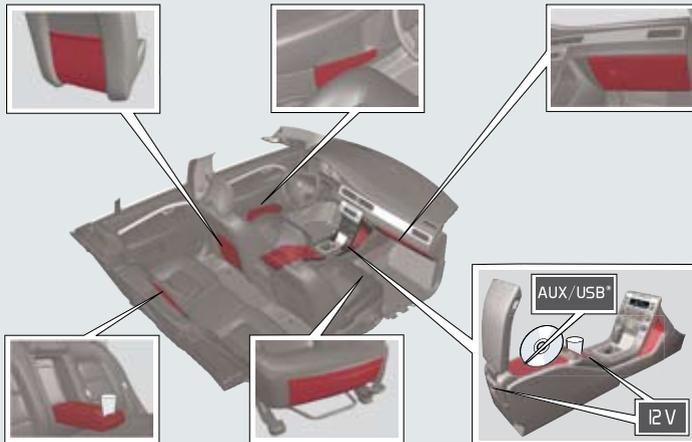

TRIP COMPUTER AND ODOMETER

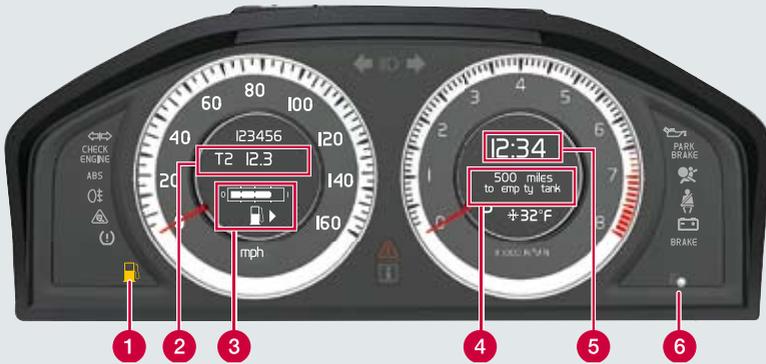

- 1** Low fuel level indicator
When the symbol illuminates, refuel as soon as possible.
- 2** The trip odometer display shows two separate trip odometers, T1 & T2.
- 3** Fuel gauge
The fuel filler door is on the right, as indicated by the arrow.
- 4** Trip computer display. Select function with (8).
- 5** Clock
Adjust with (6).
- 6** Multi-function control
Turn the control clockwise or counter-clockwise to set the clock.
A short press toggles between T1 & T2.
A long press resets the displayed odometer.



- 7** Press to display or erase a message.
- 8** Turn to show trip computer information alternatives.
- 9** A short press resets current function.
A long press resets all functions.

i NOTE

The display text **Miles to empty tank** is an approximation, based on recent average fuel consumption.

STEERING WHEEL ADJUSTMENT



! WARNING

Never adjust the steering wheel while driving.

REFUELING



– Press the button to open the fuel filler door

LIGHTING PANEL



- Display & instrument panel lighting.
- Front fog lights.
- Rear fog light (driver's side only).
- Automatic headlights. High beam flash only.
- Parking lights.
- Headlights: turn off when ignition is switched off, high/low beams.

- High beam flash
- Toggle between high/low beams. Home safe lighting.

EMERGENCY BRAKE ASSIST (EBA)



EBA is designed to provide full brake effect immediately in the event of sudden, hard braking. When EBA is activated, the brake pedal will go down more than usual.

– Press and hold the brake pedal for as long as necessary – there will be no braking effect if the pedal is released.

CAR CARE



Hand washing is gentler on the paint than an automatic car wash. Since the paint on a new vehicle may take several months to harden completely, we recommend washing the vehicle by hand during this period. Use clean water, a suitable car washing detergent and a sponge. Keep in mind that dirt or grit on the sponge can scratch the paint.

WIPERS AND RAIN SENSOR*



- Rain sensor **On/Off** with the lever in the **0** position.
- Turn to adjust intermittent wiper speed or rain sensor sensitivity where applicable.

- Single wiper sweep.
- Off
- Intermittent wipers. Turn (2) to adjust interval.
- Normal wiper speed.
- High wiper speed.
- Windshield/headlight washers.
- Displayed when the rain sensor is active.

ELECTRIC PARKING BRAKE



Setting

- Press the button. The light flashes until the brake is fully applied, then glows continuously.

Releasing

1. Ignition mode **0** or higher.
2. Press the brake pedal and pull out the button.

Release automatically

- Select a gear and begin driving. The parking brake will release automatically (the driver's seat belt must be fastened).

ADJUSTING THE FRONT SEAT



- 1 Lumbar support.
- 2 Backrest tilt.
- 3 Raise/lower the seat.
- 4 Raise/lower the front edge of the seat cushion.
- 5 Forward/rearward.
- 6 Folding down the passenger's seat backrest.

BLIND SPOT INFORMATION SYSTEM (BLIS)*



If the BLIS indicator lights illuminate even when there are no vehicles in the blind area, this may be due to light reflected from a wet road surface, the vehicle's own shadow against a large, light, smooth surface, or sunlight directly in the camera when the sun is low on the horizon.

In the event of a fault, **Blind spot syst. service required** will be displayed. See the Owner's Manual for other BLIS-related messages.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



When a low tire pressure warning message (**Low tire press. check tires** or **Very low tire pressure**) has been displayed and the tire pressure warning light () has illuminated, one or more tires has low inflation pressure.

Check the inflation pressure of all four tires with a tire pressure gauge as soon as possible and pump the tire(s) with low pressure to the recommended inflation pressure.

Refer to the inflation pressure tables in the section "Wheels and tires" in the Owner's Manual.



VOLVO S80

QUICK GUIDE



WELCOME TO THE GLOBAL FAMILY OF VOLVO OWNERS!

Getting to know your new vehicle is an exciting experience.

This Quick Guide provides a brief overview of the most common features and functions in your Volvo.

However, for the most up-to-date and detailed descriptions and instructions, as well as important warnings and other information not included in this folder, please refer to your Owner's Manual.

An asterisk (*) indicates optional equipment.

For additional information, contact Customer Service:

U.S.A.: 1-800-458-1552 www.volvocars.us

Canada: 1-800-663-8255 www.volvocanada.com