

“Tier 4 generator Controls” 3.5” x 5”, our part # 3003211

To start the generator:

1. Turn the battery disconnect switch on the rear of the generator to the ON position.
2. Move to upper deck to the generator main control panel.
3. Turn the “POWER ON/OFF” switch at the front of the Controller to the “ON” position
4. Push the “light” button once (if the Controller Display does not turn ON automatically)
5. Push the “reset” button once.
6. Push the “manual” button once.
7. Push the “start” button to start the generator.
Generator has a warm-up, which is approximately 10 minutes or until the coolant reaches a temperature of 100°. At that time, the generator will automatically switch into operating RPM mode.

To shut down the generator:

1. Push the “stop” button on the main control panel once to enter cool-down mode.
2. Wait for engine to cool down, and will shut off automatically
3. After the Generator has been shut off, wait about 2 minutes or 120 seconds to turn the “POWER ON/OFF” switch to the “OFF” position.
4. Turn the battery disconnect switch to the OFF position.