

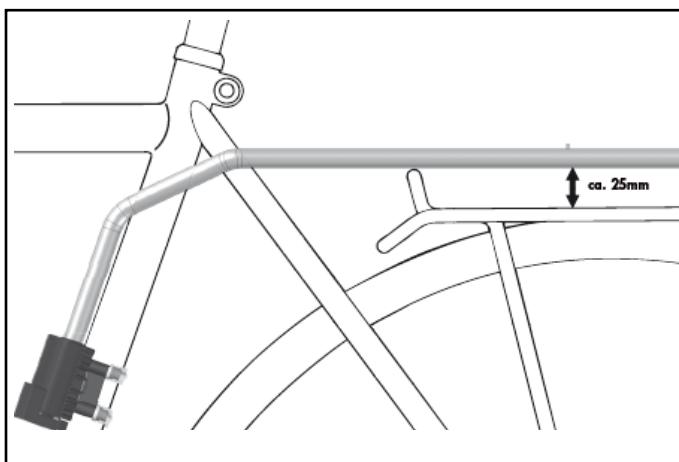
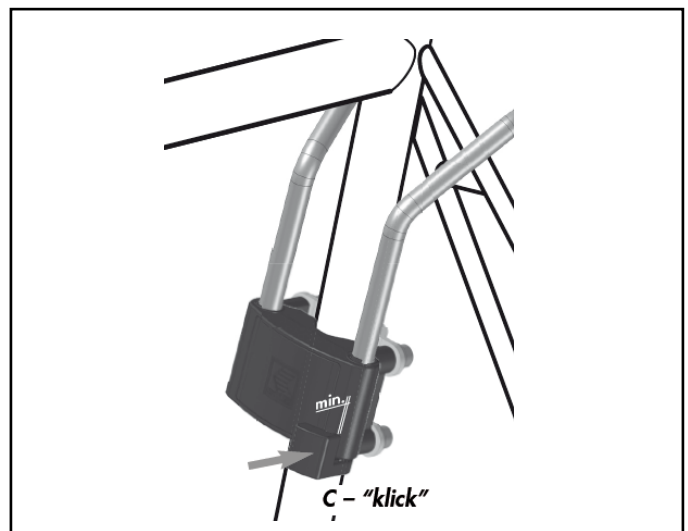
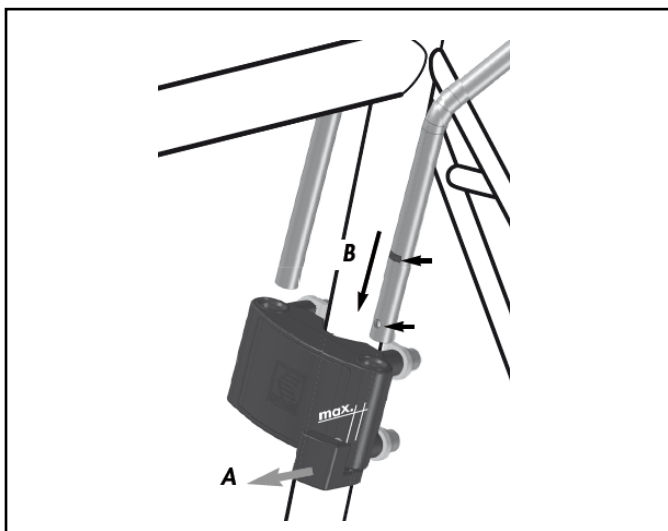


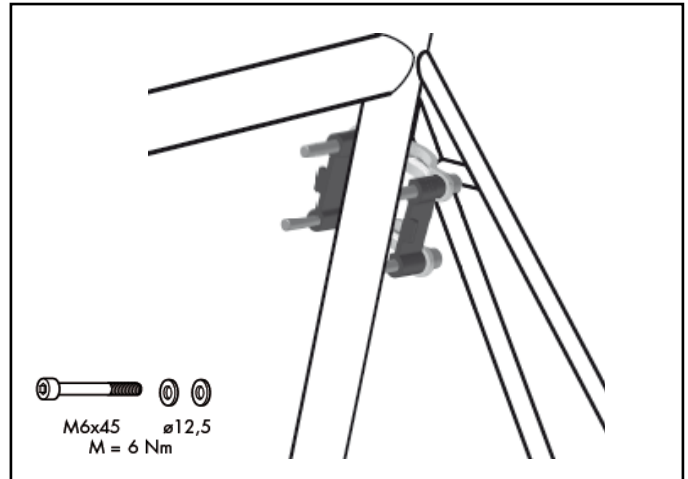

## 8947-933 Bike Seat Adapter

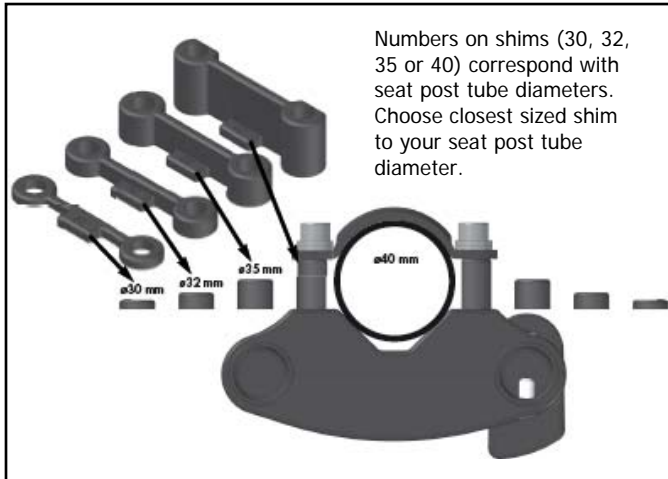

Position the bike seat so that the minimum distance between the bike seat frame and luggage rack, rear fender, or wheel is 25mm. The bike seat frame should be parallel to the ground. The load center (marked by a red point on your bike seat) may only be within 10cm behind the wheel hub. Please refer to your original bike seat manual for more information if needed.