



For detailed operation information, refer to the User's Guide.

Making a Voice Call

From the FleetBroadband Terminal

Direct:

Dial **0 0** <country code> <phone number> **#**
(you may also place calls from the phone book)

Redial:

Last called: Dial **0 * #**

Last answered: Dial **0 0 * #**

Local Handset:

Analog phone: Dial **0 3 0 1 #**

IP handset: Dial **0 5 0 1 #**



To the FleetBroadband Terminal

Direct:

Dial +870 <mobile number>

MobileLink:

Dial 1-877-202-0367 (N. America) or +1 718 269 7806 (Intl.)
Select a language, then dial <6-digit MobileLink number> #

Accessing the Internet

1. Turn on any computer connected to the terminal.
2. Enter **http://ut.bgan** into your web browser.
(the browser's proxy server settings must be disabled)
3. Click **Start Standard** on the web server dashboard.
(see "Using the Web Server")
4. Go to a website or open your e-mail program.
5. When you are finished using the Internet, return to the dashboard and click **Stop Standard** to disconnect.
6. Click **Refresh** and make sure the dashboard no longer shows an active data session.

Using the Web Server

Enter **http://ut.bgan** into the web browser to access the dashboard.

The screenshot shows a web server dashboard with the following sections:

- SIGNAL:** A progress bar showing signal strength (A).
- MESSAGE:** An envelope icon indicating a new message (B).
- MAIN MENU:** A list of navigation options including DASHBOARD, PHONE BOOK, MESSAGES, CALLS, SETTINGS, ADMINISTRATION, HELPDESK, and SITE MAP (E).
- PROPERTIES:** System information including Airtime provider, GPS position, Status, Satellite selection, Current satellite, Unit serial number, Software version, Local IP address, and IMEI number (C).
- SESSIONS TOTAL:** Cumulative time and data usage for standard voice inbound/outbound and standard data (D).
- ONGOING DATA SESSIONS:** Information about active data sessions (F).
- ONGOING CALLS:** Information about active voice calls (F).
- PROFILES ON LAN:** A section for LAN connections with a 'Start Standard' link (G).
- REFRESH:** A button to update the dashboard information (H).

Item Description

- A** SIGNAL: Quality of signal received by the antenna (more solid bars = better satellite signal strength)
- B** MESSAGE: An envelope icon indicates you have received a new SMS text message or voice mail
- C** PROPERTIES: General system info, including connection status, serial number, and software version
- D** SESSIONS TOTAL: Cumulative time connected via voice; total MB transferred via Standard data
- E** MAIN MENU: Click an item to view its options (example: click Messages to view SMS text messaging options)
- F** ONGOING DATA SESSIONS/CALLS: Currently active data and voice connections (click Refresh to update)
- G** PROFILES ON LAN: Data connections available to your computer (click Start to connect; click Stop to disconnect)
- H** REFRESH: Click to update the status information
IMPORTANT! Status does not update in real time

Getting Help

Airtime Support: Contact an Inmarsat airtime service provider
(phone number available from the dashboard's Help Desk)

System Support: Contact a KVH-certified dealer or distributor
(listed at www.kvh.com/wheretogetservice)

TracPhone FB150 Quick Reference Guide