



 
Part number 1898-7015-01 (403285)

2018 Ford Mustang


RTR Hood Vents

Component Identification

1. Hood Vent Outer RH	1
2. Hood Vent Inner RH	1
3. Hood Vent Outer LH	2
4. Hood Vent Inner LH	2

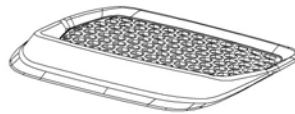


**NOTE:** In addition to common hand tools, this installation requires the use of a Plastic, No Scratch, Pry tool and a Panel Clip Tool or equivalent.

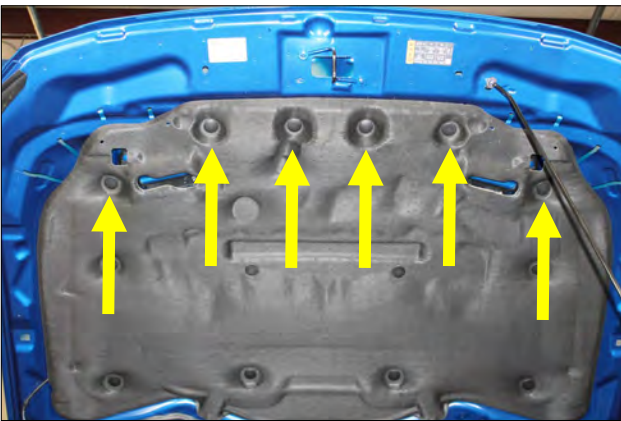


1. Open the hood and secure it using the prop rod. Using a panel clip removal tool, carefully pry out the top six hood mat retainers.



2. Pull the hood mat down to gain access to the OEM hood vent. Carefully use a marking pen, shop towel, or equivalent to hold the mat away from the hood.

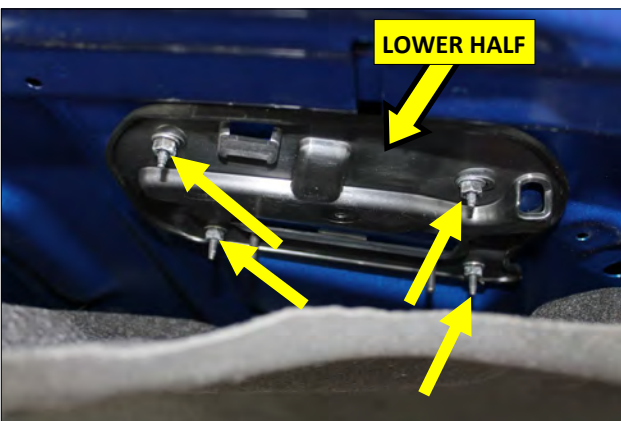

3. Remove the four nuts securing the vent to the hood and set them aside. The lower half of the vent will remain attached to the hood.

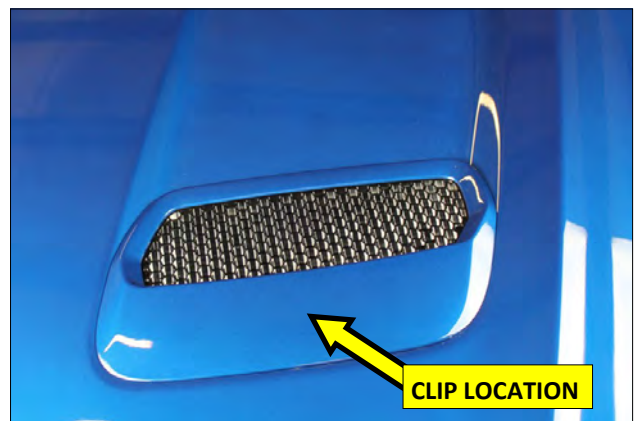


4. Carefully pull upward on the hood vent and remove it from the vehicle. **NOTE:** The vent is held in place with a single tension clip. It will require a considerable amount of force to release this clip. Proceed with caution.




5. On a work bench, use a shop towel to prevent scratching and turn the vent up side down.




6. Using a Plastic, No Scratch, Pry tool, separate the collector from the hood vent.

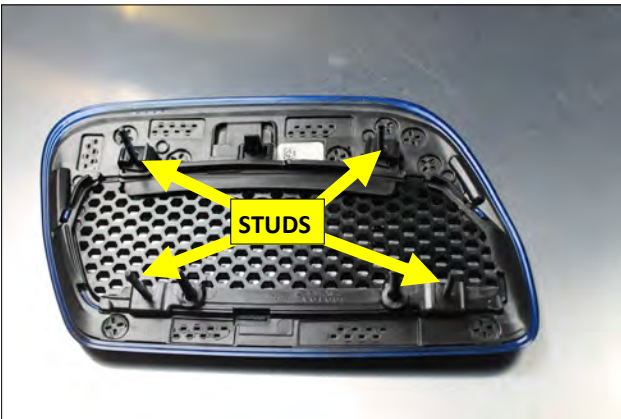


7. Slide the OEM studs out of the hood vent.

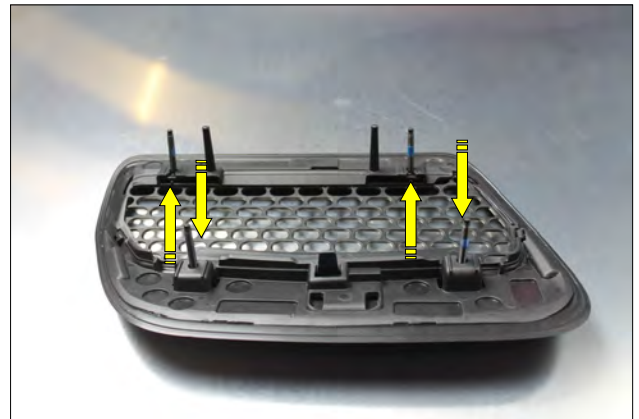


8. Transfer the OEM studs into the RTR Hood Vent.

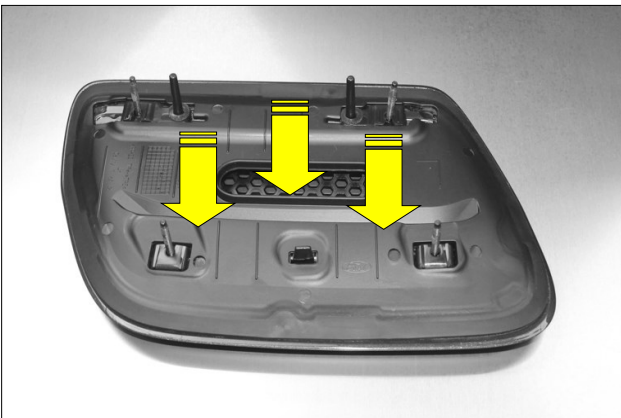


9. Install the OEM collector onto the RTR Hood Vent.

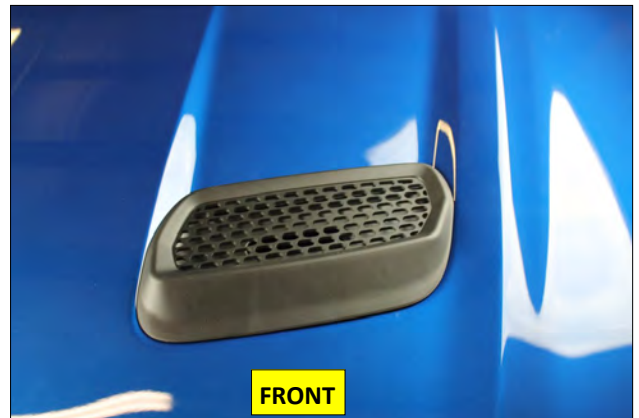

10. Install the RTR Hood Vent as shown, with the raised edge towards the front of the vehicle. Carefully press down to engage the factory tension clip.

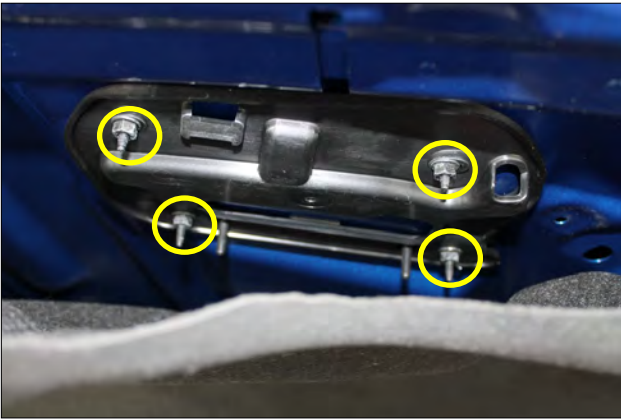

11. Secure the RTR Hood Vents using the OEM hardware removed in step 3.

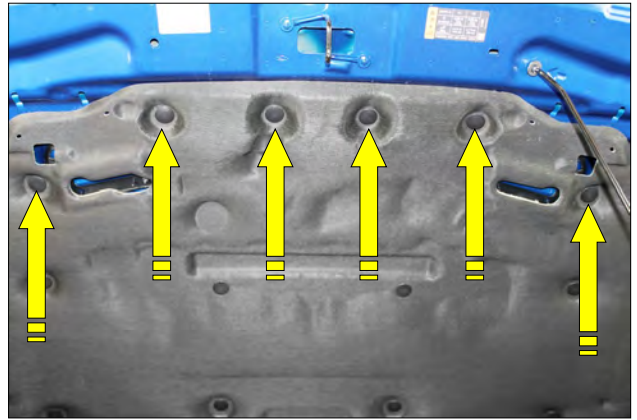

12. Repeat steps 3 through 11 on the opposite side of the vehicle. Resecure the hood mat using the OEM retainers.



13. Close the hood and clean the work site of any finger prints or smudging.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK