

HELPFUL HINTS FOR THE PROPER USE AND CARE OF YOUR DISHWASHER

(Keep in your Owner's Manual)

At Installation.....

- Make sure the house water heater setting is adjusted for 120°F to 150°F.
- For new homes, the hot water line should be flushed by the installer to clean out any debris that can clog the water valve.

During Use.....

- This dishwasher might not operate the same as your old model. It is very important that you become familiar with all the instructions for the correct operation of each wash cycle and option in the Owner's Manual.
- The water entering the dishwasher must be at least 120°F for effective cleaning. To check, turn on the hot water faucet nearest the dishwasher into a glass, place a candy or meat thermometer in the glass, and let the water run continuously until the temperature stops rising.
- Using hand (sink) dish detergent in the dishwasher will not clean your dishware and will cause the dishwasher to fill with suds and possibly leak suds and water out the door and onto the floor. Review the detergent and rinse aid instructions in the Owner's Manual.
- Use a rinse agent for best drying performance. The rinse agents remove spots and prevent new film buildup on your dishware.
- It is normal for a small amount of water to remain in the tub bottom after a wash cycle. This helps keep the pump seal lubricated.
- For models with electronic controls, if the power to the dishwasher is controlled by a wall switch, allow 30 seconds after turning the wall switch on before using the dishwasher to allow the dishwasher control to reboot.
- Normal operating sounds:
 - Detergent cup opening
 - Water entering dishwasher
 - The motor stops and starts at various times during the cycle
 - Drain pump sounds during water pump out

Regular Maintenance.....

- For best wash results, the filter assembly in the tub bottom must be checked regularly. Objects (fruit pits, bones, remaining food, etc.) may collect in the filter, and should be removed to avoid clogging the drain system. See the Owner's Manual for filter cleaning instructions.
- The dishwasher must never be used without the filters. Damage to the pump can result. Improper replacement of the filter parts might reduce the wash performance and may damage dishes and utensils.