

# courant®

by IMPECCA®

## Citrus Extractor

## Extractor de cítricos / Extracteur d'agrumes



## User's Guide

Guía del Usuario - Guide de l'utilisateur

MODEL: **CJC-1001**

[www.courantusa.com](http://www.courantusa.com)

# TABLE OF CONTENTS

---

IMPORTANT SAFETY INSTRUCTIONS.....	3
UNIT DIAGRAM .....	4
BEFORE FIRST USE.....	5
SETTING UP THE JUICER.....	5
SELECTING ACCESSORIES.....	5
JUICING .....	6
AFTER USE .....	6
JUICING ADVICE.....	6
CLEANING .....	7
TROUBLESHOOTING .....	7
90 DAY LIMITED WARRANTY (US).....	10
NOTES.....	11


# IMPORTANT SAFETY INSTRUCTIONS

---

**Read Before Operating:** Always read all instructions thoroughly before using the appliance.

- **Cord Management:** Unplug the appliance from the wall socket in case of a disturbance, after use, before cleaning, and when not in use for an extended period. When unplugging, always pull the plug and not the cord to avoid damage.
- **Avoid Excessive Pressure:** Applying too much pressure on the cone during juicing may cause the motor to seize.
- **Stable Placement:** Position the juicer on a level, easy-to-clean surface that is unaffected by juice splashes.
- **Heat Precaution:** Do not place the juicer on or near hot surfaces, such as hotplates or open flames.
- **Suction Feet Use:** The juicer's suction feet adhere best to smooth, flat, dust-free, and grease-free surfaces. For better adherence, slightly moisten the suction feet before placement. Avoid using on textured or sensitive surfaces to prevent damage.
- **Cleaning Guidelines:** Do not use abrasive or caustic cleaning products as they may harm the appliance's surfaces.
- **Electrical Safety:** To prevent electrical shock, never immerse the cord, plug, or appliance itself in water or other liquids.
- **Supervised Use:** The appliance should not be used by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are under the supervision of a responsible person.
- **Unplug After Use:** Always unplug the appliance when not in use and before cleaning. Allow it to cool before attaching or detaching parts.
- **Damaged Appliance Protocol:** Do not use the appliance if it has a damaged cord or plug, or if it malfunctions or has been damaged. Return it to the nearest authorized service facility for repair or adjustment.
- **Attachment Caution:** Using accessory attachments not recommended by the manufacturer may result in injuries.
- **Storage:** Only store manufacturer-recommended accessories inside the unit when not in use.
- **Cord Replacement:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazards.
- **Restricted Use:** This appliance should not be used by individuals with certain impairments or conditions (including children) unless they are under the direction of someone responsible for their safety. Ensure children are supervised to prevent them from playing with the appliance.

# UNIT DIAGRAM

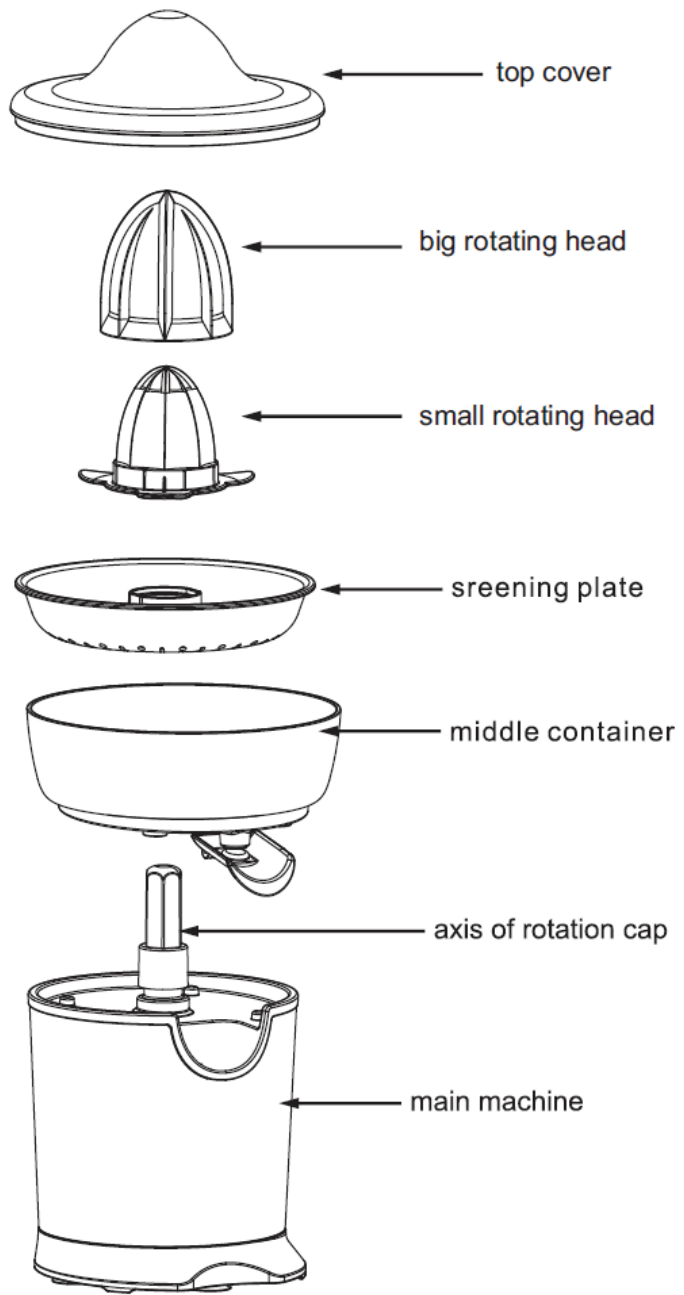

## BEFORE FIRST USE

---

1. **Danger:** Keep the packaging material away from children, material may cause choking or suffocation.
2. Unpack the citrus juicer and remove all of the packaging material.
3. Examine the juicer for visible damage and check that all of the parts are present.
4. Clean the appliance before using it for the first time.
5. Wipe the motor base with a damp cloth.
6. Before using the juicer for the first time, rinse the cones, strainer, juice container and transparent dust lid with warm water and a few drops of washing-up liquid.

## SETTING UP THE JUICER

---

1. Stand the appliance on an even surface that is easy to clean.
2. Unwind the power cord – to the length you require – from the cord storage compartment (underneath the juicer).
3. Connect the mains plug to a 230V, 50HZ outlet.

## SELECTING ACCESSORIES

---

1. Depending on the size of the fruit you are juicer, use the large or the small cone.
2. The **large cone** is suitable for juicing small citrus fruit, such as grapefruit, oranges etc.
3. The **small cone** is suitable for juicing small citrus fruit, such as lemons, limes etc.
4. Fit the small juicing cone directly onto the drive shaft.
5. If you wish to use the large cone, fit the small cone onto the drive shaft first, then fit the large cone over the top of the small cone.
6. The large cone will clip into place over the stirring wings of the small cone.
7. To separate the cones, pull the large cone up and off.

## JUICING

---

**Caution:** if you apply too much pressure to the juicing cone, the motor may seize.

1. Remove the transparent dust lid.
2. Fit the appropriate cone onto the drive shaft.
3. The juice appropriate cone onto the drive shaft.
  - If you wish to collect the juice in the container, press the spout upwards to close it.
  - If you want the juice to run straight into a glass, press the spout downwards to open it and place a stand under it.
4. Cut a citrus fruit in half and press the cut end of one fruit half onto the cone.
5. The juicer switches ON automatically when you press the fruit down and the cone starts to turn. The juicer automatically switches OFF as soon as you reduce pressure on the cone. The cone scrapes the pulp out and squeezes the juice from the fruit. The juice flows through the strainer into the juice container from where it can run into a glass (the spout must be open). The strainer keeps back thick pulp and seeds.
6. To maximize the quantity of juice extracted from a fruit, press a fruit onto the cone several times.

## AFTER USE

---

1. Remove cone, strainer, juice container and drive shaft from the appliance and clean them.
2. Unplug the appliance.

## JUICING ADVICE

---

1. Citrus fruit juices should be consumed immediately and never stored in a metal container.
2. Citrus juices are ideal for mixing. For example, you can mix orange juice with lemon juice for and extra vitamin C.
3. Freshly squeezed juice gives cocktails a particularly tangy twist and better flavour. Lemon juice is also delicious in hot tea and

additionally helps you build up your defenses when you have a cold.

## CLEANING

---


1. **Warning:** Unplug the citrus juicer before you clean it.
2. The motor base must not be immersed in water or other liquids or held under running water as this could give you an electric shock.
3. The juicing cones, strainer and juice container can go in the dishwasher.
4. Wipe the motor base with a damp cloth.
5. If you use the spout on the juice container frequently, pulp may build up in the spout. Therefore clean the spout after each use.

## TROUBLESHOOTING

---

Problem	Possible Solution
<b>Motor Won't Start:</b>	Ensure the mains plug is securely connected to the power outlet. Check if the appliance is properly assembled. Inspect for any obstructions or debris that might hinder the motor.
<b>Motor Stops During Juicing:</b>	Verify if there is an overload or excessive pressure applied to the cone. Check if the appliance has overheated and needs a cooldown period. Confirm that the appliance components are correctly assembled and secured.
<b>Juice Drips Despite Closed Spout:</b>	Inspect the spout for proper closure and alignment. Examine the spout for any damage or wear that might cause leakage. Clear any accumulated pulp or debris that could prevent proper sealing.
<b>Checking Power Connection:</b>	Ensure the mains plug is fully inserted into the socket outlet. Test the power outlet with another appliance to rule out socket issues.

<b>Excessive Pressure on Cone:</b>	<p>Reduce the amount of force applied when pressing the fruit onto the cone.</p> <p>Check for any irregularities or damage on the cone that may require more force.</p>
<b>Pulp Obstruction in Spout:</b>	<p>Remove and clean the spout to clear any pulp or residue.</p> <p>Regularly clean the spout after use to prevent buildup.</p> <p>Check for any damage to the spout that might trap pulp particles.</p>

	<b>Correct Disposal of this product</b>
	<p>This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.</p>

## CUSTOMER SUPPORT

---

Visit our website to contact us, find answers to Frequently Asked Questions, and for other resources which may include an updated version of this user's guide.



**[www.courantusa.com](http://www.courantusa.com)**

If you wish to contact us by phone, please be sure to have your model number and serial number ready and call us between 9:00am and 6:00pm ET, at +1 888-943-2111.

Keep tabs on Courant's newest innovations & enter contests via our social network feeds:

 [www.facebook.com/Impecca/](http://www.facebook.com/Impecca/)

 [www.instagram.com/impecca/](http://www.instagram.com/impecca/)

 [@impeccausa](https://twitter.com/impeccausa)

# 90 DAY LIMITED WARRANTY (US)

## **courant.** 90 DAYS LIMITED WARRANTY

Courant® warrants this product against defects in material and workmanship to the original purchaser as specified below provided that the product is registered online within fourteen (14) days of purchase.

**PARTS – if the product is determined to have a manufacturing defect, within a period of six (90) ninety days from the date of the original purchase, Courant® will repair or replace the product parts at no charge (for parts) to consumers in the U.S.A.**

Shipping costs to and from our warranty service center are the sole responsibility of the consumer.

To obtain warranty service by an authorized Courant® service center, please email us at: [service@courantusa.com](mailto:service@courantusa.com) to obtain a Repair and Maintenance Authorization (RMA) number and to locate the Warranty Service Center nearest you. Once authorized, you must mail the product to the authorized Courant® service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Courant® determine that the product is outside of the Warranty terms, Courant® will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out-of-warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable.

Courant® specifically excludes from this warranty any non-electric/mechanical attachments, accessories, and disposable parts including, but not limited to, outside case, connecting cables, batteries, and AC adaptors. Courant® reserves the right to repair or replace defective products with the same, equivalent, or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available, it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this, or any other, warranty. Further, Courant® hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell will void this warranty in its entirety.

In addition, this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Courant®; has been serviced by a non-authorized repair center of Courant®; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; has been cosmetically damaged; was not imported by Courant®; was not manufactured according to specification of the United States market; was damaged due to improper installation or neglect by the consumer; was damaged due to improper packaging in shipment to the Warranty Service Center; was damaged due to natural disasters; or if the serial number for the product has been removed or defaced.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO SIX (6) MONTHS PARTS AND THIRTY (30) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

COURANT® IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO COURANT®, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. COURANT® LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Courant® dealer, agent, or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Courant®.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

*Note: Our Warranty Service Center ships only within Continental U.S.A., excluding Alaska and Hawaii.*

**Important: Be Sure to Register Your Product at [WWW.COURANTUSA.COM](http://WWW.COURANTUSA.COM) within 14 Days**

**COURANT® • PA 18711 • [www.courantusa.com](http://www.courantusa.com) • [service@courantusa.com](mailto:service@courantusa.com)**

*\*Do not send any returns to this address, as they may be lost and this will delay your repair and service process.*

