



EDM-5782

2-Big Donut Maker

User's Guide

Table of Contents

IMPORTANT SAFEGUARDS..... 1

BEFORE FIRST USE.....3

HOW TO USE.....3

CLEANING AND CARE 4

STORAGE 4

30 DAY LIMITED WARRANTY 7

IMPORTANT SAFEGUARDS

1. READ ALL INSTRUCTIONS

2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. The appliance is not intended for use by young children or infirm persons without supervision.
6. Young children should be supervised to ensure that they do not play with the appliance.
7. Unplug cord from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. In order to avoid the risk of an electric shock
9. Never try to repair the appliance yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the appliance is used.
10. The use of accessory attachments is not recommended by the manufacturer, and may result in fire, electrical shock, or risk of injury to persons.
11. Do not use outdoors or for commercial purposes.
12. Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner or heated oven.
14. Extreme caution must be used when moving an appliance containing hot oil or other hot substances.
15. Unplug the unit when finished using.

IMPORTANT SAFEGUARDS

16. Do not operate by means of an external timer or separate remote-control system.
17. Do not use appliance other than for its intended use.
18. If the external flexible cable or cord of this appliance is damaged, it shall be exclusively replaced by the manufacture or his service agent or a similar qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

ATTENTION

- When using the donut maker for the first time, a slight smoke or odor may be emitted. This is normal with many heating appliances, and will soon subside. This does not effect the safety of your appliance. Allow for sufficient ventilation around the donut maker.
- A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. An extension cord may be used with care, however, the marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled by children or tripped over.

BEFORE FIRST USE

- **Read all instructions carefully and keep for future reference**
- Remove all packaging.
- Clean the cooking plates by wiping it with a sponge or cloth dampened in warm water.
- **DO NOT IMMERSE THE UNIT IN WATER AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACES.**
- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

HOW TO USE

1. Cover the Donut Maker and plug it into the wall outlet, you will notice that the power light goes on, indicating that the Donut Maker has begun preheating.
2. Allow your appliance to pre-heat until the ready light goes on. This indicates that the cooking plates have reached the correct temperature for cooking.
3. For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the donuts after cooking.
4. Pour mixture into pan holes as per recipes using a jug & spoon or fabric piping bag. Note: Do not use disposable plastic piping bags as these may melt if they come into contact with hot plates.
5. Gently close the lid, ensuring the latch locks in place. Do not slam the lid down as it may cause the mixture to run off the cooking plates.
6. Allow to cook for approximately 4- 6 minutes or until golden.
7. To remove donuts, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.

CLEANING AND CARE

- Always unplug the Grill Toaster and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Donut Maker for cleaning. Never immerse the Grill Toaster in water or place in dishwasher.
- Wipe cooking plates with a soft cloth to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Should any filling be difficult to remove, pour a little cooking oil onto the platen and wipe off after 5 mins when the filling is softened.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enter the cooling slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Do not immerse in water or any liquid.
- place under running water.

STORAGE

- Always unplug the Donut Maker before storing.
- Always make sure the Donut Maker is cool and dry before storing.
- The power cord can be wrapped around the bottom of base for storing.

DONUT RECIPES

Basic Cake Donuts

Donuts with a cake-like texture that are low fat and low cholesterol!

Yields approximately 20-30 donuts.

Ingredients

- 2 cups all-purpose flour
 - 1/3 cup sugar
 - 1 ½ tsp. baking powder
 - 1 ½ tbsp. Wonderslim egg & shortening substitute.
 - 1 tsp salt
 - ½ cinnamon
 - ½ cup second nature egg substitute.
 - 1 ½ cup skim milk
- * Can be substituted with two eggs well beaten (adds fat and cholesterol).

For Chocolate Flavored Donuts: Add 2 Tbsp unsweetened cocoa

Preparation

1. Plug the unit in to preheat.
2. Meanwhile, mix all dry ingredients in a large bowl.
3. In a separate bowl, mix all wet ingredients
4. Combine wet ingredients with dry ingredients, mix until smooth.
5. Lightly oil the surface of the donut maker.
6. Fill each donut hole with batter.
7. Close unit and lock into place.
8. Bake for 4-6 minutes, or until donuts are browned.
9. Carefully remove donuts from the donut maker and repeat with the remaining batter.

DONUT RECIPES

Delicious Vanilla Donuts

These moist vanilla donuts are no-fail-always-yum!

Yields approximately 30-40 donuts.

Ingredients

- 2 ½ cups all-purpose flour
- 1 ½ cups sugar
- 6 eggs
- ¾ cup oil
- ¾ cup orange juice
- 1 tbsp. vanilla sugar
- 2 tsp baking powder
- ½ tsp cinnamon (optional)

For Chocolate Flavored Donuts: Add 2 Tbsp unsweetened cocoa

Preparation

1. Beat together eggs and sugar on high speed, reduce speed and add oil
2. Add dry ingredients
3. Add juice and mix for 2-3 minutes
4. Preheat donut maker
5. Lightly oil the surface of the donut maker.
6. Fill each donut hole with batter.
7. Close unit and lock into place.
8. Bake for 4-6 minutes or until donuts are browned.



30 Days Limited Warranty

Einfach warrants this product against defects in material and workmanship to the original purchaser as specified below. Please register your product online within fourteen (14) days of purchase.

If the product is determined to have a manufacturing defect, within a period of 30 days from the date of the original purchase, Einfach will repair or replace the product parts at no charge (for parts) to consumers in the U.S.A.

Shipping costs to and from our warranty service center are the sole responsibility of the consumer.

To obtain warranty service by an authorized Einfach service center, please email us at: service@theeinfach.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the Warranty Service Center nearest you. Once authorized, you must mail the product to the authorized Einfach® service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Einfach determine that the product is outside of the Warranty terms, Einfach® will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out-of-warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable.

Einfach specifically excludes from this warranty any non-electric/mechanical attachments, accessories, and disposable parts including, but not limited to, outside case, connecting cables, batteries, and AC adapters. Impecca® reserves the right to repair or replace defective products with the same, equivalent, or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available, it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this, or any other, warranty. Further, Einfach hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell will void this warranty in its entirety.

In addition, this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without

the written permission of Einfach; has been serviced by a non-authorized repair center of Einfach; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; has been cosmetically damaged; was not imported by Einfach; was not manufactured according to specification of the United States market; was damaged due to improper installation or neglect by the consumer; was damaged due to improper packaging in shipment to the Warranty Service Center; was damaged due to natural disasters; or if the serial number for the product has been removed or defaced.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THIRTY (30) DAYS PARTS AND LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

Einfach IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO Einfach INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. Einfach LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Einfach dealer, agent, or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Einfach.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.