



EPP-2122

Premium Panini Press + Double Grill

User's Guide

Table of Contents

IMPORTANT SAFEGUARDS..... 1

PARTS IDENTIFICATION 2

BEFORE FIRST USE.....3

HOW TO USE.....3

COOKING.....4


CLEANING AND CARE 7

IMPORTANT SAFEGUARDS

1. READ ALL INSTRUCTIONS

2. Do not touch hot surfaces. Use handles.
3. To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug cord from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Panini Press yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the Panini Press is used.
7. The use of accessory attachments is not recommended by the manufacturer, and may result in fire, electrical shock, or risk of injury to persons.
8. Do not use outdoors or for commercial purposes.
9. Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or heated oven.
11. Unplug the unit when finished using.
12. Do not operate by means of an external timer or separate remote-control system.
13. Extreme caution must be exercised when moving the appliance.

PARTS IDENTIFICATION

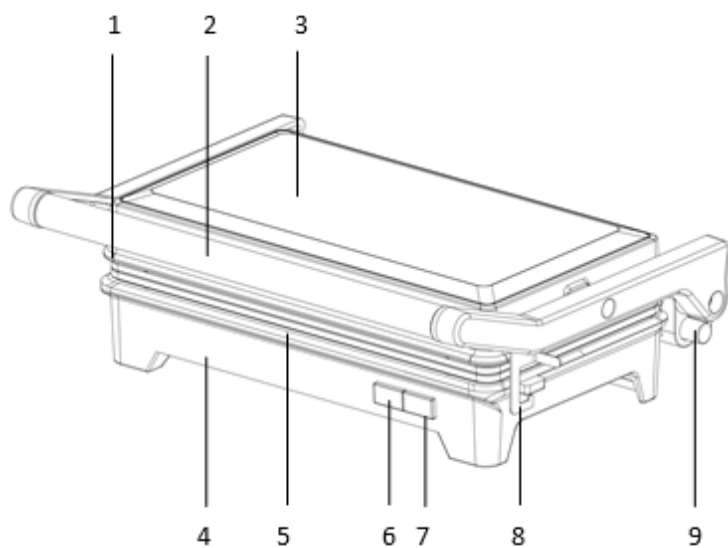

1. Upper Housing
2. Handle
3. Decorative panels
4. Bottom Housing
5. Grill Non-stick Plate
6. Power Light
7. Ready Light
8. Lock
9. 180 Angle Button

BEFORE FIRST USE

- **Read all instructions carefully and keep for future reference**
- Remove all packaging
- Clean the cooking plates by wiping it with a sponge or cloth dampened in warm water.
- **DO NOT IMMERSE THE UNIT IN WATER AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACES.**
- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.
- Notice: When your Panini Press is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

1. Cover the Panini Press and plug it into the wall outlet, you will notice that the power light goes on, indicating that the Panini Press has begun preheating.
2. It will take approximately 5 minutes to reach baking temperature, the ready light will then come on.
3. Open the Panini Press, put the sandwich, meat or other foods on the bottom cooking plate.
4. Cook for about 3 to 8 minutes, the ready light come on again, or until golden brown, adjusting the time to suit your own individual taste.
5. When the food is cooked, use the handle to open the lid. Remove the food with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
6. Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

COOKING

To Use as a Contact Grill

1. Prepare the burgers, boneless pieces of meat and thin cuts of meat or other foods as directed and place it onto the bottom cooking plate.
2. Close the top cooking plate which has a floating hinge that is designed to evenly press down on the food. The top plate must be fully lowered to achieve Grill marks on the selected foods.
3. When the foods is cooked use the handle to open the lid. Remove the food with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
4. Use the Panini Press as a contact grill to cook burgers, boneless pieces of meat and thin cuts of meat and vegetables.
5. Use the Panini Press as a contact grill , when you want to cook something in a short amount of time or when you are looking for a healthy method of grilling. When cooked on the contact grill, food will cook quickly because you are grilling both sides of the food at the same time. The ribs on the grill plates combined with the grease spout at the corner of the plate allow the grease to drip from the meat and drain off the plates.

To Use as Press Grill


1. Prepare the sandwiches as directed and place it onto the bottom cooking plate. Always place sandwiches towards the rear of the bottom cooking plate.
2. Close the top cooking plate which has a floating hinge that is designed to evenly press down on the sandwich. The top plate must be fully lowered to cook sandwiches.
3. Cook for about 3 to 6 minutes or until golden brown, adjusting the time to suit your own individual taste.
4. When the sandwich is cooked use the handle to open the lid. Remove the sandwich with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
5. Use the Grill Toaster as a Press grill to grill sandwiches, breads and quesadillas.
6. The Grill Toaster was designed with a unique handle and hinge that allows the cover to adjust to the thickness of the food. You can easily grill anything from a thinly-sliced potato to a thick sirloin steak with even results.
7. When cooking more than one food item in the contact grill, it is important that the thickness of food items is consistent so the cover will close evenly on the food.

To Use as Open grill

1. Place the Panini Press on a clean flat surface where you intend to cook.
2. The Panini Press can be positioned in flat position. Upper plate/cover is level with lower plate/base. The upper and lower plates line up to create one large cooking surface.
3. With the Panini Press in this position, locate the hinge release lever on the right arm angle button
4. With your left hand on the handle, use your right hand to slide the lever toward you. Push the handle back until the cover rests flat on the counter. The unit will stay in this position until you lift the handle and cover to return it to the closed position.
5. Use the Panini Press as an open grill to cook burgers,
6. steak, poultry (we do not recommend cooking bone-in chicken, since it does not cook evenly on an open grill), fish and vegetables.
7. Cooking on the open grill is the most versatile method of using the Panini Press. In the open position, you have double the surface area for grilling.
8. You have the option of cooking different types of foods on separates without combining their flavors, or cooking large amounts of the same type of food. The open position also accommodates different cuts of meat with varying thicknesses, allowing you to cook each piece to your liking.



Flat Position

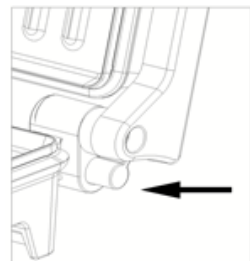

Press the button to
open 180 degrees Griddle

CLEANING AND CARE

- Always unplug the Grill Toaster and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Grill Toaster for cleaning. Never immerse the Grill Toaster in water or place in dishwasher.
- Wipe cooking plates with a soft cloth to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the grill toaster with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface.
- Rinse and dry thoroughly with a clean, soft cloth and replace.

STORAGE

- Always unplug the Grill Toaster before storage.
- Always make sure the Grill Toaster is cool and dry before storing.
- The power cord can be wrapped around the bottom of base for storing.



30 Days Limited Warranty

Einfach warrants this product against defects in material and workmanship to the original purchaser as specified below. Please register your product online within fourteen (14) days of purchase.

If the product is determined to have a manufacturing defect, within a period of 30 days from the date of the original purchase, Einfach will repair or replace the product parts at no charge (for parts) to consumers in the U.S.A.

Shipping costs to and from our warranty service center are the sole responsibility of the consumer.

To obtain warranty service by an authorized Einfach service center, please email us at: service@theeinfach.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the Warranty Service Center nearest you. Once authorized, you must mail the product to the authorized Einfach® service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Einfach determine that the product is outside of the Warranty terms, Einfach® will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out-of-warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable.

Einfach specifically excludes from this warranty any non-electric/mechanical attachments, accessories, and disposable parts including, but not limited to, outside case, connecting cables, batteries, and AC adapters. Impecca® reserves the right to repair or replace defective products with the same, equivalent, or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available, it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this, or any other, warranty. Further, Einfach hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell will void this warranty in its entirety.

In addition, this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without

the written permission of Einfach; has been serviced by a non-authorized repair center of Einfach; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; has been cosmetically damaged; was not imported by Einfach; was not manufactured according to specification of the United States market; was damaged due to improper installation or neglect by the consumer; was damaged due to improper packaging in shipment to the Warranty Service Center; was damaged due to natural disasters; or if the serial number for the product has been removed or defaced.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THIRTY (30) DAYS PARTS AND LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

Einfach IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO Einfach INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. Einfach LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Einfach dealer, agent, or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Einfach.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

