


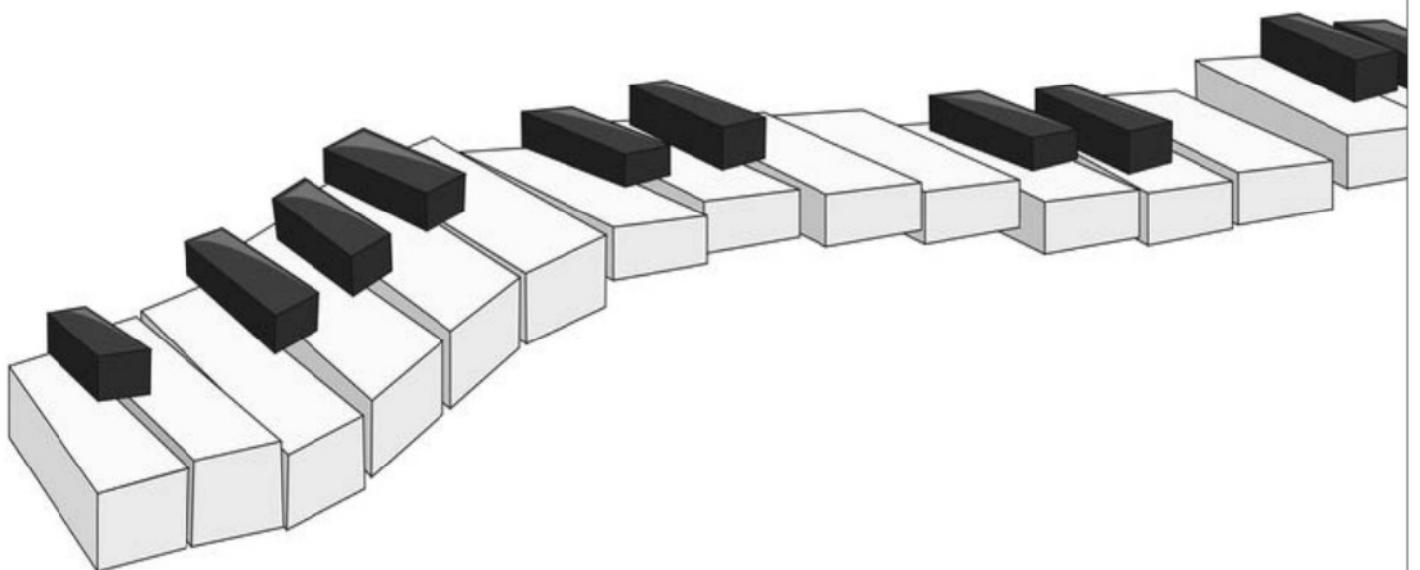

HAND ROLL UP PIANO

A large, stylized treble clef graphic. The circular part of the clef is designed to look like a piano keyboard, with black keys at the top and white keys below. A series of musical notes (quarter notes) are positioned along the right side of the clef's stem.

INSTRUCTION MANUAL

Model: ERK-4902

Introduction

Thank you sincerely for buying our hand rolling piano.

This hand rolling piano is a portable product with sophisticated structure design. So to avoid damage, please pay attention to the operation.

For your normal use and maintenance, please read carefully the below user manual, especially the part for children, you must Pay more attention.


I. Products specification

- . Keyboard: 49 standard keys
- . Tone :8
- . Demonstration songs: 6 demo songs
- . Volume : knob volume control in clockwise
- . Record and play function
- . Demo play
- . Stop function
- . Tutorial function
- . Power-saving mode: smart sleep after 3 minutes with no play
- . Inside speaker, support external speaker and earphone
- . Power: 4 AAA battery , support external power resource: DC 5V
- . Size: control box: L15*W8*H2.2cm
Keyboard: L72*12.5*H0.99cm

II. Products feature

- . This piano is a Small size one, and is portable and convenient to play by students.
- . It can cover the needs of children and primary school, and it can be more suitable for the music performance and the music training.
- . Using the tone adjustment keys, 8 kinds of tones can be selected
- . Use 4 AAA battery, economical and practical.
- . Won't disturb others while use earphone , support external speaker.

III. Appearance of the structure

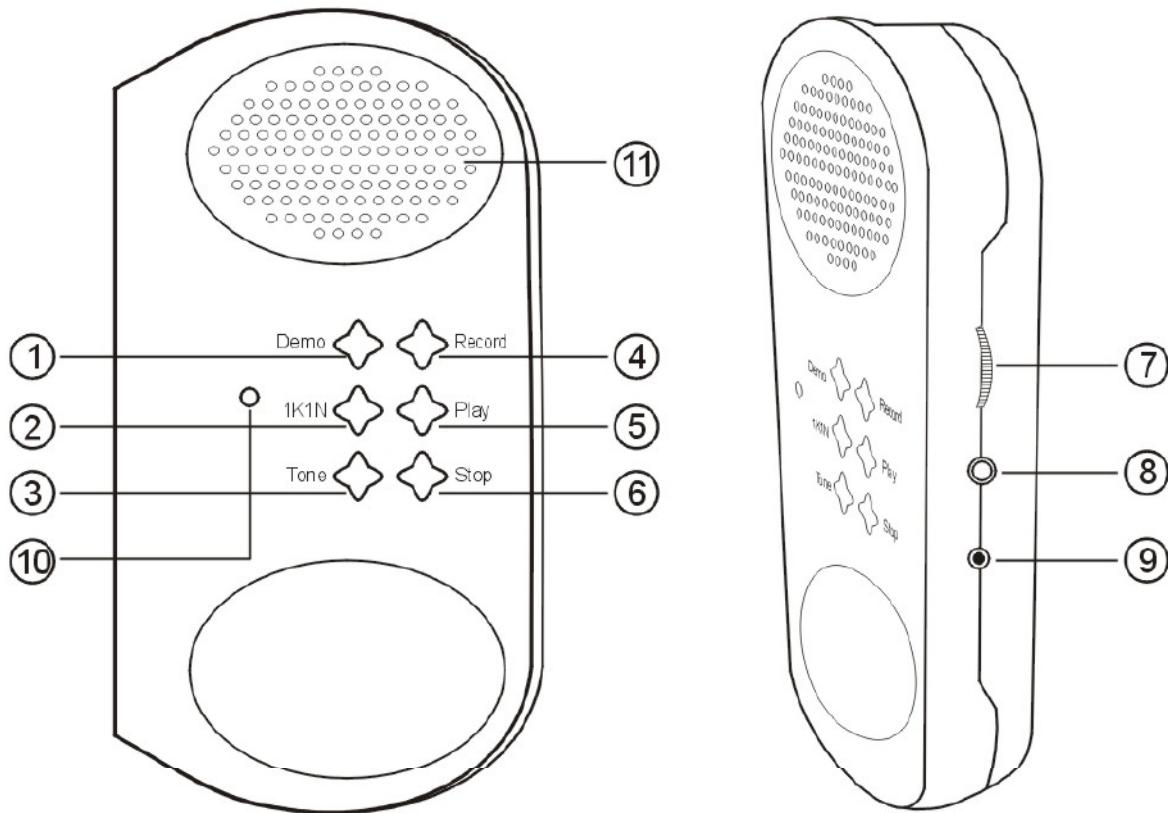

1	Demo	demo song play key
2	1 K1N	1 K1N
3	Tone	tone key
4	Record	record key
5	Play	play key
6	Stop	stop key
7	On/off/volume	power on in clockwise way and power off in anticlockwise way; increase the volume in clockwise and decrease in anticlockwise;
8	Earphone/speaker	earphone/external speaker position
9	DC5V	power position
10	LED	working indicating lamp
11	Speaker	speaker

IV. Function Description

1. Demo song

- . Press demo key, play the demo songs.
- . When piano was in the playback process, press the demo key to stop, repress demo key to start another one, and this process will be in cycle.
- . While piano was in demonstration song playing state, the keys is invalid.
- . Replay the same song after the demo songs is playing over.

2. Tutorial function

- . Press the tutorial key to enter the function, wait for the white key selection songs.
- . Playing keyboard, tonic will be covered, tonic will resume without playing in 3 seconds, learning the keyboard playing.
- . After the end of the song, waiting for the selections by white key.

3. Tone

- . 8 different tones, approved to be piano while starting, could chose tones using button.
- . Will cycle 8 tones by tone buttons.

4. Record function

- . Press the record button, enter the recording state.
- . Press play key, play the recording content.
- . The record is recording only, press play key to replay what we recorded, could switch musical instrument while playing.
- . The beat happens after entering the record sections, press the play key and then back to the recording section, re-recording and the beat continues.

5. On/off /volume

- . Power: power on in clockwise way and power off in anticlockwise way
- . Volume: increase the volume in clockwise way and decrease in anticlockwise way.

6. Power saving dormancy function

- . Do not turn into dormancy while playing music (songs、demo、record and son on); Enter into dormancy with no operation in 3 minutes, you could press any keys to wake up and then access in related key function.

7. 37 thickened black and white keys (C3-C6) on keyboard

V. Roll up piano using details

- . You should take out the battery while not using piano, in order to avoid the damage caused by batteries leak.
- . In order to make sure every function is available, please put the piano flat wise, and try not to mover piano when using it, or unexpected damage will happened.
- . You should not roll too tight after using it, or the key function will affected and the product lifetime will reduce.
- . Please don't pull or twist piano keyboard.
- . Don't put piano in high temperature or drippy place
- . Don't separate any parts of this piano.
- . In order to protect piano function, Please do not set piano in strong ragic wave place.

Simple troubule shooting

- . If piano stops working or abnormal sound come out while using it , may the battery run out, please change another new battery.
- . If the sound is abnormal, may the key function is unavailable, please turn off the power, restart the machine, then restore the original settings.

Annex one : rhythm name list

Rhythm No	Rhythm Name
T00	Acoustic Grand Piano
T01	Orchestral Harp
T02	Church Organ
T03	Tubular Bell
T04	Electric Guitar (jazz)
T05	Violin
T06	String Ensemble 1
T07	Aclustic Guitar (steel)

Annex Two : Song List

Song No	Song Name
S00	For Alice
S01	Dream wedding
S02	Kangding love songs
S03	Xinyu
S04	Qinghai Tibet Plateau
S05	In the peach blossom place

courant.

ONE YEAR LIMITED WARRANTY {36590}

Courant™ warrants this product against defects in material and workmanship to the original purchaser as specified below provided that the product is registered online within fourteen (14) days of purchase.

PARTS - If the product is determined to have a manufacturing defect, within a period of one (1) year from the date of the original purchase, Courant™ will repair or replace the product parts at no charge (for parts) to consumers in the U.S.A. and Canada.

LABOR - If the product is determined to have a manufacturing defect, within a period of ninety (90) Days from the date of the original purchase, Courant™ will repair or replace the product at no charge to consumers in the U.S.A. and Canada. After ninety (90) days, it will be the responsibility of the consumer.

Shipping costs to and from our warranty service center are the sole responsibility of the consumer.

To obtain warranty service by an authorized Courant™ service center, please email us at: service@courantusa.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the Warranty Service Center nearest you. Once authorized, you must mail the product to the authorized Courant™ service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Courant™ determine that the product is outside of the Warranty terms, Courant™ will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out-of-warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable.

Courant™ specifically excludes from this warranty any non-electric/mechanical attachments, accessories, and disposable parts including, but not limited to, outside case, connecting cables, batteries, and AC adaptors. Courant™ reserves the right to repair or replace defective products with the same, equivalent, or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available, it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this, or any other, warranty. Further, Courant™ hereby reserves the right to determine "Wear and Tear" on any and

all products. Tampering or opening the product casing or shell will void this warranty in its entirety.

In addition, this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Courant™; has been serviced by a non-authorized repair center of Courant™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; has been cosmetically damaged; was not imported by Courant™; was not manufactured according to specification of the United States market; was damaged due to improper installation or neglect by the consumer; was damaged due to improper packaging in shipment to the Warranty Service Center; was damaged due to natural disasters; or if the serial number for the product has been removed or defaced.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

COURANT™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO COURANT™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. COURANT™ LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Courant™ dealer, agent, or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Courant™.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Note: Our Warranty Service Center ships only within Continental U.S.A., excluding Alaska and Hawaii.

Important: Be Sure to Register Your Product at WWW.COURANTUSA.COM within 14 Days

COURANT™ • PA 18711 • www.courantusa.com • service@courantusa.com

*Do not send any returns to this address, as they may be lost and this will delay your repair and service process.