 


## Appearance and Controls

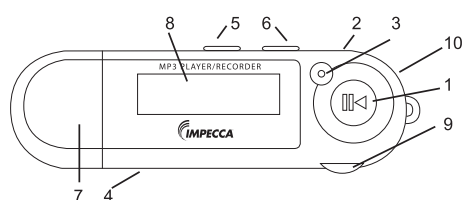

- |                             |                                |
|-----------------------------|--------------------------------|
| 1. Power On/Off, Play/Pause | 6. Volume Up                   |
| 2. Earphone Jack            | 7. USB                         |
| 3. Record/Repeat            | 8. Display                     |
| 4. Hold Button              | 9. Mode: Menu/Navigation Wheel |
| 5. Volume Down              | 10. Microphone                 |

## Basic Functions

### Power On / Off

To turn the player on or off, press and hold the Play button.

### Main Menu

Using the Main Menu (Figure A.) you can access different modes: Music Mode, Record Mode, Playback Record Mode, FM Mode (select models), and System Settings Mode. To access the main menu while in any mode, push and hold the Mode button.

### Volume

Press VOL+ key to increase volume.

Press VOL- key to reduce volume.

### Play / Stop / exit from sub menu

To play or stop music while in Music mode, press the Play button. You can also press the Play button to exit a sub-menu.

## How to add Media to your MP3 Player

1. Remove USB cap and connect MP3 player to a computer.
2. Your computer should automatically recognize your MP3 player. If not, double click the My Computer icon on your desktop, and navigate to the Removable Disk that is your MP3 player. On a Mac, double click the Removable Disk icon on your desktop that is your MP3 player.
3. Copy and paste music/picture/video files into the folder of your MP3 player.
4. When you are done, make sure to safely remove your MP3 Player. If you are using a Windows PC, you can eject your MP3 Player by clicking the Safely Remove Hardware icon in the Windows System tray, and selecting your MP3 Player. If you are using a Mac, you can eject your MP3 Player by dragging its icon to the trash.

\*\*When ready to disconnect your MP3 Player, make sure that it is safely removed in order to avoid data corruption.

\*\*Figure B. shows the various displays on your MP3 player while it is connected to your computer.

## Playing Music

### How to play music

1. Push and hold Play button to turn on.
2. Select (using the Mode button) the first option on the main menu to access "Music Mode", (Figure C.) then press Play Button to play music.
3. To play or stop music while in Music mode, press the Play button.

(You can also use the Play button to exit from a sub-menu.)

### How to Browse Music

1. While in "Play Mode," press the Play button once to stop music
2. Press the Mode button once to access the sub-menu in Stop mode.
3. Press the Mode button again to select the first option, "Local Folder"
4. By pushing the navigation wheel to the right or to the left, you can scroll through your music. Press the Mode button once to choose a song.

### How to choose an Equalizer Mode

1. In "Play Music" mode, press Mode to enter the Play sub-menu.
2. Push the navigation wheel to the right to select the second option, the Equalizer menu
3. Press Mode to enter Equalizer selection menu.
4. Use the navigation wheel to select your preferred EQ, and press the Mode button to confirm.

## Record Mode

This player supports 99 recording files.

### Recording sound in "Record Mode"

Either Press the Record button to go to "Record Mode," or:

1. Access the Main Menu.
2. Use the navigation wheel to choose the second option, "Record Mode."
3. Push Mode to enter "Record Mode."
4. Press Play button to start recording.
5. Press Play button again to pause.
6. Press and hold Play button to stop. You can also stop a recording by pressing and holding the Mode button.

\*\*Sound that is recorded is saved in the current directory. You can choose a different directory in the recording sub-menu.

\*\*If "the space is full" shows up on your display, it means that there is not enough space to record your new file. Delete other files to make more space.

### Play recorded file

1. Access Main Menu
2. Use the navigation wheel to choose "RPL". Enter Replay mode by pressing Mode.
3. Press Play to start playing.

Use the navigation wheel to move to a previous/next file.

### Transfer recorded files to your computer

1. Remove USB cap and connect MP3 player to a computer.
2. Your computer should automatically recognize your MP3 player. If not, double click the My Computer icon on your desktop, and navigate to the Removable Disk that is your MP3 player. On a Mac, double click the Removable Disk icon on your desktop that is your MP3 player.
3. Copy and paste music/picture/video files from the folder of your MP3 player to your computer.
4. When you are done, make sure to safely remove your MP3 Player. If you are using a Windows PC, you can eject your Digital Media Player by clicking the Safely Remove Hardware icon in the Windows System tray, and selecting your Digital Media Player. If you are using a Mac, you can eject your Digital Media Player by dragging its icon to the trash.

## Settings

### Enter Settings Menu

1. Access the main menu
2. Use the navigation wheel to choose "System Settings", then press "Mode"

### Settings Options

- |                    |  |
|--------------------|--|
| (Record Time)      | Set the date and time.   |
| (Backlight)        | Set the amount of seconds after which backlight will shut off when player is not active.                       |
| (Backlight Mode)   | Select backlight color   |
| (Language)         | Select language  |
| (Power Off)        | Set a time to automatically power off your player.   |
| (Replay Mode)      | Choose between manual or automatic replay mode   |
| (Contrast)         | Change contrast level of display screen  |
| (Online Mode)      | Choose between Multi Drive, Normal, or Encrypted   |
| (Memory)           | This function displays the whole capacity of your MP3 player, and the percentage of memory that has been used. |
| (Version)          | Show the firmware edition of the player  |
| (Firmware Upgrade) | Connect your USB to a computer to upgrade firmware.  |
| (Back)             | Exit this menu   |

### How to set the time

1. Press Mode to enter Record Time
2. Press the Vol +/- buttons to move between year, month, day, hour, minute, and second.
3. Use the navigation wheel to select the right settings.
4. Press the "Mode" button to confirm.

### About the Power off Setting

"Off Time" will automatically turn off your MP3 player if no action is detected after a certain amount of time.

"Sleep Time" will set up a time when the system will power off automatically.

Please note: You must re-program Sleep mode each time you use your MP3 player. Previous Sleep settings are deleted once your player is turned off.

## Specifications

Weight	25g (without battery)
PC Connection	High speed USB2.0 (Read:1000K Byte, Write:800K Byte)
Battery	Uses 1 AAA Battery
Record	Sample Rate:8KHz
	Recording Format: WAV, ACT
Music Format	MP1, MP2, MP3, WMA, WMV, ASF, WAV
Supported Op. Systems	Windows98/SE/ME/2K/XP, Mac OS 10, Linux 2.4.2

## Diagrams



Figure A. Main Menu

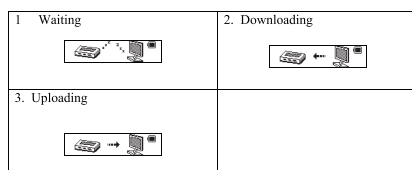 


Figure B. Connecting to a Computer

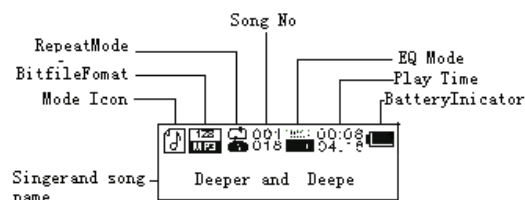 


Figure C. Music Mode

