
KBP Type-R User Manual

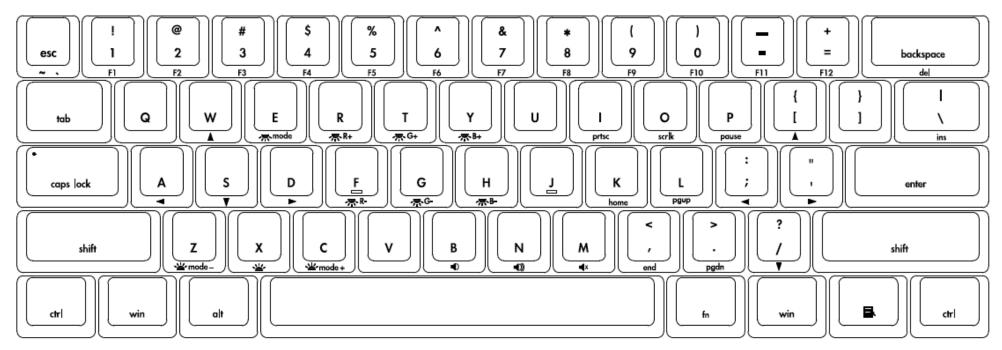

Polestar edition

Feature

- 1. USB Interface
- 2. HID Device

- 2. HID Device
 3. Firmware upgrade Via USB
 4. QWERTY Layout
 5. About 60% as wide as of the standard 104-Key keyboard
 6. N-key rollover
 7. Programmable by user define
 8. Multi-Lingual Layout
 9. Microcontroller ATmega32u4
 10. Laser-engraved Keycaps
 11.Firmware designed by sdiearly@geekhack

Packing

- 1. Keyboard 2. USB Cable

How to Program

Please Visit Our Facebook, Search "KBParadise"

| Key combination | Function | Key combination | Function |
|-----------------|---------------|---|---|
| Fn + Esc | `(~) | Fn + B | Volume decrease |
| Fn + 1 | F1 | Fn + N | Volume increase |
| Fn + 2 | F2 | Fn + M | Volume mute |
| Fn + 3 | F3 | Fn + , | End |
| Fn + 4 | F4 | Fn+. | Page Down |
| Fn + 5 | F5 | Fn + / | ↓ |
| Fn + 6 | F6 | Bottom RGB LED (Polestar edition) | |
| Fn + 7 | F7 | RGB Mode | You can change the color of bottom LED in this mode |
| Fn + 8 | F8 | RGB Breathing Mode | Bottom RGB LED breathing automatic (Brightness control by TOP LED mode , Fn+Z , X , C) |
| Fn + 9 | F9 | Off Mode | Turn off the LED |
| Fn + 0 | F10 | Fn + E | Bottom LED mode change in loop (RGB \rightarrow RGB Breathing \rightarrow Off \rightarrow RGB \rightarrow RGB Breathing) |
| Fn + - | F11 | Fn + R | Bottom LED: Red increase |
| Fn + = | F12 | Fn + T | Bottom LED : Green increase |
| Fn + Backspace | Delete | Fn + Y | Bottom LED : Blue increase |
| Fn + W | ↑ | Fn + F | Bottom LED: Red decrease |
| Fn + I | Print screen | Fn + G | Bottom LED : Green decrease |
| Fn + O | Scroll Lock | Fn + H | Bottom LED : Blue decrease |
| Fn + P | Pause | Top LED (Polestar edition) | |
| Fn + [| <u> </u> | Brightness 1-Brightness 2-Brightness 3-Breathing 1-Breathing 2-Breathing 3-Brightness decrease when typing- Brightness increase when typing | |
| Fn + \ | Insert | decrease $\leftarrow\leftarrow\leftarrow$ Mode $\rightarrow\rightarrow\rightarrow$ increase | |
| Fn + A | ← | Fn + Z | Top LED : Mode change decrease |
| Fn + S | \downarrow | Fn + X | Top LED : ON/OFF |
| Fn + D | \rightarrow | Fn + C | Top LED : Mode change increase |
| Fn + K | Home | | |
| Fn + L | Page Up | | |
| Fn + ; | ← | | |
| Fn+' | \rightarrow | | |