Last Modified: 05-16-2022	6.11:8.1.0	Doc ID: RM100000015LKK
Model Year Start: 2018	Model: Tundra	Prod Date Range: [08/2017 -]
Title: CRUISE CONTROL: MILLIMETER WAVE RADAR SENSOR: INSTALLATION; 2018 - 2021 MY Tundra [08/2017 -]		

INSTALLATION

CAUTION / NOTICE / HINT


NOTICE:


If the millimeter wave radar sensor assembly has been struck or dropped, replace the millimeter wave radar sensor assembly with a new one.

PROCEDURE

1. INSTALL MILLIMETER WAVE RADAR SENSOR ASSEMBLY

(a) for Type A:

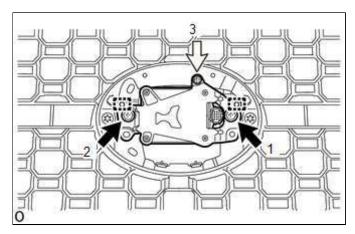

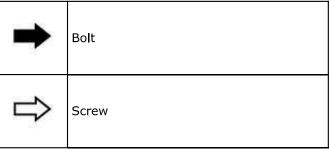


- (1) Attach the 2 guides.
- (2) Temporarily install the millimeter wave radar sensor assembly with the 2 bolts and screw.
- (3) Tighten the 2 bolts and screw in the order shown in the illustration.


Torque:

Bolt:

2.5 N·m {25 kgf·cm, 22 in·lbf}

(b) for Type B:

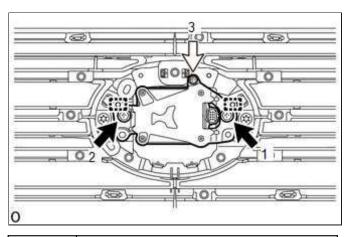

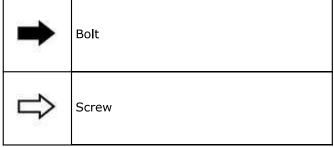


- (1) Attach the 2 guides.
- (2) Temporarily install the millimeter wave radar sensor assembly with the 2 bolts and screw.
- (3) Tighten the 2 bolts and screw in the order shown in the illustration.


Torque:

Bolt:

2.5 N·m {25 kgf·cm, 22 in·lbf}

(c) for Type C:

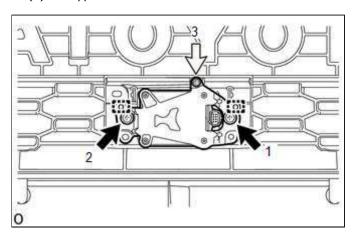

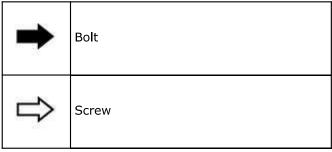

- (1) Attach the 2 guides.
- (2) Temporarily install the millimeter wave radar sensor assembly with the 2 bolts and screw.

(3) Tighten the 2 bolts and screw in the order shown in the illustration.


Torque:

Bolt:


2.5 N·m {25 kgf·cm, 22 in·lbf}

2. INSTALL MILLIMETER WAVE RADAR WIRE


- (a) for Type A:
 - (1) Attach the connector.
 - (2) Attach the clamp to install the millimeter wave radar wire in the order indicated in the illustration.

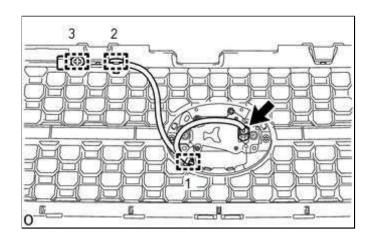

- (b) for Type B:
 - (1) Attach the connector.
 - (2) Attach the clamp to install the millimeter wave radar wire in the order indicated in the illustration.

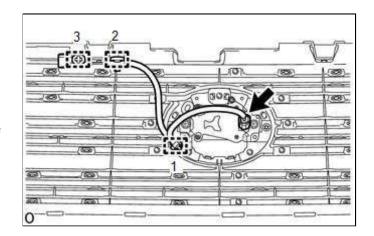

- (c) for Type C:
 - (1) Attach the connector.
 - (2) Attach the clamp to install the millimeter wave radar wire in the order indicated in the illustration.

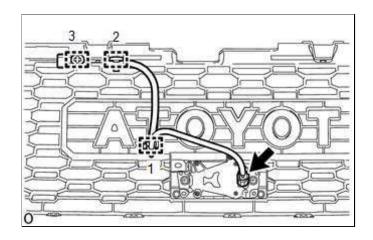

3. INSTALL RADIATOR GRILLE

Click here

4. ADJUST MILLIMETER WAVE RADAR SENSOR ASSEMBLY

(a) When the millimeter wave radar sensor assembly, bumper, or grille, are removed, replaced, or repaired adjust the millimeter wave radar sensor assembly.

Click here



