



R11 Rugged Tablet Vehicle Dock User's Manual



P/N: 62+009660+01

Package Contents

If any of following items is damaged, please contact your retailer.






The pictures are for reference only, actual items may slightly differ.

DUZABOOK


Product Overview

Front

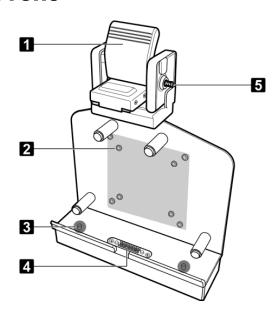

No.	Item
1	Latch
2	Mounting holes for VESA
	mount
3	Alignment port (x2)
4	Docking connector
5	Latch bar (with key slot)

Rear

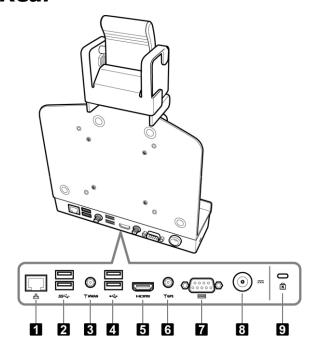


No.	Item
1	LAN (RJ-45) port
2	USB3.0 port (x2)
3	WWAN antenna port
4	USB2.0 port (x2)
5	HDMI port
6	GPS antenna port
7	Serial port (RS-232)
8	DC-in jack *
9	Kensington lock slot
*Please contact dealer for appropriate	

^{*}Please contact dealer for appropriate adapter.

Unlock the Latch


The latch on the docking cradle is locked during packaging. To unlock the latch, do the following:

- 1. Insert the latch bar key.
- 2. Turn it clockwise until a "click" is heard, indicating the latch bar is released.
- 3. Remove the key from the key slot.

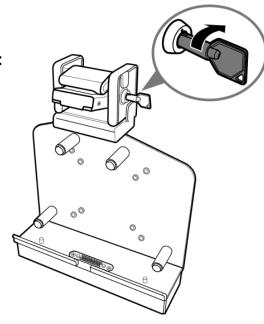


Docking the Tablet PC

1. With screen side facing out and docking connector down, install the tablet PC into the alignment ports on docking cradle.

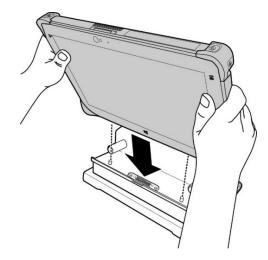


2. Using one hand, carefully push the top of the tablet PC backward until the latch is fully engaged.

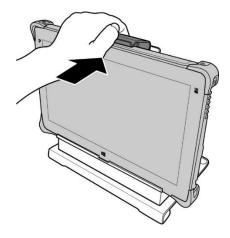


3. Ensure the tablet PC is tightly secured to the docking cradle.



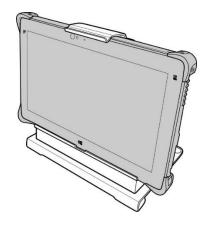


Undocking the Tablet PC

1. While pushing the latch upward, pull the tablet PC forward until the latch is fully disengaged.

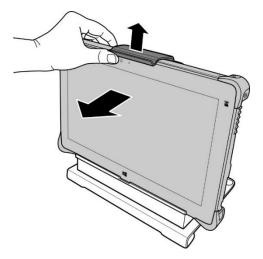

2. Remove the tablet PC from the docking cradle.

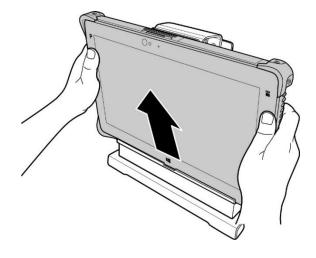

Twinhead International Corp.

11F, No.550, Ruiguang Rd., Neihu, Taipei 11492, Taiwan, R.O.C.