

**TINY
TANK** by CARPET · PRO

**OWNER'S
MANUAL**

**Compact
Canister
Vacuum**

CPC-TT



Index

Important Safety Instructions	2
Two-Wire Polarized Cord	3
State of California Proposition 65 Warnings	3
Parts Identification and Replacement Bags, Filters	4
How to Assemble and Operate the Vacuum	5
How to Replace the Bag	6
How to Replace the Filters	6
Cleaning with Tools	7
Wand Storage	8
Troubleshooting Guide	9
For Best Performance	9

Customer's Record

The model and serial numbers of this product may be found on the back side of the unit. You should complete the enclosed warranty card and mail it back to us as soon as possible for your protection. Also, note the model and serial numbers of your unit in the spaces provided below, and retain this book as a permanent record of your purchase.

Model Number _____
Serial Number _____
Date Purchased _____

Your Carpet Pro vacuum cleaner is a product of high quality materials and superior workmanship. We urge you to read these operating instructions carefully before you use this vacuum cleaner in order to obtain the full performance and satisfaction it can offer you.

Save These Instructions

Before you plug in your Carpet Pro vacuum cleaner, make sure the voltage indicated on the rating plate located on the back of the vacuum cleaner is the same as your local supply.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

When using an electrical appliance, basic precautions should always be followed, including the following:


SAVE THESE INSTRUCTIONS.

WARNING: To reduce the risk of fire, electric shock or injury:

1. Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
2. **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Turn off all controls before unplugging.
10. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
13. Do not use without vacuum bag and filters in place.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Do not attempt to service the unit while appliance is plugged in.

Two-Wire Polarized Cord

This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug fits into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

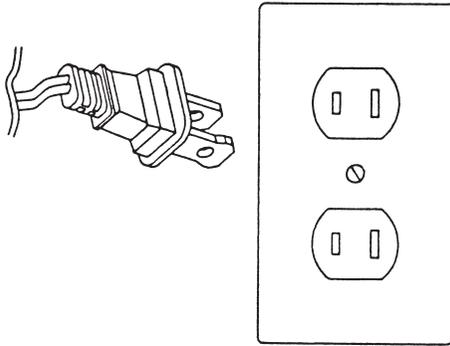


State of California Proposition 65 Warnings:

WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

Parts Identification

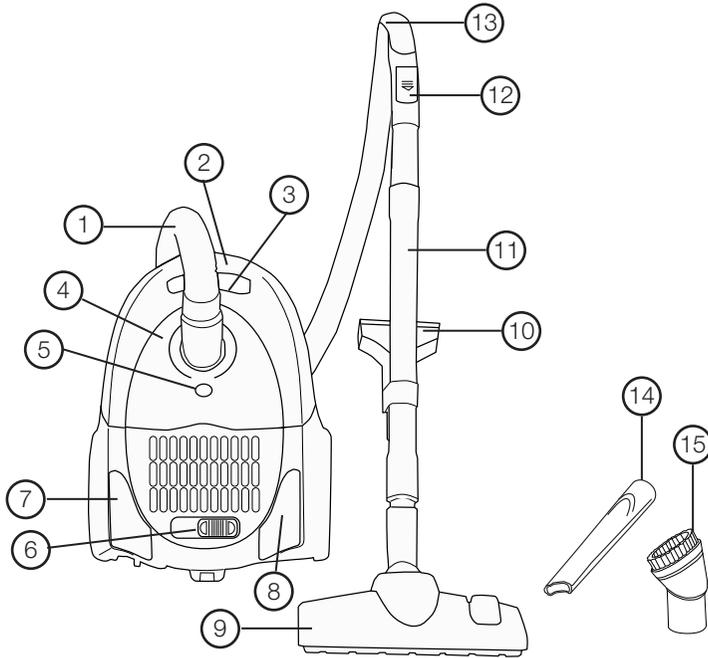

- | | |
|-------------------------------|---------------------|
| 1. Hose | 9. Rug/Floor Tool |
| 2. Carry Handle | 10. Upholstery Tool |
| 3. Bag Compartment Latch | 11. Two Piece Wand |
| 4. Bag and Filter Compartment | 12. Suction Control |
| 5. Full Bag Indicator | 13. Hose Handle |
| 6. Variable Speed Control | 14. Crevice Tool |
| 7. Power Cord Rewind Pedal | 15. Dusting Brush |
| 8. On/Off Pedal | |

Replacement Bags and Filters

- Genuine Carpet Pro Vacuum Bags.
Package of 6. Part # TTP-6
- Genuine Carpet Pro Filter Set
Part # CPTT-FILTER

How to Assemble and Operate the Vacuum

How to Assemble and Operate the Vacuum

The vacuum, hose, wand and accessories are packed separately.

1. Push the hose cuff into the hose inlet on the top of the bag compartment until it clicks into place (Fig. 1).

On/Off Switch

1. To turn the vacuum on, push the power pedal on the top of the vacuum.
2. To turn the vacuum off, push the pedal again.

Full Bag Indicator

1. If the full bag indicator appears, change the vacuum bag.
2. If the full bag indicator appears, but the vacuum bag is not full, check the hose for a clog.

NOTE: When cleaning with a tool (dusting brush, upholstery tool or crevice tool), the full bag indicator may appear. In this case, continue cleaning, as the indicator will likely go off once the tools are no longer in use.

Variable Speed Control

To adjust the motor power, slide the variable speed control on the canister body to the desired motor speed.

Suction Control

To adjust the suction level, slide the suction control switch on the handle to reach the desired level of suction.

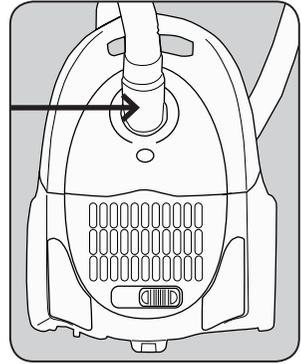


Fig. 1

How to Replace the Vacuum Bag

Always operate the vacuum cleaner with a bag installed properly. Change the vacuum bag when the full bag indicator appears or when suction power is weak. The bag compartment lid will not close without a bag in the holder or if the bag is not properly installed.

1. Open the bag compartment lid.
2. Remove the bag by sliding the cardboard collar out of the bag holder (Fig 1).
3. Slide a new bag into the bag holder until it is fully inserted.
4. Close the bag compartment lid.

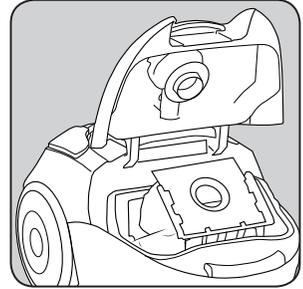


Fig. 1

How to Replace the Vacuum Filters

When to Change the Filters

At a minimum, it's recommended to replace the filters after using 12 vacuum bags. If someone in your household is sensitive to airborne allergens, it is recommended to change the filters after every six vacuum bags.

How to Replace the Foam Filter

1. Open the bag compartment lid.
2. Remove the used filter by grasping the tab and sliding it out (Fig. 2).
3. Insert a new filter and close the bag compartment lid.

NOTE: The filters cannot be washed and reused.

How to Replace the Secondary Filter

1. Open the bag compartment lid.
2. Remove the bag by sliding the cardboard collar out of the bag holder.
3. Locate the filter behind the vacuum bag.
4. Pull the filter up and out of the bag compartment and discard (Fig. 3).
5. Insert a new filter into the holder, replace the bag and close the bag compartment lid.

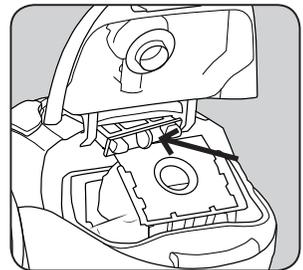


Fig. 2

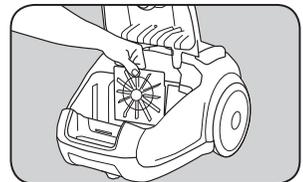


Fig. 3

Cleaning with Tools

The Tiny Tank canister is equipped with two plastic wands, hose, crevice tool, dusting brush, upholstery tool and rug/floor tool. All of these tools can be attached either to the end of the wand or to the hose handle for convenient cleaning.

Crevice Tool

The crevice tool is ideal for hard to reach places and along baseboards (Fig. 1).

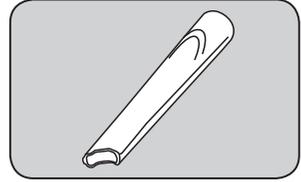


Fig. 1

Dusting Brush

The dusting brush is ideal for vacuuming delicate objects and surfaces (Fig. 2).

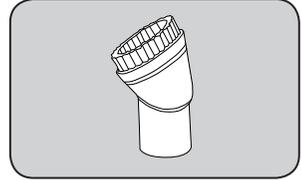


Fig. 2

Upholstery Tool

The upholstery tool cleans pet hair quickly and easily from sofas and chairs (Fig. 3).

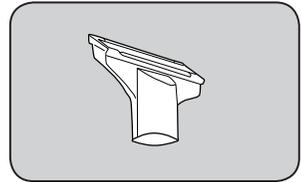


Fig. 3

Rug/Floor Tool

This tool is great for cleaning area rugs with the brushes retracted and glides along tile, hardwood and vinyl floors with the brushes exposed (Fig. 4). When attached to the wand, this tool conveniently stores on the back of the vacuum.

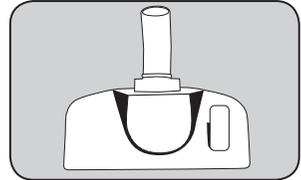


Fig. 4

Tools Storage

One of the tools can be conveniently stored on the removable tool caddy attached to the wand (Fig. 5).

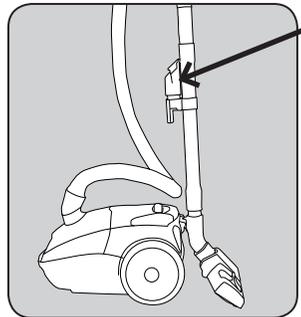


Fig. 5

Wand Storage

How to Store the Wand

1. When vacuum is flat, attach the wand to the notch between the wheels using the tab on the rug/floor tool (Fig. 1).
2. When vacuum is upright, attach the wand to the back of the vacuum (Fig. 2) using the tab on the tool caddy (Fig. 3).

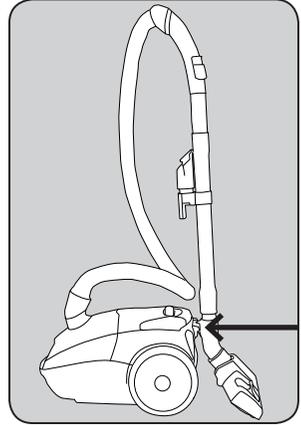


Fig. 1

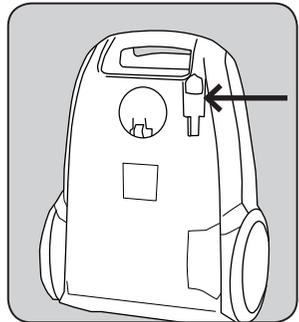


Fig. 2

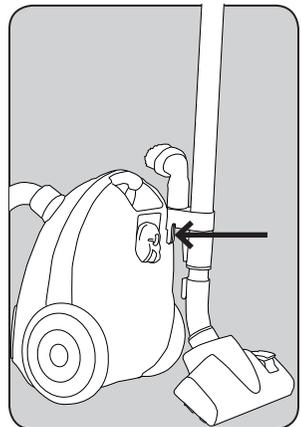


Fig. 3

Troubleshooting Guide

Please check each item below if you have trouble with your vacuum.

Unplug the vacuum from the power supply before servicing.

Problem	Check Point	Possible Solution
Suction power is weak.	<ul style="list-style-type: none">• Vacuum bag• Wand or hose	<ul style="list-style-type: none">• If vacuum bag is full, replace it.• If clogged or blocked, remove the object.
The vacuum does not work.	<ul style="list-style-type: none">• Is the hose adapter inserted into the suction opening of the vacuum completely?• When the vacuum bag is full or any of the accessories are blocked, the overheating protection for the motor is activated.	<ul style="list-style-type: none">• Insert hose until it snaps into place.• Turn the vacuum off and unplug the vacuum. Check the vacuum bag and accessories and remove any blockages. The vacuum can be turned on again after approximately 20 minutes.
Power cord does not rewind.	<ul style="list-style-type: none">• Power cord	<ul style="list-style-type: none">• Pull the power cord out a little and press the cord rewind button again.
Power cord won't pull out of the vacuum.	<ul style="list-style-type: none">• Power cord	<ul style="list-style-type: none">• Do not pull it out by force. Rewind it a little by pressing the cord rewind button and try pulling it out again.

For Best Performance

- Keep machine and all accessories clean and in good operating condition.
- Replace filters after using 6 to 12 vacuum bags or more frequently if vacuuming fine powders such as flour or drywall dust.
- Always use genuine filters and parts, as use of other products may result in poor cleaning and filtration performance. Carpet Pro filtration products are designed for maximum performance.
- Store machine carefully in a dry area.
- For optimum cleaning performance and safety, follow your owner's manual.

CARPET • PRO

Carpet Pro Vacuum Cleaners
PO Box 730
Fenton, MO 63026