

**USER GUIDE** 

Congratulations on your purchase of soniclear ANTIMICROBIAL SONIC CLEANSING SYSTEM, a best-of-class face and body sonic cleansing system designed to elevate personal cleansing to a whole new level for your best skin ever.

With soniclear, 6x better cleansing is achieved compared to hand cleansing with an industry leading 6 cleansing speeds up to 300+ micro-massage movements per second for the speed just right for you. The result: serums and moisturizers absorb better, the appearance of pores, fine lines and wrinkles is reduced and skin tone is improved.

What's more, the brushes of your SONIClear stay cleaner, fresher for longer with our exclusive built-in LIFE antimicrobial product protection. An industry first, traditional face cleansing systems don't provide this protection.

soniclear is also cordless and waterproof for use in the shower or bathtub and features new soft, hand grips ~another industry first~ to prevent slipping in the users hand.

Meet your new favorite skin care tool! Once you've tried soniclear, you will not want to imagine your beauty routine without it.

Organically yours,



## READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

## IMPORTANT SAFFTY INFORMATION

BASIC SAFETY PRECAUTIONS. When using electrical products, especially when children are present, basic safety precautions should always be taken. IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU ARE WRONG. If the plug is in, the power is on. Unplug electrical appliances when you are not using them.

#### DANGERS. To reduce the risk of electrocution:

- **DO NOT** place or store the Charaina Cradle where it can fall or be pulled into a tub or sink.
- DO NOT place the Charging Cradle in or drop it or the plug into water or other liquid. The Charaina Cradle is not for immersion or for use in the shower or bath
- **DO NOT** reach for the Charging Cradle or the plug that has fallen into water. 3. Unplug immediately.
- **DO NOT** use soniclear where the power cord while plugged in can come in contact with water
- Keep soniclear away from open flame or flammable gerosol products. soniclear is not suitable for use in the presence of a flammable anesthetic mixture with air or oxygen or nitrous oxide.

#### WARNINGS. To reduce the risk of burns, electrocution, fire or injury to persons:

- 1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
- Use this product only for its intended use as described in this User Guide. DO
   NOT use attachments other than those recommended and provided by
   MICHAEL TODD true organics.
- 3. Keep the power cord away from heated surfaces.
- 4. Never use soniclear while sleeping or drowsy.
- 5. **DO NOT** use **soniclear** outdoors or where oxygen is being administered.
- 6. Never operate soniclear if it is damaged.
- 7. DO NOT use the Charging Cradle for recharging if the power cord or plug is damaged, the Charging Cradle is not working properly, or if the Charging Cradle has been dropped on the ground or into water.
- 8. The Handle and Charging Cradle have no serviceable parts. Never attempt to open the Handle for any reason. If the Charging Cradle cord is damaged, it must be unplugged and replaced. Contact customer service at 772.343.0222 or email us at customerservice@michaeltoddtrueorganics. com for instructions on how to obtain a replacement.

9. Use soniclear with the supplied power adapter only.

#### IMPORTANT CAUTIONS.

- SOniclear is not a medical device and is not intended to treat medical conditions. If you are under a doctor's care for any skin condition, if you think you may have a skin condition or if you have very sensitive skin, consult your physician before using soniclear.
- The built-in antimicrobial product protection in SOniclear is neither a
  substitute for good hygienic practices nor intended to protect the user from
  disease causing microorganisms. Clean the Brush Heads with warm soapy
  water before and after each use and do not share Brush Heads for sanitary
  reasons.
- 3. soniclear uses magnets.
- 4. If you experience any pain or discomfort from using SONIClear, discontinue use and consult a physician.
- 5. To avoid risk of injury, we **DO NOT** recommend using **soniclear** to remove eye makeup.

# soniclear antimicrobial sonic cleansing system



- A. Handle
- B. Brush Head
- C. On/Off Button
- D. Speed Button

- E. Speed Indicator
- F. Charge Indicator
- G. Non Slip Grips
- H. Charging Cradle



ATTACHMENTS SONICLEAR comes with 2 Brush Heads; a standard Brush Head for facial cleansing and an extra-large Brush Head for body cleansing.

ANTIMICROBIAL PROTECTION soniclear Brush Heads have built in LIFE antimicrobial product protection ~a SONiClear exclusive. Safe, effective and long lasting, the antimicrobial protection will not wash out or wear off for the normal life of the Brush Heads so the brushes stay cleaner, fresher for longer. Traditional face cleansing systems don't provide this protection.

WATERPROOF. soniclear is waterproof for use in the bath or shower.

NON-SLIP COMFORT GRIPS. soniclear features new soft hand grips for increased comfort and to prevent slipping in the users hand.

SIX SPEED OPTIONS. soniclear has more speeds: 3 facial brush and 3 body brush, a total of 6 for the speed just right for you. And, SONIClear recognizes which Brush Head is attached automatically adjusting the speed options based on the Brush Head used.

CLEANSING TIMER. For even and thorough cleansing, soniclear features a built in automatic timer that beeps to indicate it is time to move to another cleansing area.

CORDLESS, soniclear is cordless and can provide up to 35 minutes of continuous use between charges.

# LIFE® ANTIMICROBIAL PRODUCT PROTECTION

Protection Against Stain and Odor Causing Bacteria







Cleaner skin begins with a cleaner brush... Skin cells and moisture remaining on the Brush Heads between uses can create conditions for bacteria to grow. Fortunately the inventors of SONIClear recognized this. SONIClear Brush Heads are treated during the manufacturing process with proprietary LIFE antimicrobial product protection ~ a SONIClear exclusive ~ to guard against growth of stain and odor causing bacteria. Traditional skin cleansing systems do not provide this protection.

The antimicrobial protection in SONiclear combines silver-based technology registered with the US Environmental Protection Agency and patent-pending natural plant extracts technology. Together these technologies guard against stain and odor causing bacteria on the Brush Heads of your SONiclear. Safe, effective and long lasting, the antimicrobial will not wash out or wear off for the normal life of the Brush Heads so the brushes stay cleaner, fresher for longer!

Antimicrobial product protection is not a substitute for good hygienic practices nor is it intended to protect the user from disease causing microorganisms. We recommend that you clean the Brush Heads with warm soapy water before and after each use and not share Brush Heads for sanitary reasons.

## OPERATING INSTRUCTIONS

- We recommend that you start with one of our MICHAEL TODD true organics cleansers that is optimized for gentle daily use with SONiClear such as Honey and Oat Gentle Deep Pore Cleanser and Peppermint Wake-Up Daily Body Wash. SOniclear may also be used with exfoliating scrubs with soft, rounded particles such as MICHAEL TODD true organics Jojoba Charcoal Facial Polish. We do not recommend use of soniclear with jagged exfoliating particles such as shells.
- Before using SOniclear for the first time, charge the Handle for 24 hours. See 2. CHARGING Instructions.
- If you use makeup, remove eye makeup by hand. Note: to avoid risk of injury, 3. we do not recommend using soniclear to remove eye makeup.
- Attaching/Removing Brush Heads:
  - **DO NOT** try to change the Brush Heads while soniclear is running.
  - To attach a Brush Head to the Handle, hold the Brush Head by the outer edge, then push down and twist clockwise until the Brush Head snaps into place. Listen for a tight snap indicating the Brush Head is locked in place.
  - To remove the Brush Head, grip the Brush Head firmly, push down and twist counter-clockwise then pull the Brush Head away from the Handle.
  - Tip: Use the Brush Head cap to easily remove and attach the Brush Head with a simple twist.

- 5. Starting Soniclear: Press the ON/OFF Button to turn on.
- 6. Selecting Speeds: SONiClear provides a choice of 6 speeds: 3 facial brush speeds and 3 body brush speeds. The handle recognizes which Brush Head (face or body) is attached and automatically adjusts the speed choices based on the Brush Head used. Tip: Should the Handle on occasion fail to "recognize" the Brush Head and change speed, shut the unit off and turn it back on which should correct the problem.

To change speeds, press the Speed Button while SOniClear is on. Speed is indicated visually by the two red Speed Indicator lights on the Handle above the Power and Speed Buttons.

Speed	Light		
FACE			
Top speed	Both red lights on		
5th speed	Top red light on		
4th speed	Bottom red light on		
BODY			
3rd speed	Both red light blinking		
2nd speed	Top red light blinking		
Low speed	Bottom red light blinking		

7. Cleansing. To cleanse, wet your skin and the Brush Head with warm water. Apply cleanser to your skin or the Brush Head. Turn SONIClear on and select desired speed. Place the Brush Head flush to the skin and gently move in small circular motions. Note: Do not press hard. The sonic micro-massaging action of the Brush Head will perform the cleansing at up to 300+ oscillation movements per second. Pressing too hard will impede the motion and reduce the effectiveness of the cleansing.

With varying levels of sonic speed, you can customize your soniclear cleansing experience to address your specific skin concerns:

- 4th speed ~ Bottom red light on. This speed is intended for compromised or fragile skin, and is delicate enough for sensitive skin conditions. Use once a day or every other day to condition and improve skin without drying or irritation.
- 5th speed ~ Top red light on. This speed is intended for normal skin types and cleansing six times better than hands alone. Use daily once or twice a day.
- Top speed ~ Both red lights on. Use the Top speed when extra power is needed to loosen and remove dirt and debris.
- With the body Brush Head attached, there is a three minute cleansing cycle with a beep each 60 seconds. After three minutes the unit automatically shuts off. When the Body Brush Head is attached, SOniclear Handle automatically switches to the Body Mode, with a three-minute cycle. Pressing the speed button while in Body Mode toggles between the 3 body speeds from sensitive skin cleansing to extra cleansing power to loosen and remove dirt and debris.

- 8. Cleansing Timer. For even and thorough cleansing, SOniclear features a built in automatic timer that beeps to indicate it is time to move to another cleansing area. With the facial Brush Head attached, there is a one minute cleansing cycle with a beep each 20 seconds. After one minute the unit automatically shuts off.
  - With the body Brush Head attached, there is a three minute cleansing cycle with a beep each 60 seconds. After three minutes the unit automatically shuts off.
- 9. Stopping Soniclear. Soniclear will automatically shut off after each cleansing cycle and can also be stopped at any time by pressing and holding the ON/OFF Button for approximately 1 second. To continue cleansing at the end of a cleansing cycle, simply press the ON/OFF Button to turn the unit on again and select desired speed.
- 10. When finished, rinse with water and dry skin with a clean towel.

## **CHARGING**

- Universal Charging Cradle. Your SOniclear comes with a universal Charging Cradle to hold and recharge the Handle. The universal Charging Cradle is compatible with international and domestic outlets (100-240 Volts AC; 50/60 Hz) with the respective country plug adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.
- 2. To charge SOniclear, plug the power adaptor into a wall outlet and plug the DC jack into the back of the Charging Cradle. Place the Handle into Charging Cradle. The green Charge Indicator lights will light up indicating the unit is charging. The power adapter may become warm in normal operation while charging. Unplug the adapter from the wall and the Charging Cradle when not in use. Do Not unplug the adapter from the wall outlet when it is still connected to the unit as this will cause discharging of the battery.
- 3. First Use. Prior to initially using your SONIClear, it must be fully charged for 24 hours. Allow 8-12 hours for subsequent recharging. A full charge allows up to 35 minutes of continuous use.
- 4. Infrequent Use. The Handle needs to receive a charge occasionally. If you rarely use the Handle, recharge it in the Charging Cradle every 3 months to maintain its charging capability. We recommend that you keep the Handle in the Charging Cradle when not in use.

 Charge Indicator. If the battery is low, the Charge Indicator will flash 10 times immediately after use to alert you to place the Handle in the Charging Cradle for charging.

While the unit is charging, the Charge Indicator will indicate the charge level. Up to 1/3 charged, the first light will flicker. Up to 2/3 charged, the first light will extinguish and the second light will flicker. Up to fully charged, the second light will extinguish and the third light will flicker. When the unit is fully charged, the three Charge Indicator lights will remain lit continuously.

If your soniclear stops working, charge it in the Charging Cradle for a minimum of 5 hours. If the issue is not resolved, please contact Customer Service.

### CARE AND MAINTENANCE

- 1. Handle. The Handle can be cleaned using warm soapy water to remove any dirt or residue buildup. Rinse and dry with a clean cloth.
- 2. Brush Heads. SOniclear Brush Heads are antimicrobial. The Brush Heads stay cleaner, fresher for longer with our exclusive LIFE® antimicrobial product protection built in during the manufacturing process to guard against the growth of stain and odor causing bacteria. Safe, effective and long lasting, this protection will not wash out or wear off for the normal life of the Brush Heads. Traditional face cleansing systems don't provide this protection.

Antimicrobial product protection is not a substitute for good hygienic practices nor is it intended to protect the user from disease causing microorganisms. We recommend that you clean the Brush Heads with warm soapy water before and after each use and not share Brush Heads for sanitary reasons. Each user should have his or her own Brush Head. Using SONiClear to remove makeup may stain the brush bristles, but will not affect performance. If discoloration occurs, clean the Brush Head with warm soapy water. We also recommend replacing the Brush Heads after 6 months of continuous use or more frequently should the bristles show wear and become less effective over time.

 Charging Cradle. DO NOT immerse the Charging Cradle in water. Unplug the Charging Cradle before cleaning it. After unplugging the Charging Cradle, wipe with a soft, damp cloth.

- 4. **DO NOT** clean **SONiclear** or any of its components using a dishwashing machine.
- 5. **DO NOT** use abrasive cleaners or chemicals to clean your SOniclear.
- 6. Storage. When not in use for prolonged periods, store your soniclear in a dry place at a temperature between 32°F and 140°F (0°C to 60°C).
- 7. SOniclear does not require any other regular maintenance. If the unit is not working properly, discontinue use and contact Customer Service at customerservice@michaeltoddtrueorganics.com or call (772) 343-0222.

### LIMITED WARRANTY

Please use this as your reference for any customer service or warranty needs you may have in the future.

30 DAY MONEY BACK GUARANTY. SOniclear comes with a 30-Day Money Back Guarantee to give you the opportunity to obtain a refund if you are not satisfied with your purchase. If for any reason you are not satisfied with your purchase, you may send your SOniclear back within 30 days of purchase for a full refund or exchange if you made your purchase directly through michaeltoddtrueorganics. com, less a \$40 restocking and outbound shipping charge. Contact our Customer Service department at customerservice@michaeltoddtrueorganics.com or call (772) 343-0222 within 30 days of receipt of purchase for instructions on how to safely return your unit. Once we receive it and inspect it for damage and missing parts, we will issue you a full refund. If you made your purchase through another website or retailer, please contact them directly to inquire if they have a return policy on this device.

LIMITED 2 YEAR WARRANTY. This limited warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction. Any claim for breach of this limited warranty must be commenced within 2 years following the original purchase.

For a period of two years from the date of purchase, Michael Todd true organics warrants SOniclear (the "Product") against Covered Defects. If there is a Covered Defect during the warranty period MICHAEL TODD true organics agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of this limited warranty.

The limited warranty begins on the date of purchase and expires 2 years thereafter. In no event is the warranty period tolled or extended - including any period during which the Product (or any parts thereof) is in repair or if the Product is replaced by MICHAEL TODD true organics during the warranty period.

This warranty is limited and applies only to a purchase of the Product in the United States from MICHAEL TODD true organics or an authorized reseller, is valid for the original end user of the Product only and cannot be transferred under any circumstances.

Except as otherwise provided by law, to obtain service under this warranty, return the Product with a Covered Defect to us with your purchase receipt and \$10 for postage and handling. For shipping instructions, contact our Customer Service department at customerservice@michaeltoddtrueorganics.com or call (772) 343-0222.

WHAT IS COVERED? "Covered Defects" means damage, defects or failure resulting from ordinary consumer use under normal home conditions according to the instruction manual included with the Product. Covered Defects does NOT include using the Product with a voltage converter; damage, defects or failure caused by misuse or improper care of the Product; impact or insertion of foreign objects into or on the Product; improper storage; improper or incorrectly performed maintenance or repair of the Product; application of harmful chemicals or abrasives to the Product; failure to follow manufacturer's instructions; normal wear and tear; alteration or overuse of the Product; as well as any professional or commercial use of the Product.

WARRANTY LIMITATIONS. THIS LIMITED WARRANTY IS EXCLUSIVE OF ALL OTHER WARRANTIES, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED, THERE ARE NO IMPLIED WARRANTIES CREATED BY THE MANUFACTURE, SALE OR USE OF THE PRODUCT.

IN NO EVENT SHALL MICHAEL TODD TRUE ORGANICS BE LIABLE FOR ANY SPECIAL. INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR INDIRECT DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT PRODUCT LIABILITY, TORT OR ANY OTHER LEGAL THEORY.

THESE WARRANTY TERMS. CONDITIONS AND LIMITATIONS ALLOCATE THE RISKS OF PRODUCT FAILURE BETWEEN MICHAEL TODD TRUE ORGANICS AND YOU. THE END LISER THIS ALLOCATION IS RECOGNIZED BY BOTH PARTIES AND IS REFLECTED IN THE PRICE OF THE PRODUCT, BY USING SONICLEAR YOU ACKNOWLEDGE THAT YOU HAVE READ THESE TERMS, CONDITIONS AND LIMITATIONS, UNDERSTAND THEM AND ARE BOUND BY THEM.

SOME STATES DO NOT ALLOW LIMITS ON WARRANTIES. OR ON REMEDIES FOR BREACH IN CERTAIN TRANSACTIONS. IN SUCH STATES, THE LIMITS CONTAINED HEREIN AND THE DISCLAIMER OR EXCEPTIONS FROM WARRANTY MAY NOT APPLY. IE APPLICABLE LAW DOES NOT PERMIT THE DISCLAIMER OF IMPLIED WARRANTIES. THEN THE DURATION OF SUCH IMPLIED WARRANTIES, ARE EXPRESSLY LIMITED TO THE DURATION OF THE EXPRESS LIMITED WARRANTY SET FORTH HEREIN.

PRODUCT CHANGES. MICHAEL TODD true organics reserves the right to make changes and improvements to its products without incurring any obligation to incorporate such improvements in products previously sold or to notify you of these changes or improvements.

DISPUTES. This limited warranty is governed by the laws of the State of Florida, without regard to principles of conflicts of laws, and applicable United States federal law. The United Nations Convention on Contracts for the International Sale of Goods shall not apply. YOU AGREE TO SUBMIT ANY CLAIM, DISPUTE, OR CONTROVERSY (REGARDLESS OF THE FORM OR TYPE OF ACTION) AGAINST US TO ARBITRATION ADMINISTERED BY THE NATIONAL ARBITRATION FORUM UNDER ITS CODE OF PROCEDURE THEN IN EFFECT (available at http://www.arb-forum.com or via telephone at 1-800-474-2371). Except to the extent otherwise required by law, you agree that the arbitration proceedings will take place exclusively where the principal office of MICHAEL TODD TRUE ORGANICS is located at the time of institution of the proceedings. You may be entitled to file suit under state laws without submitting your claim to arbitration first. Information on arbitration may be obtained from, and a claim may be filed with, the National Arbitration Forum at P.O. Box 50191, Minneapolis, MN 55405-0191 USA.

For more information, updates, reviews frequently asked questions and more visit us on the web at: www.michaeltoddtrueorganics.com

This equipment has been tested and found to comply with Part 18 of the FCC Rules

© 2014 MICHAEL TODD true organics 648 SW Port St Lucie Blvd Port St Lucie, FL 34953

"Cleaner skin begins with a cleaner brush" and soniclear are trademarks of Michael Todd true organics LIFE antimicrobial product protection is a trademark of LIFE Materials Technologies Ltd

All rights reserved.

