



INSTRUCTION MANUAL

Iceman Portable Chiller System

Models Covered AC, AS, WC, and WS
Eurotherm 2000 Controller

2150 Elmwood Avenue - Buffalo, NY 14207
P# 716-876-9951 - F#716-874-8048 - www.mokon.com

Table of Contents

| Sections | Page |
|---|-----------|
| Section 1 – Warnings and Cautions | 1 |
| 1.1 Electrical Warning | 1 |
| 1.2 Evaporator Freeze-Up Caution | 1 |
| 1.3 Cold Weather Caution | 1 |
| 1.4 Overhead Piping Warning | 2 |
| 1.5 Reservoir Tank Overflow Connection | 2 |
| 1.6 Short Circuit Current Rating Caution | 2 |
| 1.7 Non Potable Water | 2 |
| 1.8 Capacity Derate | 2 |
| • Altitude | 2 |
| • Ambient | 2 |
| Section 2 – Installation | 3 |
| 2.1 Unpacking | 3 |
| 2.2 Location | 3 |
| 2.3 Warnings | 4 |
| 2.4 Electrical Connections | 4 |
| 2.5 Fluid Connections | 5 |
| • Process Connections | 5 |
| • Reservoir Tank Overflow Connection | 6 |
| • Condenser Cooling Water Connections (WC, WS only) | 6 |
| 2.6 Filling Reservoir Tank | 6 |
| Section 3 – Operation | 8 |
| 3.1 Initial Starting Procedure | 8 |
| 3.2 Shut Down Procedure | 11 |
| 3.3 Restarting Procedure | 11 |
| Section 4 – Maintenance and Service | 12 |
| 4.1 Preventative Maintenance | 12 |
| • Electrical | 13 |
| • Pump/Motor and Mechanical Connections | 14 |
| • Miscellaneous | 14 |
| 4.2 Pump maintenance | 15 |
| • Exploded View Drawing | 15 |
| • Seal Replacement/Maintenance | 16 |
| 4.3 Glossary of Indicators, Gauges, and Buttons | 22 |

| | |
|---|-----------|
| Section 5 – Eurotherm Controller | 23 |
| 5.1 Operation | 23 |
| • Home List Navigation | 23 |
| • Keys | 24 |
| 5.2 Automatic Tuning | 25 |
| 5.3 Remote Set Point and Retransmission “Scaling” | 25 |
| 5.4 Troubleshooting | 26 |
| | |
| Section 6 – Options | 27 |
| 6.1 “Z” Purge Instructions for Mokon Portable Chiller Systems | 27 |
| | |
| Section 7 – Troubleshooting Guide | 28 |
| | |
| Section 8 – Condensed Parts List | 31 |
| | |
| Section 9 – Model Codes | 32 |
| | |
| Section 10 – Warranty | 34 |
| | |
| End of Life Industrial Waste - Saving our Environment | 35 |

EQUIPMENT START-UP CHECKLIST AIR/WATER COOLED CHILLERS

ELECTRICAL INSPECTION

Yes No

- Verify amp draws and voltage on serial tag match electrical service being supplied.
- Electrical wiring completed and disconnect sized and installed per code and compliance.
- Motor rotation verified, motors and compressors bumped.
- All termination points checked for tightness.
- Verify any remote control wiring is complete.

DISTRIBUTION

- All piping in accordance with specifications listed instruction manual.
- All piping is completed and is per code and compliance.
- Piping pressure tested per contract documents.
- Labeling and insulation per contract documents.

LOCATION AND GOOD STANDARD INSTALLATION PRACTICES

- Confirm safe access to equipment for maintenance, removal and lockout- tag out.
- (Water-cooled) Confirm water supply to condenser, if city water 1.5 gpm/ton, if tower water 3 gpm/ton.
- (Air-cooled) Confirm no short-circuiting of exhaust air into intake of condenser.
- If systems are to be installed side by side where one system will be exhausting hot air on the next unit, they should be spaced apart a minimum of 15 feet for proper & efficient operation.
- Allow a minimum of 4 feet on all sides to allow for proper ventilation of condenser.
- Proper glycol mixture is being used for selected temperature range. See instruction manual for details.

NOTE: Refer to manufacturer's manual for additional data and requirements.

This checklist should be completed prior to commissioning.



2150 Elmwood Avenue - Buffalo, NY 14207
P# 716-876-9951 - F#716-874-8048 - www.mokon.com

MOKCLST7002

Section 1 – Warnings and Cautions

Please read and understand this section before operating the system!

1.1 Electrical Warning



The Mokon portable chiller system, as with all high voltage electrical equipment, should be connected according to all local and national codes. All installation, maintenance, service, repair, adjustment, and operation should be done only by qualified trained electrical personnel who have read and completely understood this instruction manual. To the upper right is a symbol for **ELECTRICAL DANGER**. When it is seen on the following pages of this manual as well as on the system, care should be taken to avoid possible electric shock. All maintenance and service should be performed with the power isolated and locked out except where noted.

1.2 Evaporator Freeze-Up Caution



Protect the evaporator on the Mokon portable chiller system from freeze-up. Evaporator temperatures are 10°F – 15°F (-2°C to -9°C) lower than the coolant temperature shown on the thermostat or the temperature controller. **Standard systems are set to operate between 50°F – 65°F (10°C – 18°C), but are engineered to operate as low as 20°F (-7°C). Unless your system was set to operate below 50°F (10°C) at the time of purchase, do not attempt to operate your Mokon portable chiller system below 50°F (10°C) without first contacting the Mokon customer service department. It will be necessary to derate the capacity of the system, change the default settings, and add glycol to the Mokon portable chiller system.**

Do not use automotive antifreeze in the Mokon portable chiller system due to waxy deposits that will form on the internal components at lower temperatures, reducing efficiency. Using automotive antifreeze will void your warranty!

Only pure ethylene glycol/water mixture should be used. Mokon recommends that a food coloring dye be added to signify that glycol is present in system. The glycol should have a corrosion inhibitor added to reduce the risks of metallic degradation.

Note: The automatic fill option should not be used when system operating temperatures are below 50°F. The glycol in the reservoir tank will become diluted which will lead to system freezing.

1.3 Cold Weather Caution



If the Mokon portable chiller system will be moved from your plant and will be subjected to freezing temperatures, the water in the system must be completely drained and/or sufficient antifreeze (not automotive antifreeze) added to prevent serious water damage from freezing.

1.4 Overhead Piping Warning

When overhead piping is connected to a Mokon portable chiller system equipped with an open reservoir or non pressurized expansion tank there is risk of overflow of the system's reservoir tank upon shutdown, this is due to the back flow of fluid volume from the overhead piping system.

To prevent reservoir tank overflow an overhead piping kit should be installed. This kit is available from Mokon as an option.

1.5 Reservoir Tank Overflow Connection

A reservoir tank overflow connection is supplied on all Mokon portable chiller systems with an automatic fill option. Should the automatic fill option malfunction the overflow connection will protect the system against an overflow condition. This connection is clearly labeled on the system and must be plumbed to a non-pressurized open drain connection.

1.6 Short Circuit Current Rating Caution

Equipment supplied with a safety door disconnect or power cord is design rated for a short circuit current rating (SCCR) of 10,000 amperes RMS if protected with a class "J" fuse.

1.7 Non Potable Water

This system has been designed for use in non-potable water applications only. For applications requiring potable water use please contact Mokon directly to discuss a product offering.

1.8 Capacity Derate

Altitude Correction Factors

| Altitude (ft) | 1,000 | 2,000 | 3,000 | 4,000 | 5,000 | 6,000 |
|---------------|-------|-------|-------|-------|-------|-------|
| Factor | 0.98 | 0.96 | 0.93 | 0.91 | 0.89 | 0.87 |

High Ambient Temperatures

The chiller efficiency will be reduced by up to 5% for every 5° over 90°F ambient.

Section 2 – Installation

2.1 Unpacking

Upon arrival inspection should be done to assure there was no damage during shipping. In addition, all electrical and mechanical connections should be inspected to ensure that they are secure and tight. This includes all electrical terminations, mechanical fitting union bulbs, compression fittings, etc.

Note: Refer to section 4.1 Preventative maintenance.

The **maximum** weights of the Mokon chiller systems when drained of water are:

| | | | |
|--------|------------------|-------|-------------------|
| .5 hp | 300 lbs (137kg) | 10 hp | 860 lbs (391kg) |
| 1 hp | 330 lbs (150kg) | 15 hp | 1650 lbs (749kg) |
| 1.5 hp | 425 lbs (193kg) | 20 hp | 1850 lbs (840kg) |
| 2 hp | 450 lbs (205kg) | 25 hp | 3700 lbs (1679kg) |
| 3 hp | 460 lbs (209 kg) | 30 hp | 3860 lbs (1751kg) |
| 5 hp | 565 lbs (257kg) | 35 hp | 4200 lbs (1906kg) |
| 7.5 hp | 840 lbs (382kg) | 40 hp | 4995 lbs (2266kg) |

Properly rated equipment should be used to move this machinery.

When removing system from pallet, lift from bottom only. Care should be taken to ensure that the system will not tip. After removing from pallet, the system should only be placed on a level surface.

2.2 Location

Mokon systems should be located in an area that provides adequate space for pedestrian and vehicle traffic. If this is not feasible, owner should provide additional safeguards including safety signs.

For optimum system performance, allow adequate space and ventilation around entire system, as well as a means to direct vapors away from work area.

There should be a minimum of four (4) feet of clearance around the entire Mokon system (all sides) for adequate ventilation and operation of the system.

If braking casters are included, they must be in the locked position when system is in the operating position. Prior to moving, unlock the casters.

Customer supplied and installed air vents (mechanical or electrical) should be placed at the highest point in the process for application where the process height is greater than eight (8) feet above Mokon system.

2.3 Warnings

Owner should ensure by adequate supervision that correct safety, installation, maintenance and operating procedures described in this manual, as well as recognized industry practice, are followed by all personnel.

All panels must be in place during normal operation.

The top of the machinery should not be used for storage.

Power sources or energy types referred to in this manual are water, glycol and electricity.

This machinery is not for use in hazardous or explosion proof environments.

Under normal operating conditions, the decibel level of the machinery is 80 db or lower from 5' away from the system. When operating the system, hearing protection is recommended.

Any alteration, additions or modifications to any part of the system must receive prior written approval from Mokon's Engineering or Customer Service Departments.

Refer to serial tag for motor and heater electrical information and schematic drawing number.

2.4 Electrical Connections



Warning: The Mokon portable chiller system, as with all high voltage electrical equipment, should be connected according to all applicable state and local codes. All installation, maintenance, service, repair, adjustment, and operation should be done only by qualified trained electrical personnel who have read and completely understood this instruction manual.

Before operating the Mokon portable chiller system, the grounding wire must be connected. The grounding wire is the green or green and yellow wire connected to the frame of the system.

Connect ground wire to the ground screw (labeled PE) located in the electrical box. Connect power lines L1, L2, L3, to disconnect switch or terminal blocks marked L1, L2, and L3 respectively, inside the electrical box. Overcurrent protection of the supply conductors should be sized according to The National Electrical Code (NEC) and any other applicable state and local codes.

For three phase systems: Connect the power cord leads inside the electrical box L1, L2, and L3 to terminals 2, 4, and 6 respectively on the safety disconnect switch located inside the electrical box. The customer supplied main electrical disconnect should be fused for the proper amp draw (see specifications on the serial tag).

2.4 Electrical Connections (cont.)

For single phase systems: Connect the power cord leads inside the electrical box L1 and L3 to terminals 2 and 6 respectively on the safety disconnect switch located inside the electrical box. The customer supplied main electrical disconnect should be fused for the proper amp draw (see specifications on the serial tag).

Note: For systems without an optional power cord, there is an entry hole in the electrical box for the customer-supplied power cord. Depending on the size of your power cord it may be necessary to enlarge this hole.

2.5 Fluid Connections



Following are the fluid connections for the Mokon portable chiller system, both the water-cooled and the air-cooled version. **Connect each port with full size, unrestricted, insulated hose or pipe.** The hose or pipe should be equivalent in diameter to the port and rated for 100 PSI (689 kPa) and 100°F (38°C).

Fluid Connection/Port Sizes

| Water Cooled Tonnage | Connection Size | |
|----------------------|-----------------|-----------|
| | Process | Condenser |
| 2 | 1" | 0.5" |
| 3 | 1" | 0.5" |
| 5 | 1.5" | 0.75" |
| 7.5 | 1.5" | 1.5" |
| 10 | 1.5" | 1.5" |
| 15 | 1.5" | 1.5" |
| 20 | 1.5" | 1.5" |
| 25 | 2" | 2" |
| 30 | 2" | 2" |
| 40 | 3" | 2" |

| Air Cooled Tonnage | Process Connection size |
|--------------------|-------------------------|
| 0.5 | 0.5" |
| 1 | 1" |
| 2 | 1" |
| 3 | 1" |
| 5 | 1.5" |
| 7.5 | 1.5" |
| 10 | 1.5" |
| 15 | 1.5" |
| 20 | 1.5" |
| 25 | 2" |
| 30 | 2" |
| 40 | 3" |

Process Fluid Connections (All Systems)

Note: If the Mokon portable chiller system will feed a pulsating system such as a temperature control system, a bypass valve must be installed to ensure flow.

There are two process fluid connections, "To Process" and "From Process" located on the back of the system.

To Process: Connect this port to the process inlet, through which chilled fluid will enter the process.

From Process: Connect this port to the process outlet, through which fluid will leave the process and return to the chiller. **The fluid returning from the process must have a temperature of lower than 80°F (27°C).**

Note: Mokon recommends that you install a strainer on the "from process" line to prevent contamination from the process to enter the chiller. These strainers are available from the Mokon factory.

2.5 Fluid Connections (cont.)

Reservoir Tank Overflow Connection

A reservoir tank overflow connection is supplied on all systems with an automatic fill option. Should the automatic fill option malfunction the overflow connection will protect the system against an overflow condition. This connection clearly labeled on the system and must be plumbed to a non-pressurized open drain connection.

Condenser Cooling Water Connections (WC, WS Systems Only)

Condenser cooling water may be obtained from city or tower water supplies. The water usage is dependent on the tonnage of the system and temperature of the water. Variation in the cooling water temperature will lead to variation in water usage. If city water is being used, it will need approximately 1.5 gpm (5.7 lpm) per ton of refrigeration. If tower water is being used, it will need approximately 3 gpm (11.3 lpm) per ton of refrigeration. Mokon recommends that you install a strainer on the condenser water supply line to eliminate any unnecessary fouling. The connections for the condenser cooling water are located in the back of the system, labeled "Supply Water" and "Drain Water".

Supply Water: Connect this port to an adequate source of cold, clean supply water. Do not restrict incoming water to the condenser.

Drain Water: Connect this port to drain. Do not restrict outgoing water from the condenser.

2.6 Filling Reservoir Tank

- Isolate and lock out all power sources.
- Remove the top panel of the Mokon portable chiller system.
- Remove the lid to the reservoir tank.
- Fill the reservoir tank to a minimum of 3/4 full of water or water/glycol mixture. Use of glycol **IS REQUIRED FOR OPERATION BELOW 45°F**. The table on page 7 lists the correct glycol/water mixtures for operating at temperatures below 45°F.

Warning: The use of "ultra" pure fluids (de-ionized, de-mineralized, etc.) in the standard Mokon systems is prohibited and will void the systems warranty.

Please contact the Mokon factory for further recommendations.

Warning: Use a pure ethylene glycol/water mixture with a corrosion inhibitor in the Mokon portable chiller system. Do not use automotive antifreeze! Automotive antifreeze will cause damage to the system, voiding your warranty and result in reduced efficiency.

2.6 Filling Reservoir Tank (cont.)

- After the Mokon portable chiller system is operating and all lines to the process and within the chiller are full, maintain a minimum 3/4 full tank level. This will require the addition of more water or water/glycol to the tank after start up. The table below is for reference only.

Water/Glycol Mixture

| Fluid Temperature from System | % Glycol | % Water |
|-------------------------------|----------|---------|
| 44°F to 32°F (7°C to 0°C) | 10 | 90 |
| 31°F to 25°F (-6°C to -4°C) | 15 | 85 |
| 24°F to 20°F (-4°C to -7°C) | 20 | 80 |
| 20°F to 0°F (-7°C to -18°C) | 40 | 60 |
| 0°F to -20°F (-18°C to -29°C) | 50 | 50 |

Note: Evaporator temperatures are 10°F – 12°F (-12°C to -11°C) lower than process fluid temperatures.

NOTE: Standard systems are set to operate between 50°F – 65°F (10°C – 18°C), but are engineered to operate as low as 20°F (-7°C). Unless your system was set to operate below 50°F (10°C) at the time of purchase, do not attempt to operate your Mokon portable chiller system below 50°F (10°C) without first contacting the Mokon customer service department as a low temperature seal assembly will need to be installed to the supply pumpak & various items re-set for low temperature operation. It will be necessary to derate the capacity of the system, change the default settings, and add glycol to the Mokon portable chiller system.

Note: Do not operate your chiller below 50°F (10°C) if system is equipped with an automatic fill option. The glycol will become diluted and your system will freeze.

Section 3 – Operation

The Mokon portable chiller system is a circulating fluid temperature control system, which is capable of providing chilled water or a water/glycol mixture to a process at lower temperatures than available from conventional water supplies. The system is designed for normal operating temperatures of 20°F to 65°F (-7°C to 18°C) unless otherwise noted. The Mokon portable chiller system is a system consisting of a refrigeration loop and water or water/glycol loop.

The refrigerant loop circulates refrigerant through a variety of components, which causes the refrigerant to change phase from a gas to a liquid and then back to a gas. This produces a chilling action on the chilled water loop. The compressor takes the refrigerant from a low pressure, low temperature gas and compresses it to a high pressure, high temperature gas which flows to the condenser. The condenser changes the refrigerant from a gas to a liquid under high pressure. This flows through a filter dryer (to remove any dirt, debris, and moisture) then to a moisture indicator (to indicate any moisture problem) and then to a thermal expansion valve. The thermal expansion valve regulates the flow of high pressure liquid refrigerant into the evaporator, where the refrigerant changes from a high-pressure liquid to a low-pressure gas. The refrigerant absorbs heat from the water or water/glycol mixture in chilled fluid loop on the other side of the evaporator causing a phase change of the refrigerant, from a liquid to a gas. The refrigerant, as a low-pressure gas, returns to the compressor and the evaporator to dissipate it.

The circulating fluid is pumped through the evaporator via a supply pump. As mentioned above, the refrigerant on the refrigerant loop absorbs heat from the water or water/glycol mixture and chills it. The water then flows to the process where it again picks up heat and returns to the evaporator to dissipate it.

Due to the use of high-pressure refrigerant and to ensure proper operation of the system, several safety devices are standard on the Mokon portable chiller system. **Only a qualified refrigeration technician should be allowed to service the system.**

3.1 Initial Starting Procedure

After all connections are made and the reservoir tank is filled as described in section 2.6, the Mokon portable chiller system is ready to be started.

Note: Regardless what type of heat-generating process your Mokon portable chiller system is used on, **it is important that the Mokon portable chiller system is the first piece of equipment started.** If you do not start the Mokon portable chiller system first, too much heat can accumulate and the system will not be able to catch up, appearing to be undersized for the application.

3.1 Initial Starting Procedure (cont.)

- For “initial start-up” it is recommended to turn on the main electrical disconnect **for at least 12 hours before starting the Mokon portable chiller system**. This will preheat the compressor oil and liquid refrigerant helping to protect the compressor.

If the power has been disconnected more than 2 hours and less than 3 where the Mokon disconnect switch is in the “off” position, power to main electrical disconnect is recommended **for at least 4 hours before starting the Mokon portable chiller system**. This applies if the ambient air temperature is above 60°F (15.5°C), and the system is located indoors. If the system is not located indoors or the ambient air temperature is lower than 60°F (15.5°C), refer to the initial start-up instructions.

If power disconnection to the compressor is longer than 3 hours refer back to initial start-up instructions above.

Ideally, it is recommended that power be applied to the system continuously except for service purposes.

It is recommended that the crankcase heater should be checked for proper operation on a regular basis.

Warning: During normal operation the compressor can get very hot which can cause burns. Do not touch the compressor or any of the refrigeration system piping during operation or if the system has been in operation.

- Remove both side panels for access to, and observation of, the system.
- For water-cooled condensing systems, turn on the water flow to “supply water” connections. (See section 2.5 for fluid connections)
- Check the pump rotation using the following procedure (for 3 phase systems):
 - Turning on the supply pump **momentarily**; press the “start” button (the green light will illuminate) then the “stop” button (the green light will go off).
 - Check the rotation of the supply pump by viewing the motor armature through the louvers on the back of the motor as it slows down. The armature should be turning clockwise from the lead (rear) end.
 - If the rotation is incorrect, deactivate the power supply to the Mokon portable chiller system and switch any two power cord wires (L1, L2, L3) on the inlet of the disconnect switch.
- Restart the supply pump by pressing the “start” button (the green light will illuminate). The supply pump should provide 35 - 45 PSIG (241 - 310 kPa) of pressure to the process. Allow the fluid to circulate for a few minutes to eliminate air pockets from the lines. This will decrease the possibility of cavitations.

3.1 Initial Starting Procedure (cont.)

- Turn on the compressor by pressing the “start” button (the green light will illuminate).
 - For systems equipped with a scroll compressor: Check the rotation of the compressor using the following procedure.
 - Observe the high/low refrigeration gauges.
 - Turn on the compressor by pressing the “start” button (the green light will illuminate).
 - The high/low refrigeration gauges should rise/fall to proper levels (refer to the last step)

Note: Phasing of the compressor is verified at the Mokon factory and should not be tampered with in anyway. If compressor phase verification is required contact the Mokon customer service department for instructions. Failure to do so will void your system’s warranty.

Warning: Do not run the scroll compressor in reverse direction.

- Check the refrigerant pressure for the proper reading. The high-pressure reading is 200 - 300 PSI (1379 - 2068 k Pa) for R-22/R-407C or 110 - 230 PSI (758 - 1586 k Pa) for R-134A dependent on load. The normal low-pressure readings are listed below in the table. If the pressures are other than these, **CONSULT THE MOKON FACTORY.**

Normal Low Pressure Gauge Readings

| Chilled Fluid Temperature | Nominal Low Pressure Gauge Reading | |
|---------------------------|------------------------------------|------------------|
| | R-22/R-407C | R-134A |
| 60°F (16°C) | 80 PSIG (552kPa) | 45 PSIG (310kPa) |
| 50°F (10°C) | 65 PSIG (448kPa) | 35 PSIG (241kPa) |
| 45°F (7°C) | 60 PSIG (414kPa) | 30 PSIG (207kPa) |
| 40°F (4°C) | 55 PSIG (379kPa) | 25 PSIG (172kPa) |
| 30°F (-1°C) | 30 PSIG (207kPa) | 18 PSIG (124kPa) |
| 20°F (-7°C) | 30 PSIG (207kPa) | 11 PSIG (76kPa) |

- Set the controller or thermostat to the desired temperature. See section 5 for complete controller directions for systems, which have a controller.

3.2 Shut Down Procedure

Note: The Mokon portable chiller system should be the last piece of equipment shut off to protect the system from overheating.

- Turn off the compressor by pressing the “stop” button (the green light will go off).
- Turn off the supply pump by pressing the “stop” button (the green light will go off).
- The main electrical power to the Mokon portable chiller system should remain connected.

Note: When the power is turned off to the system, the compressor crank case heater is also turned off which will hamper the system’s ability to burn off liquid in the compressor which will result in damage to the compressor.

- The main electrical power and the supply water (for water-cooled systems) to the Mokon portable chiller system may be turned off if the system is being relocated or for prolonged shut down.


3.3 Restarting Procedure

- If the water lines and main electrical power have not been disconnected, refer to section 3.1.
- If the water lines and/or the main electrical power have been disconnected, refer to section 2.4 for electrical connections, section 2.5 for fluid connections, and section 3.1 for initial start-up procedure.

Section 4 – Maintenance and Service

Warning: The maintenance and service procedures included in sections 4.1 – 4.2 require that all power sources to the Mokon portable chiller system be shut off, isolated and locked out (exceptions noted). Follow all local and national codes and procedures for working on electrical equipment. Failure to do so could result in injury or death. Only qualified electrical personnel should install, maintain, repair, adjust, and operate Mokon portable chiller systems. The instruction manual furnished with the system should be completely read and understood before system maintenance.

The following hazard warning symbols will be used to denote a specific hazard associated with a procedure.

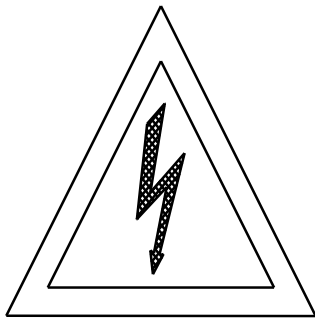

Electrical Danger



High Temperature
Surface May Be Hot



High Voltage &
Hot Surface

4.1 Preventative Maintenance

Mokon portable chiller systems are designed for a long, trouble free service life under a variety of conditions, with a minimum of maintenance. Performing the following preventative procedures will extend the life of your system. Refer to section 4.1 - 4.2 in the instruction manual for specific adjustment or service procedures. Refer to the condensed parts list included in section 8 of the instruction manual for proper replacement parts if required.

The preventative maintenance section is broken into weekly, monthly, and every three months checks. Associated with each check is a series of corrective procedures that may solve a problem detected in the check. If the corrective procedures do not resolve a problem detected in the check, see the trouble shooting guide in section 7 for a complete list of corrective measures.


4.1 Preventative Maintenance (cont.)

Electrical Preventative Maintenance


| Weekly Checks | Corrective Procedures |
|--|--|
| Check electrical box interior components for any discoloration, or any burn marks | Correct component wiring |
| | Verify voltage and frequency stamped on system matches customer supply voltage and frequency |
| | Correct excessive system load (current draw) |
| Check voltage and current capacities | Verify customer supply voltage is balanced and fluctuations are within 15% of nominal |
| | Verify wire gauge for main power hookup is properly sized |
| | Replace components if needed |
| Slightly tug on each conductor to make sure it makes a solid contact to its attached component. Pay close attention to the green grounding wires. | Tighten with proper tooling |
| Every 3 Months Checks | Corrective Procedures |
| Check that the interior electrical and mechanical components are securely fastened to the back panel, and/or to the sides of the electrical box | Tighten with proper tooling |
| Check that the ratings of overload protection (such as fuses and circuit breakers) adequately protect the line's maximum current carrying capacity | Inspect/replace fuses |
| | Inspect/replace motor starter overloads |

4.1 Preventative Maintenance (cont.)

Pump/Motor and Mechanical Connections Preventative Maintenance

| Weekly Checks | Corrective Procedures |
|---|---|
| Check for foreign materials obstructing airflow in the motor and pump area | Remove all dust, lint, grease or oil with a cloth and/or brush |
| Monthly Checks | Corrective Procedures |
| Check that all bolts and screws are securely tightened | Tighten with proper tooling |
|  Check for plumbing leaks | Repair solder joints Replace necessary parts if leaks persist |
| Check that the motor current draw matches the serial tag rating | Correct motor wiring Verify supply voltage is balanced and fluctuations are within 15% of nominal |
| Visually check all threaded fittings for signs of leakage. Note: If refrigeration oil has visibly leaked from the refrigeration loop plumbing, it must be repaired only by a qualified refrigeration technician. | Tighten with proper tooling Contact Mokon customer service or a qualified refrigeration technician Replace necessary parts if leaks persist |
| Semi Annual Check | Corrective Procedures |
| The system's internal and external hoses and clamps should be inspected | Tighten with proper tooling |
| Check that all threaded fittings within the fluid loop are securely tightened. Note: If refrigeration oil has visibly leaked from the refrigeration loop plumbing, it must be repaired only by a qualified refrigeration technician. | Tighten with proper tooling Contact Mokon customer service or a qualified refrigeration technician Replace necessary parts if leaks persist |

Miscellaneous Preventative Maintenance


| Monthly Checks | Corrective Procedures |
|--|---|
|  Check that all applicable lights, gauges, and indicators are functioning properly (Power On) | Replace necessary parts |
| Check that the "Warning," "High Voltage," "Caution," and lamicaid labeling are adhering to the correct locations | Replace torn, damaged or missing labels |
| Check the condenser coil (air-cooled systems) is free of dirt and debris | Vacuum, blow clean, or chemically clean |

4.2 Pump Maintenance

Exploded View Drawing

| REF NO. | QTY | 3 HP | 1 HP | 1.5 HP | 5 HP | ¾ HP | DESCRIPTION | PART # |
|---------|-----|------|------|--------|------|------|------------------------------|-----------------|
| 1 | 1 | ✓ | ✓ | ✓ | | ✓ | CASE 1.25 x 1 NPT | 018266 |
| | 1 | | | | | | CASE 1.25 X 1 NPT | 018268 |
| | 1 | | | | ✓ | | CASE 1.5 x 1.25 NPT | 018267 |
| 2 | 1 | | | | | ✓ | IMPELLER 4.88", STAINLESS | 018275 |
| | 1 | | ✓ | ✓ | | | IMPELLER 5.25", STAINLESS | 018276 |
| | 1 | ✓ | | | | | IMPELLER 6.3", STAINLESS | 018277 |
| | 1 | | | | ✓ | | IMPELLER 6.3", STAINLESS | 018342 |
| 4 | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | MOTOR 56J | CONSULT FACTORY |
| 11 | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | COVER, STAINLESS | 018269 |
| 24* | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | NUT | 018270 |
| 30* | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | D-WASHER | 018271 |
| 40* | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | FLINGER | 018272 |
| 71 | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | DISC IRON | 018273 |
| 73* | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | GASKET, CASE | 018274 |
| 89* | 1 | ✓ | ✓ | ✓ | ✓ | ✓ | SEAL, 5/8" | IN REPAIR KIT |

*** - DENOTES COMPONENTS INCLUDED IN REPAIR KIT 018246.**

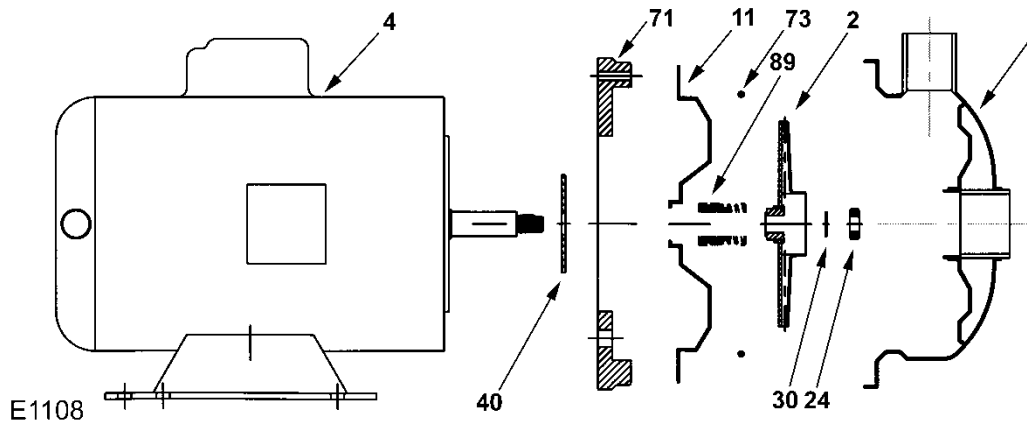

4.2 Pump Maintenance (cont.)

Seal Replacement/Maintenance

Warning: Make certain that the system is disconnected from the power source in compliance with all local and national codes before attempting to service or remove any components. Never run the pump when dry.

Maintenance:

Inspection: Pump should be periodically checked for proper operation. If the system has changed or if the pump is operating noisily or erratically, then the pump should be removed and examined. It should be repaired and parts replaced as necessary.

Cleaning: Remove oil, dust, dirt, water, chemicals from exterior of pump and motor. Blow out interior of open motors with clean compressed air at low pressure. Regularly drain moisture from TEFC motors.

Draining: If the pump is located in an area subject to freezing temperatures, the pump must be drained when not in operation or add sufficient antifreeze.

Seal Replacement:

Disassembly:

- Turn off power.
- Drain the Mokon portable chiller system. Flush if necessary.


Necessary Tools:

- 3/8" drive ratchet
- Pry bars (2)
- Flat blade screwdriver
- 6" socket extension 3/8"
- Gloves
- 1/4" Hex Allen wrench/socket
- 1/2" Socket




4.2 Pump Maintenance (cont.)


Seal Replacement/Maintenance

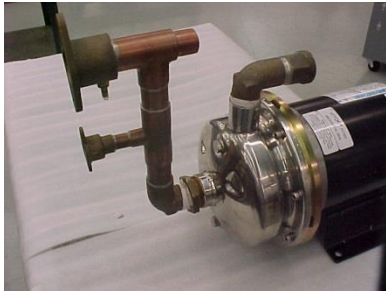

- Remove pump/motor from cabinet.

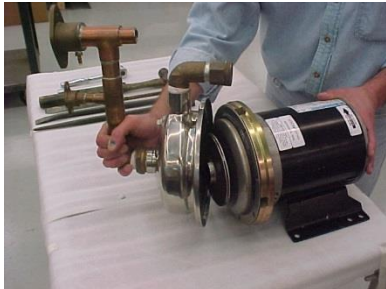


- Remove casing screws and remove case. Inspect o-ring for wear or damage.

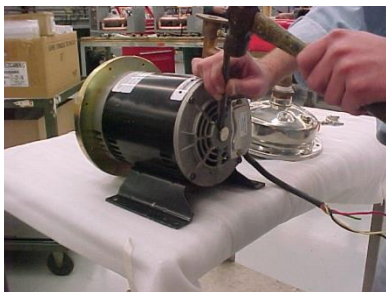

- Remove the cap at the lead end of the motor. A screwdriver slot will be exposed. Use a screwdriver to stop the shaft from turning.

Caution: Do not insert screwdriver between impeller vanes to prevent rotation. This can damage the impeller.

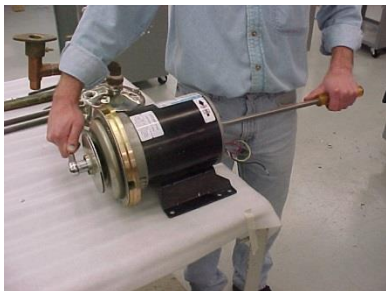

- Remove the impeller lock nut and washers by turning counter clockwise when looking at the front of the pump.

4.2 Pump Maintenance (cont.)

Seal Replacement/Maintenance



- Remove the impeller by turning counter clockwise. Protect the hand by wearing a glove.

Caution: Failure to remove the impeller in a counterclockwise direction may damage the threading on the impeller, the shaft or both.



- Remove the spring to the mechanical seal assembly.



- With two pry bars 180° apart and inserted between the seal housing and the motor plate adapter and carefully separate the two parts. The mechanical seal assembly will come off of the shaft inside the seal housing. It is not necessary to remove the cast iron disc from the motor.



- Using a dowel, push the mechanical seal assembly out of the seal housing from the motor side.

4.2 Pump Maintenance (cont.)


Seal Replacement/Maintenance

Reassembly:

Caution: The mechanical seal is a precision product and should be handled accordingly. Use care when handling lapped running surfaces of the mechanical seal to ensure they remain clean and are free of chips or scratches. Clean gasket and flange faces, seal seat cavity and shaft, in particular, shaft shoulder fitting against impeller.



- Lubricate the seal seat cavity of the cover and the rubber cup or O-ring of stationary seal seat with the lubricating fluid that comes with the mechanical seal or repair kit. Press the stationary seat in seal seat cavity in the cover squarely and evenly using an arbor press (if possible) and the cardboard disc supplied with the seal. Be certain that the lapped face (shiny side) is facing you.

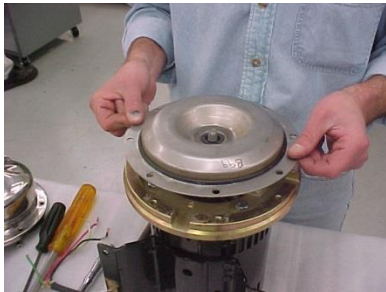

- Place the seal assembly housing (with the seal assembly inserted) onto the shaft and replace the spring. Lubricating fluid can be applied to the motor shaft and the rubber bellows of the seal used to facilitate assembly. **Do not contaminate the mechanical face seals with lubricant. Do not use petroleum based lubricants.**



4.2 Pump Maintenance (cont.)

Seal Replacement/Maintenance



- Thread the impeller onto the shaft by turning clockwise. Protect the hand with a glove. Prevent shaft rotation by using a screwdriver on the shaft end screwdriver slot.



- Replace the impeller lock nut and washer by turning clockwise. Prevent shaft rotation by using a screwdriver on the shaft end screwdriver slot.



- Replace the casing and casing screws and tighten finger tight. Finish tightening the cap screws alternately and evenly to approximately 6 ft. lbs. torque.

Note: It is imperative that screws be tightened alternately and evenly, as this action centers the cover in the casing, assuring proper alignment. Binding of the impeller in the case and adaptor may occur if the cap screws are not tightened as listed above.



4.2 Pump Maintenance (cont.)

Seal Replacement/Maintenance



- Check for free rotation then replace the cap at the rear of motor. Reinstall pump/motor into system.

4.3 Glossary of Indicators, Gauges, and Buttons

| | |
|---|--|
| Supply Pumps Start/Stop Buttons: | Pilot light illuminates green to supply pump (chilled water circuit) to process is activated. |
| Compressor Start/Stop Buttons: | Pilot light illuminates green to indicate refrigeration loop and compressor pump is activated. |
| No Flow Indicating Light: | When illuminated indicates inadequate fluid flow returning to the Iceman system to ensure safe operation. |
| Freezestat Indicating Light: | When illuminated, indicates compressor has shut down due to coolant temperatures below safe operation. |
| Low Refrigerant Pressure Indicating Light: | When illuminated, indicates compressor has shut down due to low refrigerant pressure. |
| High Refrigerant Pressure Indicating Light: | When illuminated, indicates compressor has shut down due to high refrigerant pressure. |
| Supply Pump Pressure Gauge: | Indicates fluid pressure for the "chilled water loop" going to the process. |
| Return Temperature Gauge: | Indicates the temperature of "chilled water loop" returning from the process. |
| High Refrigerant Pressure Gauge: | Indicates the pressure of the refrigerant, as it is being condensed in the condenser. This pressure is critical to the performance of the chiller and is generated by the compressor. The normal pressure is between 200-300 PSIG/ 1379-2068 kPa (R-22/R-407C) or 110-230 PSIG/ 758-1586 kPa (R-134A) (depending on load). |
| Low Refrigerant Pressure Gauge: | Indicates compressor suction pressure and is related to temperature setting and the adequacy of refrigerant charge. |

Section 5 – Eurotherm Controller

(2200 and 2400 series)

Refer to the 4th character in the model code on the serial tag and then the model code in section 10 to determine your controller type.

5.1 Operation

This section of the manual contains all essential information needed to operate the controller. Contact Mokon Customer Service with controller problems as well as warranty and repair issues.

The controller is configured by model number. Inputs, outputs and alarm types are preset. Final setup and configuration are done from the keypad. The controller has three basic modes: the operating mode, the setup mode and the configuration mode.

Home list navigation

To step through list headers press the Page button until the required header is obtained.

To step through parameters within a particular list, press the Scroll button until the required parameter is obtained.

To change the value (or state) of a parameter, press the Up button or the Down button.

Refer to section 6.1.2 for button locations and descriptions.

| Headers | Home List [20.0] | Setpoint [SP] | * Access List [ACCS] |
|------------|--|-----------------------------|----------------------|
| Parameters | OP - % of Output Level | SPI.L - Setpoint Low Limit | * codE |
| | AT - Auto Tune Enable | SPI.H - Setpoint High Limit | * Goto |
| | OFST - P.V. Offset | | * ConF |
| | mV - Millivolt Input | | |
| Alarm | DEV = 10 | | |
| Alarm Hyst | Hy = 2 | | |
| CID | 0 - Customer Defined Identification Number | | |
| L - r | Switches from local to remote using up and down buttons. | | |
| Rmsp | Remote setpoint | | |
| OFST2 | Input 2 calibration offset | | |
| mV2 | Input 2 millivolt signal | | |





***** - A factory lockout prevents access to any further parameters.

5.1 Operation (cont)

Keys

Note: Pictured is the 2404 Eurotherm controller, this also applies to the 2408, 2204 and 2208 series controllers.



| Button or Indicator | Name | Explanation |
|---|---------------|---|
| OP1 | Output 1 | When lit, it indicates that heating output is on. |
| OP2 | Output 2 | When lit, it indicates that cooling output is on. |
|  | Page button | Press to select a new list of parameters. |
|  | Scroll button | Press to select a new parameter in a list. |
|  | Down button | Press to decrease a value in the setpoint. |
|  | Up button | Press to increase a value in the setpoint. |
| Lower Display | Alarm | Flashes when in alarm condition. |

5.2 Automatic tuning

Eurotherm Controllers use a 'one-shot' tuner, which works by switching the output on and off to induce an oscillation in the measured value. From the amplitude and period of the oscillation, it calculates the tuning parameter values.

If the process cannot tolerate full heating or cooling being applied during tuning, then the level of heating or cooling can be restricted by setting the heating and cooling power limits in the Output list. However, the measured value must oscillate to some degree for the tuner to be able to calculate values.

A One-shot Tune can be performed at any time but normally it is performed only once during the initial commissioning of the process. However, if the process under control subsequently becomes unstable (because its characteristics have changed), you can re-tune again for the new conditions.

It is best to start tuning with the process at ambient temperature. This allows the tuner to calculate more accurately the low cutback and high cutback values that restrict the amount of overshoot or undershoot.

How to Tune:

- Set the setpoint to the value at which you will normally operate the process at or 20% of the span of the instruments whichever is greater.

Example: Setpoint maximum value – Setpoint minimum value, 20% of this value

- In the Home List, select [tunE] and set to [on].
- Press the Page and Scroll buttons together to return to the Home display. The display will flash [tunE] to indicate that tuning is in progress.
- The controller will induce an oscillation in the temperature by turning the heating on and then off. The first cycle will not complete until the measured value has reached the required setpoint.
- After two cycles of oscillation the tuning will be completed and the tuner will switch itself off.

5.3 Remote setpoint and retransmission "scaling"

Scaling of the 4-20mA and 0-10V signals for this option are as follows;

4mA = 40°F (4.4°C) and

20mA or 10V = 180°F (82.2°C), 200°F (93.3°C), 250°F (121.1°), 300°F (148.8°C)

Note: Maximum operating temperature value is reflective of the series system purchased, (refer to serial tag for maximum operating temperature located on the Mokon system).

5.4 Troubleshooting

Diagnostic alarms:

| Display Shows | What it means | What to do about it |
|---------------|---|---|
| EEEr | <i>Electrically Erasable:</i> Memory Error: The value of an operator or configuration parameter has been corrupted. | This fault will automatically take you into configuration level. Check all of the configuration parameters before. In operator level, check all of the operator parameters before resuming normal operation. If the fault persists or occurs frequently, contact Mokon Customer Service. |
| S.br | <i>Sensor Break:</i> Input sensor is unreliable or the input signal is out of range. | Check that the sensor is correctly connected. |
| Hw.Er | <i>Hardware error</i> Indication that a module is of the wrong type. | Check that the correct modules are fitted. |
| rmt.F | <i>Remote input failure.</i> The PDSIO® input is open circuit. (PDSIO® Also known as SST – Smart Setpoint Transmission) | Check for open or short circuit wiring on the PDSIO® input. |
| Err1 | <i>Error 1:</i> ROM self-test fail | Return the controller for repair. |
| Err2 | <i>Error 2:</i> RAM self-test fail | Return the controller for repair. |
| Err3 | <i>Error 3:</i> Watchdog fail | Return the controller for repair. |
| Err4 | <i>Error 4: Keyboard failure</i> Stuck button, or a button was pressed during power up. | Switch the power off and then on without touching any of the controller buttons. |
| Err5 | <i>Error 5: Input circuit failure</i> | Return the controller for repair |
| PwrF | <i>Power failure.</i> The line voltage is too low | Check that the supply to the controller is within the rated limits |

Note: Some error messages may not appear, depending on the controller options.

Section 6 – Options

6.1 “Z” Purge Instructions for Mokon Portable Chiller Systems

- A 3 inch diameter threaded pipe connection is provided to receive an air or nitrogen supply, a 90 cfm blower is recommended. This blower shall not be installed or placed in the hazardous environment where hazardous fumes will be drawn from for supply air to the electrical enclosure or internal cabinetry of the Mokon system. The optimum nitrogen or air supply range to the Mokon system should be .15 to .5 inches of water column.

As an alternative to nitrogen, non-hazardous “clean” dry air can be supplied which can also include clean dry compressed shop air.

The discharge pressure of the fan or blower needs to be, at least, 3.0 inches of water column for every 100 equivalent feet of 3” duct. For 4” duct, 1.0 inch of water column per 100 feet is adequate. A 3” exhaust connection is also provided.

Note: Due to temperature considerations, the purge gas must flow (sweep) through the unit to insure adequate ventilation.

- Once the purge gas is introduced, the Dwyer model 1950-0-2F pressure switch will close, energizing a time delay relay. The relay prevents startup of the Mokon system until an adequate sweep inside the unit has taken place. The switch is set at its minimum setting of 0.15 inches of water. A green pilot light will illuminate once the relay has “timed out”, indicating it is safe to operate the unit.
- The magnehelic gauge has a scale of 0 to .5 inches of water, and is clearly visible to allow the operator to monitor the unit.
- If the purge is lost, for any reason, the pressure switch will open, thus activating a customer supplied alarm through a set of auxiliary contacts. The Mokon system will also shut off.
- For systems that are classified and applied properly the applicable Class, Group and Division is listed on the bottom of the systems serial tag.
- Methods: There are typically two methods for the supply of purge gas to systems for “Z” purge applications, they are as follows:

Method # 1 (recommended): Due to temperature considerations, the purge gas must flow (sweep) through the unit to insure adequate ventilation. This method would apply to water, oil, chiller, and full range heater/chiller systems.

Method # 2: (not recommended): Pressurization of the cabinetry when temperature build up is not as much of a concern can be applied. Here the exhaust coupling on the cabinet would be plugged. This method would apply to water-cooled chiller systems or very low heating capacity systems.

Note: If the “Z” purge mechanism or any other system safety devices are modified or disable in any way Mokon considers them to be non-operational and the systems warranty could be void.

Section 7 – Troubleshooting Guide

Process Loop

| Problem | Possible Cause | Corrective Measure |
|--|----------------------------------|--|
| Supply pump will not start | System unplugged / power off | Plug system in / turn power on |
| | Improper power source wiring | Check wiring (electrical schematics) and correct |
| | Blown fuse at power supply | Isolate open fuse and replace |
| | Blown control circuit fuse | Replace and check for ground condition |
| | Low voltage | Measure incoming voltage, if too low correct |
| | Overload on pump/motor starter | Consult factory |
| | Inadequate flow of process fluid | Inspect process and process lines for blockage; if blocked correct |
| | Flow switch | Inspect/replace component |
| Supply pump shuts down during operation | Overload on pump/motor starter | Consult factory |
| | Blown fuse at power supply | Isolate open fuse and replace |
| | Blown control circuit fuse | Replace and check for ground condition |
| Pump seal leaks | Faulty seal | Replace seal (see section 4.2 for seal replacement) |
| | Improperly aligned seal | |
| | Over-pressured seal | |
| Tank overflows or will not fill on systems with autofill option (water makeup valve) | Float switch | Inspect; if stuck, replace |
| | Solenoid diaphragm will not seat | Inspect/replace |

Troubleshooting Guide (cont.)

Refrigeration Loop

Only a qualified refrigeration technician should attempt repairs in the refrigeration loop.

| Problem | Possible Cause | Corrective Measure |
|--|--|---|
| Compressor will not start or shuts down with supply pump running | Process fluid temperature below set point | Change set point |
| | Scroll compressor rotating in the wrong direction | Consult Mokon factory |
| | Low or high refrigerant pressure | Consult a Qualified Refrigeration Technician |
| | Compressor shut down due to thermal protection | Let cool, restart, and verify amp draw |
| | Inadequate flow of process fluid | Inspect process and lines for blockage, clear blockage if necessary |
| | Controller or thermostat (controller optional on 1/2 and 1 ton systems) | Consult factory (DO NOT attempt repairs, this will VOID your warranty!) |
| | Freezestat | Inspect/replace |
| | Blown control circuit fuse | Replace and check for ground condition |
| System shuts down on high refrigerant pressure Water-cooled systems | Low water flow through the condenser | Verify condenser supply water flow rate is as stated in section 2.5 |
| | Water regulating valve | Inspect/clean or replace |
| | Condenser supply water lines too small | Replace lines with insulated hose or pipe of equal diameter as the port (see table on page 5) |
| | Insufficient water pressure drop across condenser due to plugged or fouled condenser tubes | Inspect/clean or replace |
| | Condenser supply water temperature too high (above 85°F / 29°C) | Find colder source of water |
| System shuts down on high refrigerant pressure Air-cooled systems | Dirty condenser coils | Inspect/clean |
| | Fan rotation | Verify fan is rotating (counterclockwise) |
| | Fan not rotating | Blown control fuse |
| | | Fan limit switch – Consult Qualified Refrigeration Technician |
| | High ambient air temperature | Find a cooler source or force more air |
| | Refrigeration loop overcharged | Consult a Qualified Refrigeration Technician |

Troubleshooting Guide (cont.)

| Problem | Possible Cause | Corrective Measure |
|---|--|--|
| System shuts down on low refrigerant pressure | Low refrigerant charge | Consult a Qualified Refrigeration Technician |
| | Low head pressure | |
| | Restriction to refrigerant flow in refrigerant loop | |
| | Ambient air temperature too cold (air-cooled) | Find warmer source of air |
| | Condenser cooling water temperature too low (water-cooled) | Find warmer source of water |
| | Air in process loop | Purge – see start up procedure in section 3.1 |
| | Water/glycol solution foaming | Replace water/glycol mixture |
| System shuts down on freezestat | Attempting to operate below setting (45°F/7°C) | Consult Mokon factory |
| | Freezestat | Inspect/replace |
| Chiller does not keep up with load | Low water flow causing icing in condenser (water cooled) | Consult a Qualified Refrigeration Technician |
| | Hot gas bypass valve stuck open | |
| | Condenser tubes limed over/blocked (water cooled) | |
| | Poor condensing | |
| | Over condensing | |
| | Bad valves in compressor | |
| | Chiller not started correctly (before heat generating process) | See section 3.1 for correct starting procedure |
| | Scroll compressor rotating in the wrong direction | Consult Mokon factory |
| | Chiller undersized for load | Consult Mokon engineering |
| | System does not come down to set point temperature | Lack of refrigerant |
| Dryer clogged | | |
| Too large process load | | |
| Evaporator freezing | | Remove restrictions |
| Restrictive process or process connections | | |
| Thermocouple or RTD | | Inspect/replace component |
| Controller calibration | | See controller section 5 |

Section 8 – Condensed Parts List

½ - 10 Ton Systems:

| Part No | Description |
|---------|--|
| 006256 | Motor starter/24 amp heater contactor 110V coil (pump/motor) |
| 006257 | 40 amp heater contactor 110V coil (compressor) |
| 006366 | 1.0 – 5.0 amp overload |
| 006367 | 3.2 – 16 amp overload |
| 008021 | 0 – 160 PSI pressure gauge, suction, and discharge |
| 018246 | Seal kit for pump/motor assembly |
| 022038 | Start/stop button |
| 023089 | Thermometer |
| 040002 | Thermocouple |

15 and 20 Ton Systems:

| Part No | Description |
|---------|--|
| 006256 | Motor starter/24 amp heater contactor 110V coil (pump/motor) |
| 006257 | 40 amp contactor 110V coil (compressor) |
| 006298 | 50 amp contactor 110V coil (compressor) |
| 006366 | 1.0 – 5.0 amp overload |
| 008021 | 0 – 160 PSI pressure gauge, suction, and discharge |
| 018246 | Seal kit for pump/motor assembly |
| 022038 | Start/stop button |
| 023089 | Thermometer |
| 040002 | Thermocouple |

25, 30 and 40 Ton Systems:

| Part No | Description |
|---------|--|
| 006256 | Motor starter/24 amp heater contactor 110V coil (pump/motor) |
| 006306 | 65 amp contactor (40 Ton x 2) |
| 006308 | 120 amp contactor (25 & 30 Ton) |
| 006367 | 3.2 – 16 amp overload (25 & 30 Ton) |
| 006368 | 5.4 – 27 amp overload (40 Ton) |
| 008021 | 0 – 160 PSI pressure gauge, suction, and discharge |
| 018246 | Seal kit for pump/motor assembly (25 Ton) |
| 018406 | Seal kit for pump/motor assembly (30 & 40 Ton) |
| 022038 | Start/stop button |
| 040026 | Thermocouple |

For additional part numbers refer to the specific section in the instruction manual or consult the Mokon factory (716) 876-9951.

Section 9 – Model Codes

See following pages

Chiller Model Codes

| Model # | | AC4A05H1 |
|---------------------------|--|------------------------|
| Condensator | | See Option Code |
| A | Air-Cooled | |
| W | Water Cooled | |
| Compressor Style | | Tonnage |
| C | Standard | |
| S | Scroll | |
| D | Dual Circuit- <i>(Portable Chillers only)</i> | .5 1/2 Ton |
| Voltage | | 01 1 Ton |
| 1 | 115 Volts / 1 Phase / 60 Hertz | 1H 1.5 Ton |
| 2 | 230 Volts / 3 Phase / 60 Hertz | 02 2 Ton |
| 3 | 380 Volts / 3 Phase / 50 Hertz | 2H 2.5 Ton |
| 4 | 460 Volts / 3 Phase / 60 Hertz | 03 3 Ton |
| 5 | 575 Volts / 3 Phase / 60 Hertz | 05 5 Ton |
| 6 | 415 Volts / 3 Phase / 50 Hertz | 07 7.5 Ton |
| 7 | 208 Volts / 3 Phase / 60 Hertz | 08 8 Ton |
| 9 | Special Voltage, <i>see option code</i> | 10 10 Ton |
| Controller / Freon | | 15 15 Ton |
| 0 | Thermostat / R-22 (HCFC) | 20 20 Ton |
| A | *Eurotherm / R-22 (HCFC) | 30 30 Ton |
| B | Special / R-22 (HCFC) | 40 40 Ton |
| C | **Eurotherm / R-22 (HCFC)-Do Not Use | 50 50 Ton |
| D | PLC / R-22 (Portables) | 60 60 Ton |
| E | ***Eurotherm / R-22 (HCFC) ZR Scroll Compressor | 80 80 Ton |
| F | ***Special / R-22 (HCFC) ZR Scroll Compressor | |
| G | ***Eurotherm / R-134A (no CFC) ZR Scroll Compressor | |
| H | ***Special / R-134A (no CFC) ZR Scroll Compressor | |
| J | Eurotherm / 407C (no CFC) Scroll Compressor | |
| K | Special / 407C (no CFC) Scroll Compressor | |
| 1 | Thermostat / R-134A (no CFC) | |
| 2 | *Eurotherm / R-134A (no CFC) | |
| 3 | Special / R-134A (no CFC) | |
| 4 | Eurotherm Single Circuit / R-22 Centrals | |
| 5 | PLC Single Circuit / R-22 Centrals | |
| 6 | PLC Dual Circuit / R-22 Centrals | |
| 7 | PLC Single Circuit / 407C (No CFC) Centrals | |
| 8 | PLC Dual Circuit / 407C (No CFC) Centrals | |

*Prior to 6/18/01, was Barber Colman

** Prior to 6/18/01, was Eurotherm, not used since Eurotherm has been standardized

***Effective 7/1/05-ZR compressor change For AS & WS Scroll Units only

Effective 8/21/06-UL labeled Electrical subpanel

Section 10 – Warranty

ICEMAN PORTABLE CHILLER WARRANTY

All new ICEMAN CHILLER systems manufactured by MOKON are guaranteed to be free from defective material or workmanship for one (1) year from the date of purchase. All Standard Microprocessor controllers carry a five (5) year warranty, Microprocessors with special features carry a three (3) year warranty and Solid State controllers carry a one (1) year warranty. MOKON'S obligation under the WARRANTY SHALL BE LIMITED, TO THE ORIGINAL CUSTOMER, TO REPAIR OR REPLACE DEFECTIVE PART(S) OF THE TEMPERATURE CONTROL SYSTEM, and UPON CUSTOMER COMPLIANCE WITH THE INSTRUCTIONS CONTAINED HEREIN. Upon discovery of any alleged defect, it is the responsibility of the customer to contact the MOKON Service Department with the complete model number, serial number and the date of purchase. MOKON'S obligation under this warranty is limited to make good, from or at its factory, any parts that are returned to the company (prepaid) and deemed to defective, within the time frame of the warranty. The customer also has the option of forwarding the system to MOKON (Buffalo, NY), prepaid by the customer and with a return authorization from MOKON for inspection and component replacement or repair. Repair or replacement in any manner provided above shall constitute a fulfillment of all liabilities of MOKON concerning the quality of the temperature control system. Freeze-ups of any kind are not covered under this warranty.

No allowances, credits or reimbursements will be made for any replacement or repair made or provided for by the customer unless authorized in advance, in writing, by MOKON.

Note: The use of automotive anti-freeze in a chiller system will void the above warranty!

The warranty set forth above is in lieu of any and all other warranties expressed or implied including warranties of merchantability and fitness for a particular purpose. Mokon shall in no event be liable for any consequential damages or for any breach of warranty in an amount exceeding the original price of the unit.

Mokon's products are not guaranteed against damage caused by corrosion.

End of Life Industrial Waste - Saving our Environment

In the interest of preserving our environment, please reclaim, reuse or dispose of any refrigerant, refrigerant oils, heat transfer fluid, glycol and/or water glycol mixtures contained in these systems in accordance with federal, state and local codes, prior to any equipment disposal. All metal and other materials should be repurposed and recycled where possible.



2150 Elmwood Avenue - Buffalo, NY 14207
P# 716-876-9951 - F#716-874-8048 - www.mokon.com