

LXi DISHWASHER & LXiG GLASSWASHER

— OPERATOR CARD —


STARTUP PROCEDURE

- Make sure the lower and upper wash arms spin freely.
- Make sure that both strainers are clean and seated properly.
- Close the door and press **ON**. The display changes as the cycle progresses.

CYCLE	MODEL LXi or LXiG	
Filling	FILL displays	Sump Water Temperature Displays
If Equipped with Booster Heater While Preheating	FILL flashes	Sump Water Temperature Displays
Fill Cycle Complete	FILL off	Sump Water Temperature Displays

NORMAL OPERATING PROCEDURE

- Presoak heavily soiled items before washing.
- Load rack with trays, dishes, pans, utensils, etc.
- Do not overload rack. Load one rack per cycle.
- Close the door and press **WASH**.

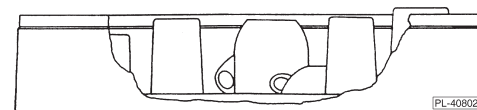

END OF DAY PROCEDURE

- Press **OFF**. Leave door closed for water to drain. After draining, machine turns itself off.
- Remove the upper and lower wash arms. Make sure all holes are open for proper water flow.
- Remove and clean both strainers. Make sure all food particles are removed.
- Reposition both strainers and wash arms. Leave the door ajar to allow the interior to dry.
- Do not leave heavy items in the rack overnight.

REPLACING CHEMICAL SUPPLIES

- When **ADD** and a chemical icon are lit, check the specific chemical container. If the container is empty, refill it. If the container is not empty, be sure the tube is properly inserted. If the condition persists, call your local Hobart service office. The machine will automatically prime during the next run cycle.

DELIME THE MACHINE

- Deliming the machine is required when you see clear signs of lime (white deposits on the interior walls and wash arms), or when the delime indicator is lit per the programmed cycle count. The unit will alert you when deliming is required. Refer to Deliming in the *INSTRUCTIONS* manual.

TROUBLESHOOTING

- Refer to the *INSTRUCTIONS* manual for various symptoms and possible causes.

LXi



PL-56581

RACKING ARRANGEMENTS

LXi Dishwashers



PLATES



SERVING TRAYS



ASSORTED PANS & BOWLS

LXi Dishwashers & LXiG Glasswashers



CUPS



GLASSES



KNIVES, FORKS & SPOONS

HOBART