

QUICK CARE



A little love goes a long way

Quick ongoing care keeps your wall oven working great for years to come!



Be gentle

Clean with warm water and mild soap, or use Frigidaire™ ReadyClean Oven and Microwave Cleaner.



Setting a self-clean cycle is easy.

1. Remove the racks from your wall oven and clean by hand. Make sure you close the oven door.
2. Press SELF CLEAN.
3. Press the numeric keys to choose how long you want self-clean to work.
4. Press OK/START twice.
5. After a few seconds you'll hear the door lock. Be careful around the oven during and after cleaning, things can get hot!



FAQs

Why does my wall oven make noises when I'm cooking?

Temp changes during preheat and cool-down can make parts of the wall oven expand and contract. The controls click as they work to create even cooking temps. Different fans run to heat up the oven or cool down different parts of the oven, even when it's off. These sounds are normal.

This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new wall oven, you may need to test and adjust cooking times and temperatures for recipes. Consult your Use & Care Guide for detailed instructions on how to adjust temperature or call us if you need help!

Why does my oven smoke when I use the broil setting?

Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Watch food to prevent burning.



Find more troubleshooting tips in the back of your Use & Care Guide.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new wall oven.

Look for the PhotoregisterSM icon on your registration card.



WE ARE
here
FOR YOU



Have a question?



Want help?



Need service?

1 (800) 374-4432
frigidaire.com
owner support

