




ASSEMBLY INSTRUCTION

ITEM# : 417-TV72

DESCRIPTION: ENTERTAINMENT TV STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

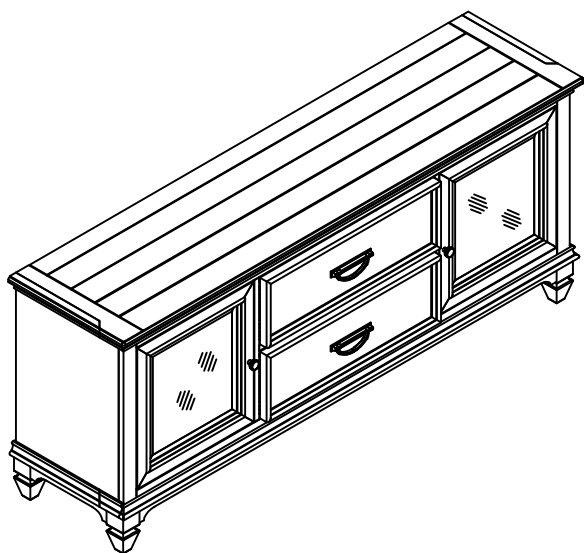


PARTS LIST

NO	DRAWING	DESCRIPTION	Q'TY
1		Entertainment TV stand	1
2		Leg	4
3		Support Leg	1


HARDWARE LIST

NO	DRAWING	DESCRIPTION	Q'TY
A		Bolt Ø5/16"-18*50mm(L)	8
B		Spring Washer Ø5/16"*Ø13mm	8
C		Flat Washer Ø5/16"*Ø19mm	8
D		Allen Key 4mm	1
E		Tipping Restraint	1

STEP 1

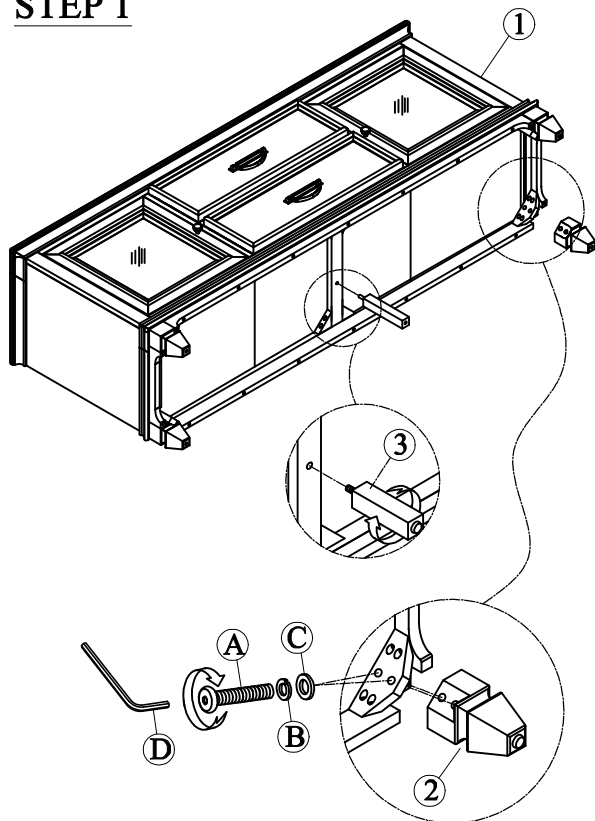

STEP 2

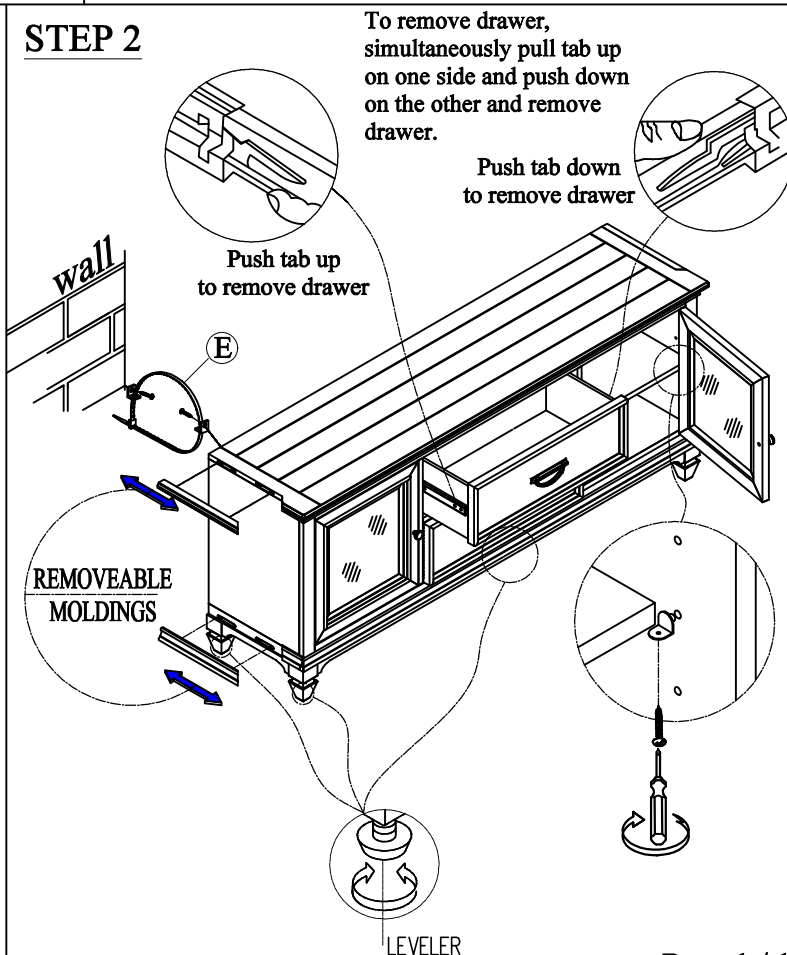

MADE IN VIETNAM