



 
Liberty Furniture
INDUSTRIES, INC

ITEM#: 652- EC00 / TV72 /
EL80T / EL80B /
ER80T / ER80B






ASSEMBLY INSTRUCTION

DESCRIPTION : ENTERTAINMENT HUTCH
ENTERTAINMENT TV STAND
LEFT PIER TOP / LEFT PIER BASE
RIGHT PIER TOP / RIGHT PIER BASE




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List Below.

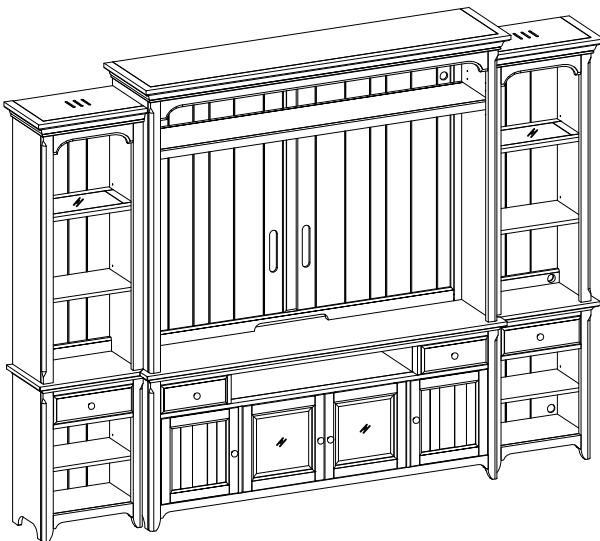

Hutch Parts List

     ① 	② 
LSF Frame : 1pc	RSF Frame : 1pc
③ 	④ 
Top Crown : 1pc	Middle Back Panel : 1pc
⑤ 	⑥ 
LSF Back Panel : 1pc	RSF Back Panel : 1pc
⑦ 	⑧ 
Top Back Rail Support : 1pc	Bottom Back Rail Support : 1pc
⑨ 	⑩ 
Back Panel Joint : 2 pcs	Adjustable Shelf : 1pc

   Parts List

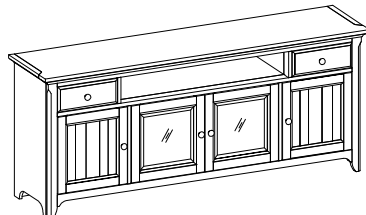 Glass Shelf : 1 pc	 Glass Shelf : 1 pc
Left Pier Top: 1pc	Right Pier Top : 1pc
	
Left Pier Base: 1pc	Right Pier Base : 1pc
 TV Stand : 1pc	

Assembly Hardware List

No.	Description	Hardware	Qty.
Ⓐ	JCBC Screw Ø1/4" x 40mm		6 pcs
Ⓑ	Spring Washer Ø1/4"		6 pcs
Ⓒ	Flat Washer Ø1/4" x 13mm		6 pcs
Ⓓ	Allen Key M4		1 pc
Ⓔ	Wood Cap		6 pcs
Ⓕ	CBS Screw M4 x 20mm		4 pcs
Ⓖ	CBS Screw M3.5 x 12mm		4 pcs
Ⓗ	PH Screw M4 x 20mm		48 pcs
Ⓚ	PH Screw M4 x 32mm		14 pcs
Ⓘ	Shelf Pin		4 pcs
Ⓝ	Tipping Restraint		1 Set



Liberty Furniture
INDUSTRIES, INC

 
ITEM#: 652- EC00 / TV72 /
EL80T / EL80B /
ER80T / ER80B

ASSEMBLY INSTRUCTION

DESCRIPTION : ENTERTAINMENT HUTCH
ENTERTAINMENT TV STAND
LEFT PIER TOP / LEFT PIER BASE
RIGHT PIER TOP / RIGHT PIER BASE


STEP 1

NOTE : This product assembly require
2-3 person to complete.

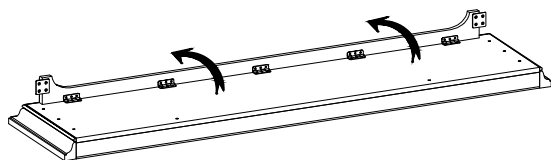


Lift the apron and keep it on 90° when
proceed Step 2 .

 STEP 2

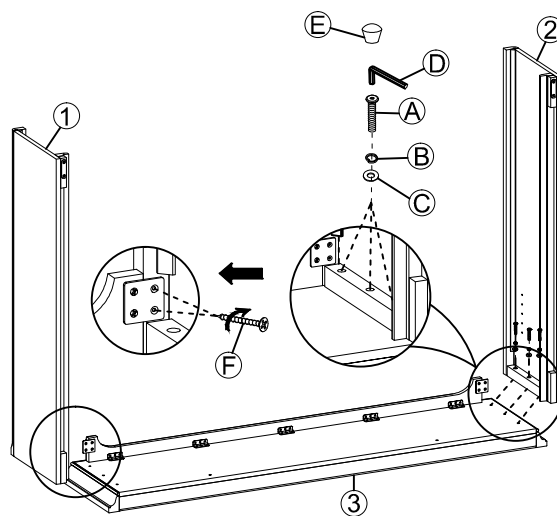

 STEP 3

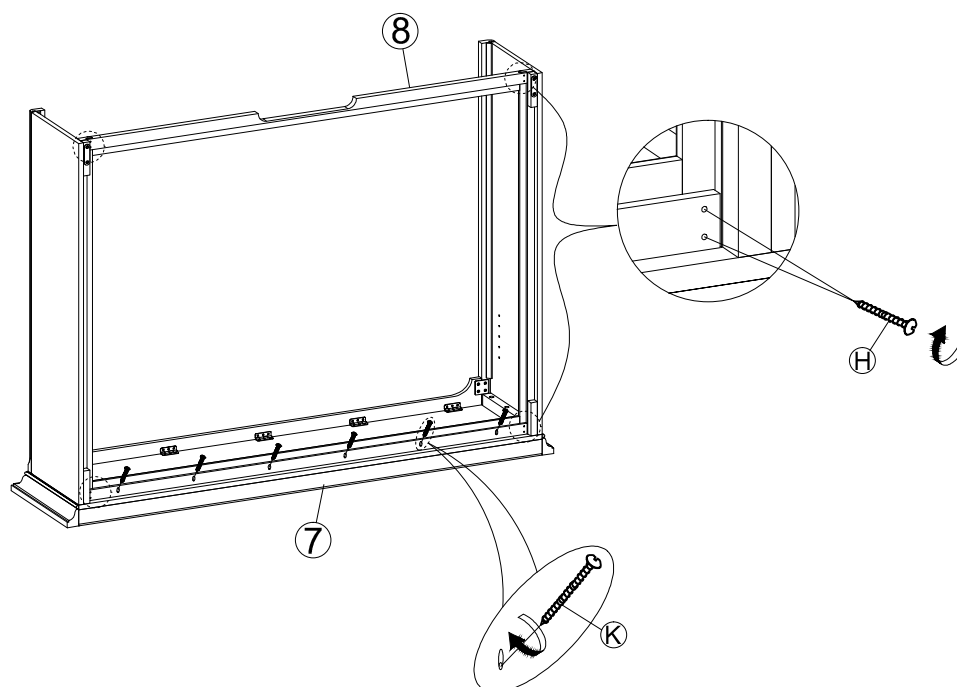




Liberty Furniture
INDUSTRIES, INC

ITEM#: 652- EC00 / TV72 /
EL80T / EL80B /
ER80T / ER80B


ASSEMBLY INSTRUCTION

DESCRIPTION : ENTERTAINMENT HUTCH
ENTERTAINMENT TV STAND
LEFT PIER TOP / LEFT PIER BASE
RIGHT PIER TOP / RIGHT PIER BASE

 
STEP 4

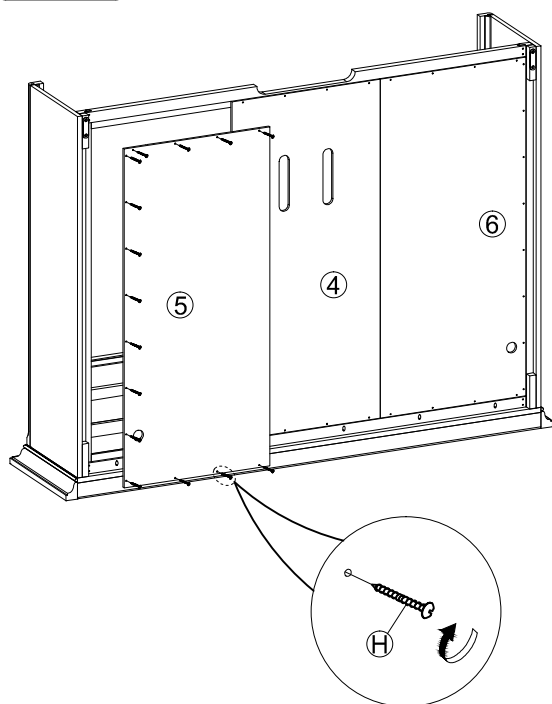

 STEP 5

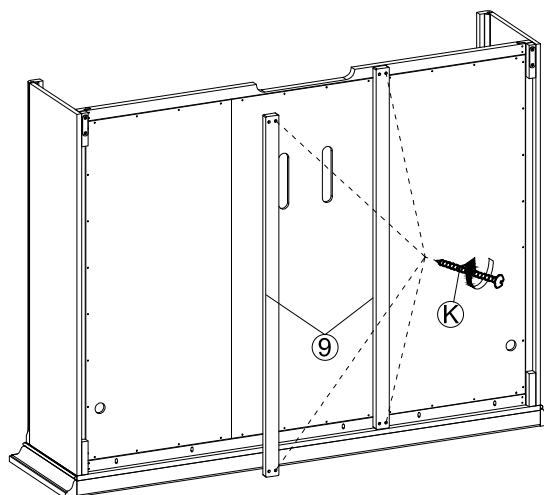

 STEP 6

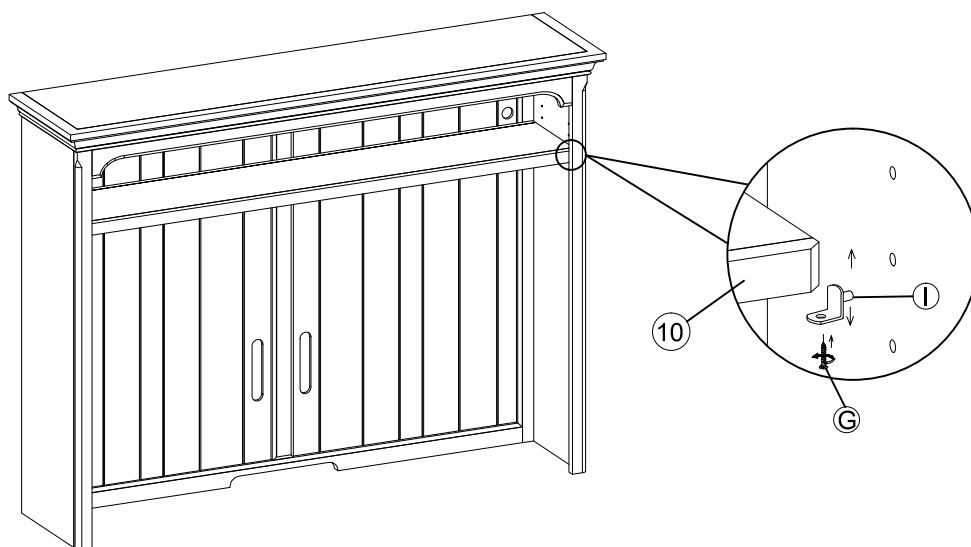




Liberty Furniture
INDUSTRIES, INC

ITEM #: 652- EC00 / TV72 /
EL80T / EL80B /
ER80T / ER80B

ASSEMBLY INSTRUCTION

DESCRIPTION : ENTERTAINMENT HUTCH
ENTERTAINMENT TV STAND
LEFT PIER TOP / LEFT PIER BASE
RIGHT PIER TOP / RIGHT PIER BASE

 STEP 7

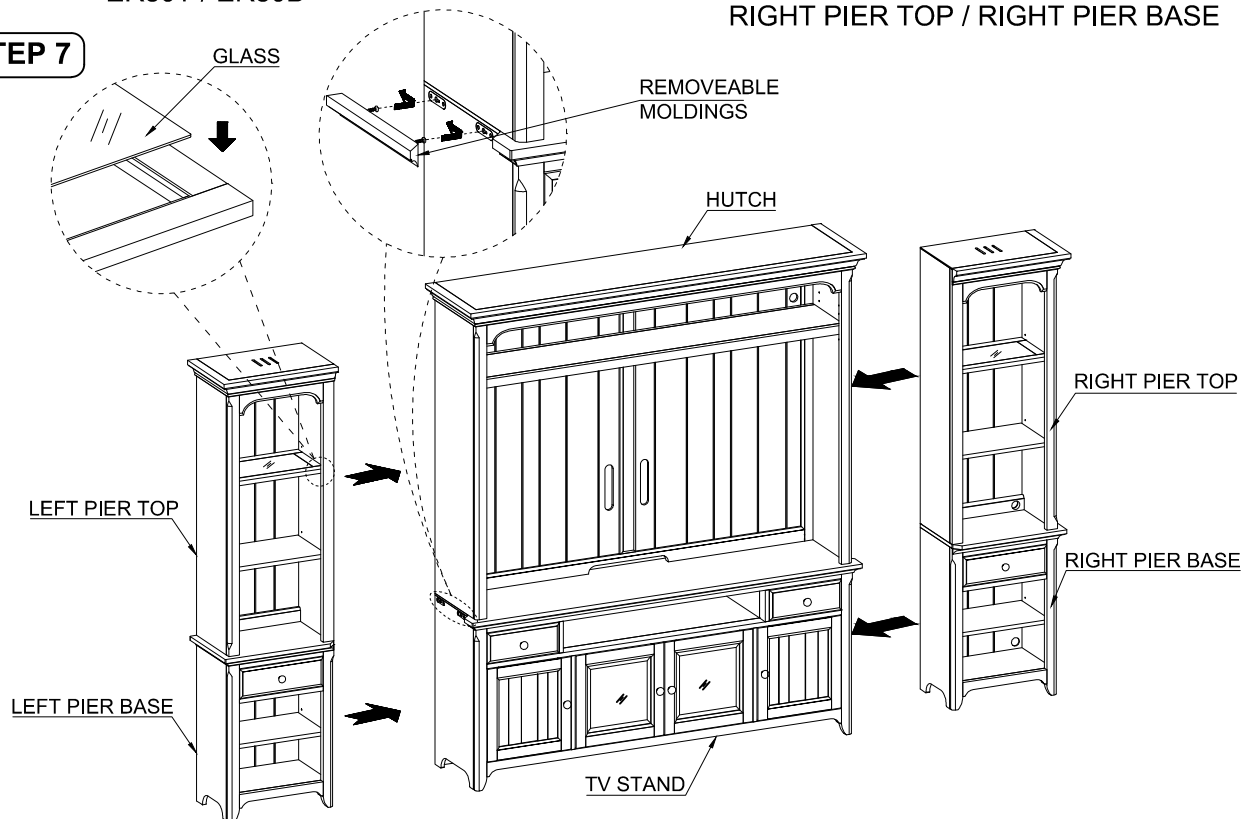

STEP 8

