







Assembly Instruction for  
COUNTER SIDE CHAIR  
DPR300CSCN


- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
  - 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
  - 3. Please do not over tighten screws or bolts.
  - 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR COUNTER SIDE CHAIR			
No.	PART DESC	CODE.	Q'TY
A	COUNTER SIDE CHAIR - SEAT FRAME W/CUSHION		1
B	COUNTER SIDE CHAIR - L & R FRONT LEG	PDPR300CSCNLEG2	2
C	COUNTER SIDE CHAIR - L & R BACK LEG	PDPR300CSCNLEG1	2
D	COUNTER SIDE CHAIR - SIDE STRETCHER	PDPR300CSCNSTR2	2
E	COUNTER SIDE CHAIR - FRONT & BACK STRETCHER	PDPR500CSCSTR1	2


HARDWARE LIST PACKED INSIDE BOX			
No.	HARDWARE DESC	CODE.	Q'TY
1	 ALLEN BOLT (Ø1/4"*2-3/8")	PDPR500CSCHW	8
2	 SPRING WASHER (Ø1/4")		8
3	 FLAT WASHER (Ø1/4")		8
4	 ALLEN KEY (Ø1/8")		1
5	 SCREW (#4*1-1/2")		8

 Only tighten all bolts when all bolts aligned with bolt inserts.


STEP:1

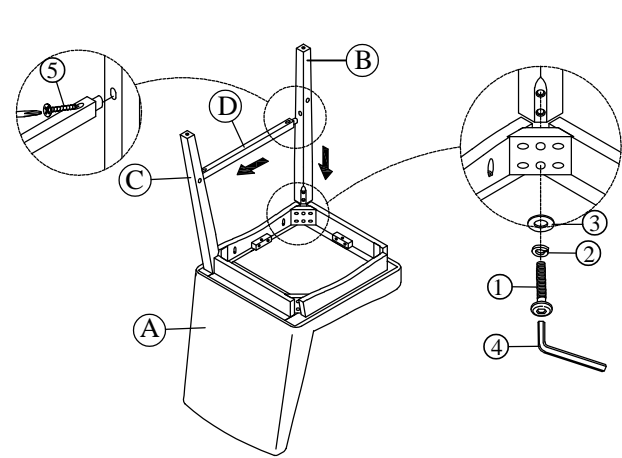

STEP:2

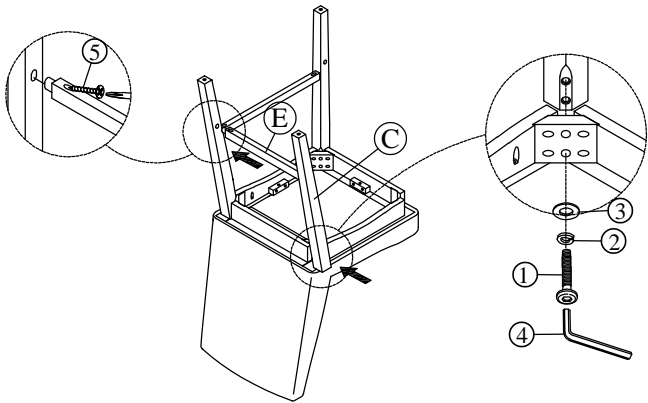

STEP:3

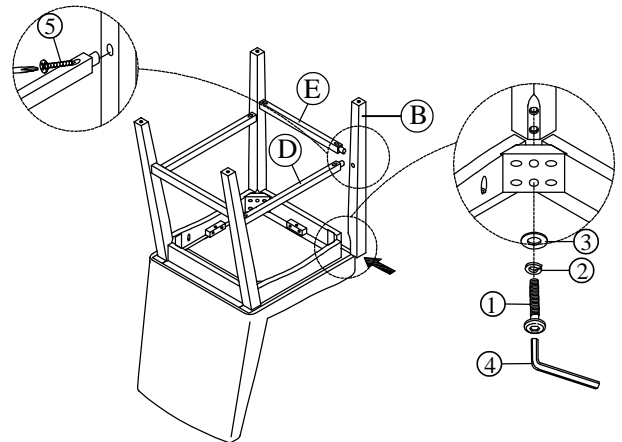

COMPLETED

