

T743C



T743

Type: Family size dryer Line Series™ Classic
Color: White

PROGRAMS

Auto Heavy, Auto Normal, Auto Delicate and
Auto Iron Dry

OPTIONS

Anti-Crease, Low temperature, Delay Start (24 hrs) and
TimeSaver™ cool down

CAPACITY

UltraCare - family size capacity

ENVIRONMENTAL

Energy efficient, Majority of manufacturing components
labelled for recycling and Certified ISO 14001 for
environmental quality

TECHNOLOGY

Line Series™ Classic control with LED display,
SensiDry-sensor, Butterfly™ drying system, Double lint
filter and Cleanable fan

CONSTRUCTION

Stainless Steel drum, Three ball bearing suspension,
Heavy duty life-tested motor, Galvanized steel base and
Rear panel

SIMPLICITY/COMFORT

 
Line Series™ Classic control with LED display, Program
memory, Stacking kit included, Reversible door and Easy
clean condenser

SAFETY

KidSafe – child-safe start option

WARRANTY

Industry leading 2 Plus 1 warranty – up to three years
parts and labor protection



Family Size Dryer - Line Series

T743C Condenser Dryer (Ventless)

Unit Dimensions

	US	METRIC
HEIGHT	33-1/2"–34-1/2"	850–876 mm
WIDTH	23-1/2"	597 mm
DEPTH: T743C	23-7/8" *	606 mm
DEPTH W/DOOR OPEN: T743C	46-1/8"	1172 mm
WEIGHT	104 lbs	47 kg


*Includes control knob.

**Does not include accessory door panel.

Technical Data

Supply voltage	Single-phase 220 V, 60 Hz
Heating element	3000 W

NOTE: When on a separate outlet, use 220 V, 20 Amp single-phase circuit. When an ASKO washer is connected, use 220 V, 30 Amp single-phase circuit.

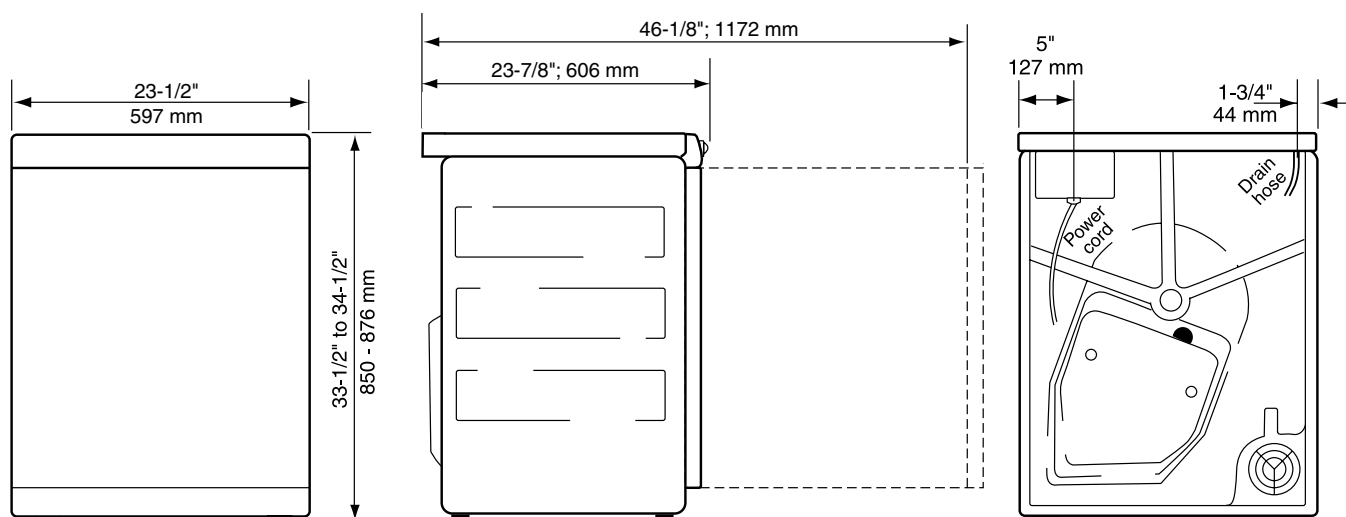

The door hinges on ASKO dryers are shipped left-hinged, but they are reversible. See the *ASKO Dryer Use and Care Guide* for more information.

When placing the dryer next to a wall or cabinet, be sure to leave 1/2" (12 mm) of space between the dryer and the wall or cabinet.

NOTE: Condenser dryers require adequate ventilation for proper operation.

NOTE: A louvered door is recommended for closet installations.

See page 38 for stacked washer/dryer dimensions.

See pages 42–44 for cutout dimensions for closet and under-cabinet installations.


Condensation Drain Requirements

You must install the dryer so the condensed water will continuously flow into a drain or sink. To do this, follow the instructions below:

1. Disconnect the short hose (1) from the blue connection. (It's okay to let the hose hang down.)
2. Connect the rubber hose supplied with the dryer to the blue nipple (2).
3. Run the hose to a drain or sink, as illustrated.

NOTE: Power cord not supplied with unit.

NOTE: The drain hose must not be more than 40" above the floor or the bottom of the unit.

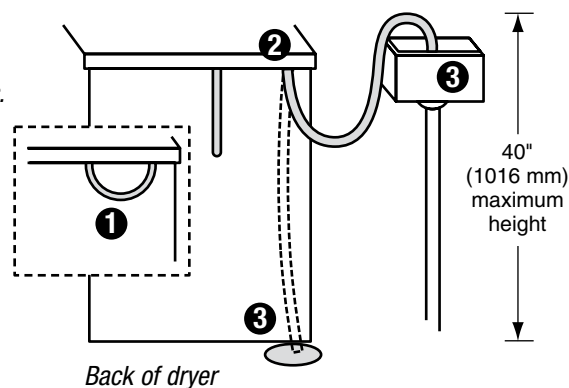

Specifications are subject to change without notice. See installation instructions for additional details.