



## **CR-H 1s•1•3•5 (Model A)**

### Dismantling & Reassembly

---

To service the CR-H 1s•1•3•5, the pumps need to be removed from the system and stood vertical.

Follow the standard CR (I/N) 1s•1•3•5 Dismantling and Reassembly instructions for your CR-H pump.



L-SM-DR-103	05/09
PRINTED IN USA	

**GRUNDFOS Pumps Corporation**  
17100 W. 118th Terrace  
Olathe, Kansas 66062  
Phone: 913.227.3400  
Fax: 913.227.3500

[www.grundfos.com](http://www.grundfos.com)

**GRUNDFOS Canada, Inc.**  
2941 Brighton Road  
Oakville, Ontario L6H 6C9 Canada  
Phone: 905.829.9533  
Fax: 905.829.9512

**Bombas GRUNDFOS de Mexico S.A. de C.V.**  
Boulevard TLC No. 15  
Parque Industrial Stiva Aeropuerto  
Apodaca, N.L. Mexico 66600  
Phone: 52.81.8144.4000  
Fax: 52.81.8144.4010

**GRUNDFOS** 