

## How to Upgrade Firmware of the Camera?


Firmware Display Version: 842\_17052409

New Firmware Filename:


IPC\_3816MPT.842\_17052409.C2.ov4689.4MP.WIFI.PTZ.REOLINK

### **Instructions:**


1. Download the New Firmware Files from the Reolink Website.  
<https://reolink.com/firmware/>
2. Ensure that you have saved the correct Firmware Files to your computer (Please check your Camera Model).
3. Extract the zipped File. It will contain 2 Sub Files (PDF File and a .PAK file).
4. Open the Reolink Client software then select the camera that you want to upgrade.
5. Right click the device and choose Remote Config.

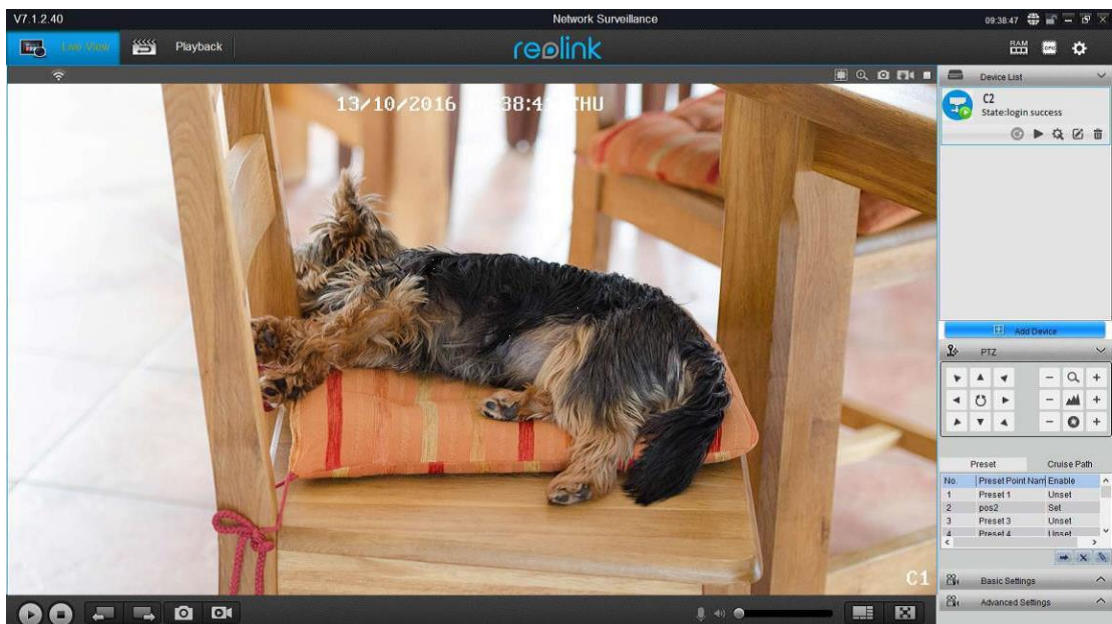


6. In the Device Settings Page, Click 'Maintenance' Tab.

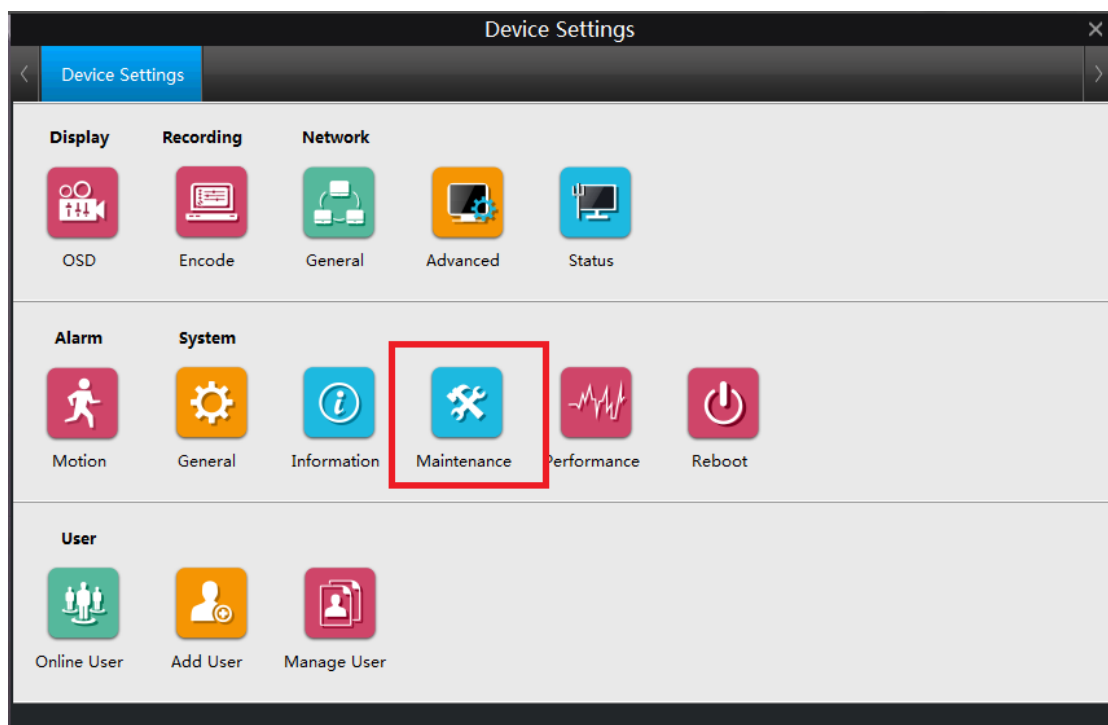


7. On Firmware Upgrade, click Upgrade.

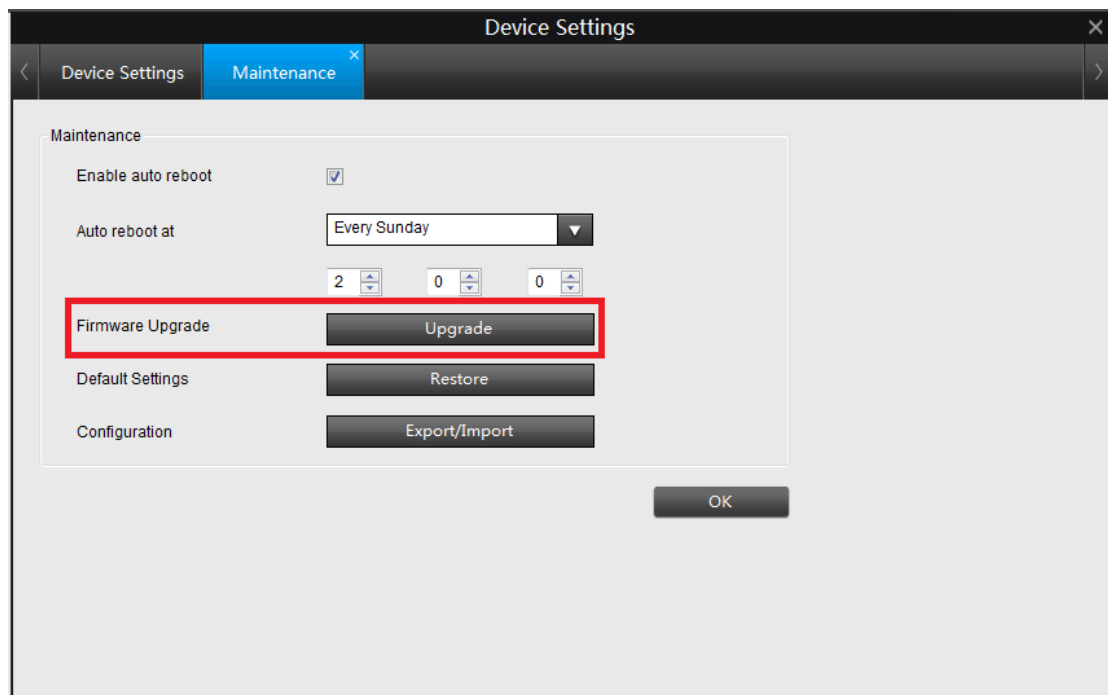

8. Click browse, and select the Firmware File (.PAK File) from your computer.

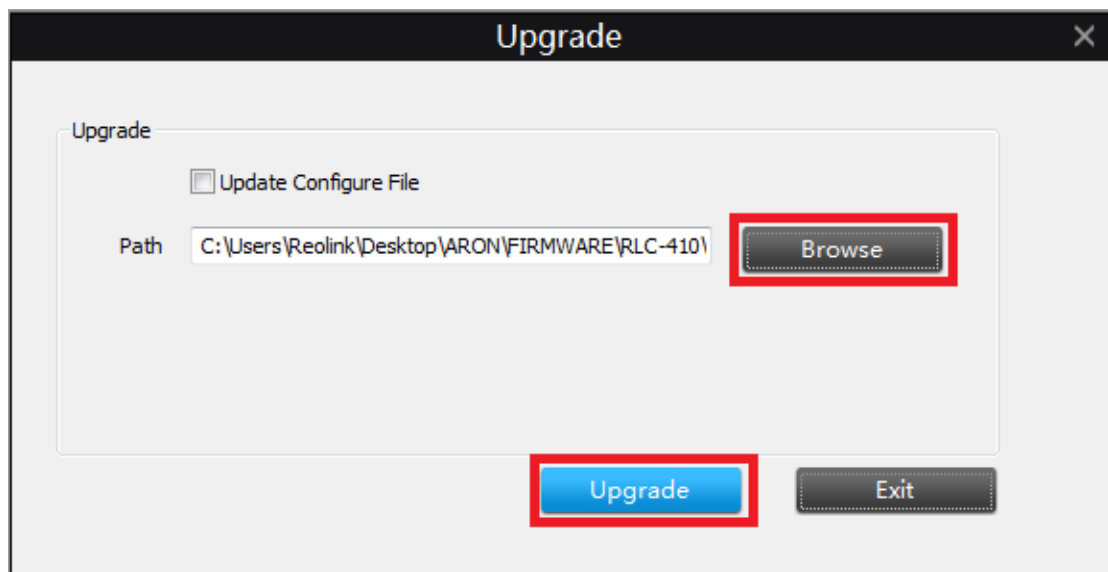


9. Click OK.

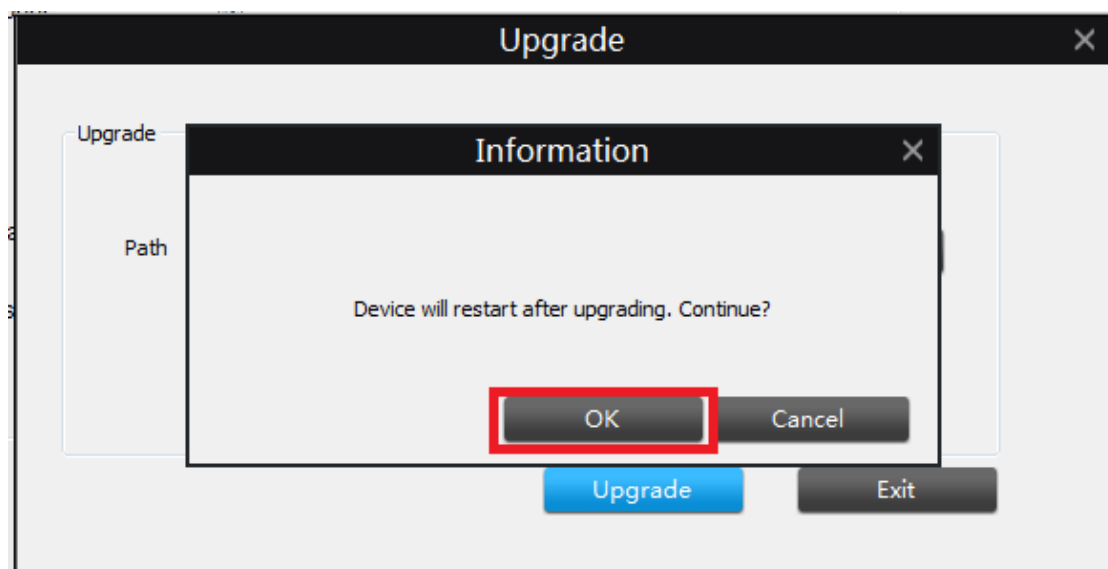

10. Device is now upgrading, please wait until it is completed.



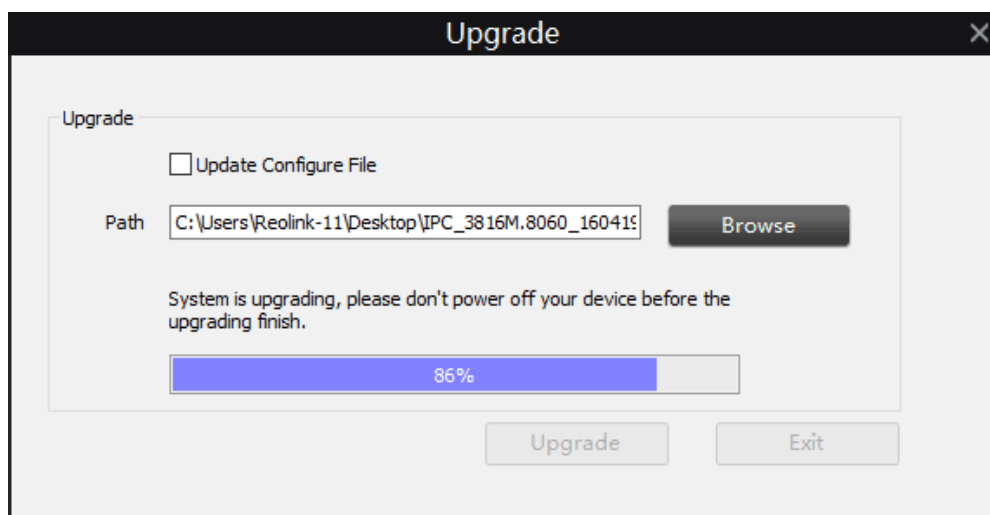

11.

12. Check the New Firmware Version if successful.

Right Click the camera, select Remote Config, Device Settings, Then select Information.

